

Consisting of two additional soft spikes for your Dishlex dishwasher. Now you can prevent glasses from falling over and breaking with our clever soft spikes that help keep your glasses stable.



Product Details

FEATURES

Soft-Touch Material

Clip-on design remain secure throughout wash

32 Flexible Stabilisers keep glassware in place

BENEFITS

Soft-Touch Material

Enjoy greater peace of mind thanks to the soft-touch material used to make Dishlex Soft Spikes. This ensures a firm, yet delicate grip of your glassware.

Clip-on Design

The clip-on design ensures the Soft Spikes can be simply and easily installed. Specifically designed for your Dishlex Dishwasher, they are always secured to the basket throughout the wash cycle.

Flexible Stabilisers

Each soft spike contains 32 flexible stabilisers to help glasses stay in their place. This reduces the chance of breakage for a range of glassware shapes and sizes.

Specifications

PRODUCT PROFILE

Domestic warranty details (yrs)	1
Product Relates to	Dishwasher

DIMENSIONS

Total height (mm)	190
Total width (mm)	85
Total depth (mm)	25

SPECIFICATIONS

Material	Rubber & Plastic
----------	------------------

SHIPPING

Shipping Weight (Kg)	0.1
Pack Dimensions Height (mm)	100
Pack Dimension Width (mm)	70
Pack Dimension Depth (mm)	20

Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products Pty Ltd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640

fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230

fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz