

Full Extension Telescopic Oven Runners, Single Set



Product Details

FEATURES

Easy glide full extension telescopic oven runners

Quick and easy to attach to the side racks of your oven

Allows for multi-shelf cooking, customised to your needs

Check model compatibility

BENEFITS

FULLY EXTENDABLE FOR BETTER RESULTS

They are fully extendable, not only making it safe to load and unload your food, but easier to check the progress of your cooking. Better access means better results in every dish.

SINGLE SHELF ASSEMBLY

Pack consists of 1 x full extension left hand runner and 1 x full extension right hand runner which attach to your oven side racks and hold your oven shelf, for a single shelf assembly. Additional packs can be purchased for multi-shelf cooking.

TASTING, STIRRING AND BASTING MADE EASY

Tasting, stirring, and basting - its a breeze with Electrolux full extension telescopic oven runners. Simply attach the runners to your oven side racks in the desired position and place the oven shelf securely on top.

ACCESS ALL AREAS WITH EASE

Telescopic runners make it easy for you to slide trays in and out of the oven. This provides safe, effortless access, making it easier to baste during cooking or check on how a dish is coming along. The runners also make light work of lifting and removing hot trays or heavy dishes.

Specifications

PRODUCT PROFILE

Domestic warranty details (yrs)	2
---------------------------------	---

Product Relates to	Oven
--------------------	------

SHIPPING

Shipping Weight (Kg)	0.91
----------------------	------

Pack Dimensions Height (mm)	20
-----------------------------	----

Pack Dimension Width (mm)	415
---------------------------	-----

Pack Dimension Depth (mm)	95
---------------------------	----

FEATURES

Accessory Other Features	Quick & easy installation,Stainless steel,Durable construction,Model specific - check for compatibility,Slide-out shelf
--------------------------	---

Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products Pty Ltd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640

fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230

fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz