

**453 natural stainless steel bottom mount refrigerator featuring a TasteLock Easy-glide crisper, 4.5 star energy efficiency and a mark resistant real stainless steel finish.**



## Product Details

### FEATURES

---

#### TasteLock Easy-glide crispers

Energy efficiency  
Enjoy a big performance without a big bill. Our refrigerators are designed be energy efficient protecting the environment and reducing your power costs.

Mark-resistant real stainless steel finish

FlexStor

---

#### FreshPlus Cooling

Keep your ingredients at their fresh flavourful best. When the fridge door is open, the innovative FreshPlus technology immediately begins the recooling process to replace the lost cold air faster when the door closes. This ensures better preservation of farm fresh food and helps minimise waste.

MultiZone Deli compartment  
Designed to isolate odours and seal in freshness, discover the perfect place to store your artisan cheeses, cured meats and deli items safely away from other ingredients.

#### TwinTech Cooling System

Fast Ice function  
When adding a large amount of food to the freezer, simply use the Fast Ice function, which decreases the temperature to -23C for 90 minutes before returning to the pre-set mode.

---

#### Boost mode

After a large grocery shop, use the Boost function when adding food to your fridge, so that the temperature decreases for 90 minutes before returning to the pre-set mode.

Drinks chill  
Use the handy drinks chill feature to remind yourself when to take your drinks out of the freezer.

Crispers on telescopic runners  
Enjoy effortless access to all of your food, even items right at the back of the crisper, with easy-slide runners that fully extend.

Multi-function electronic touch controls  
Ideally located on the inside of the cabinet, you can set the temperature and use functions such as boost mode, fast ice, holiday mode and drinks chill with just a touch of a button.

---

#### Twist ice and serve

With a compact design and two removable ice trays, entertaining is a breeze when you always have ice ready for drinks.

Fridge & freezer door alarm  
An alarm sounds if the door is left open to help keep the interior cool and reduce the risk of spoilage.

Holiday mode  
Going away? Set the fridge to Holiday Mode to help minimise defrosting and save energy.

R600a refrigerant  
Our fridges use R600a, a non-synthetic refrigerant that's more environmentally friendly than the commonly used R134a.

---

**LED Lighting**

With our new LED lighting at both the top and sides of the fridge, the light-filled interior illuminates the content of your fridge so you can find anything you need quickly and easily.

**Frost free**

Save your precious time with a freezer that doesn't ice up and need manual defrosting.

**FreshSense deodoriser**

The in-built Fresh Sense deodoriser freshens the air and absorbs strong odours like seafood and cheese, to keep your fridge smelling clean and fresh.

---

**BENEFITS**

---

**Fresh is best**

Our innovative TasteLock crispers automatically control the humidity levels to keep your fruit and vegetables at their best for longer. While Easy-glide crisper drawers open effortlessly, even when they're full.

**Power saver**

Enjoy better performance without a big bill. Our refrigerators are designed to be energy efficient to help reduce your power costs.

**Stylish and smart**

High quality, mark-resistant real stainless steel, now available in a new chic dark hue or classic natural stainless steel, lends a touch of class to any kitchen. Inside, the generous interior marries innovation and style in equal measure.

**Designed just for you**

Customise your fridge just the way you want it. FlexStor™ makes it simple to arrange the fridge to your needs with adjustable door bins and shelves. Different sized compartments effortlessly accommodate items big or small.

**Keep it cool**

The fridge door is one of the most opened in any household, which is why we came up with FreshPlus technology to help maintain the perfect temperature inside your fridge. It automatically detects when it needs to begin cooling, keeping the temperature down to lock the freshness in.

**Deli delights**

The MultiZone deli compartment lets you indulge in your favourite artisan cheeses and deli delights without leaking odours into other food items.

**Increase the chill**

With a combination of Fast Ice and Boost mode you will always be prepared when entertaining. After a large shop, Boost Mode increases the chill rate of the refrigerator for 90 minutes whilst the Fast Ice function lowers the freezer to -23C for 12 hours, before returning to their pre-set temperatures, to ensure your produce stays fresher longer.

**Effortless access**

It is one of the most hardworking appliances in your house, so it makes sense your fridge takes the effort out of simple tasks. Our smooth telescopic runners ensure you can reach the very back of the crisper and freezer drawers easily.

Two coolers. One great result.

Two independent cooling systems are working together to keep your fridge working at its best, every day. One keeps your freezer chilled, the other controls the refrigerator for stable temperature and humidity.

---

## Specifications

### PRODUCT PROFILE

Domestic warranty details (yrs)	2
Additional domestic warranty for the sealed refrigeration system only (yrs)	3
Refrigerator Type	bottom mount
Exterior door finish	Stainless steel
Handle design	bar handle
Fridge door opening	left or right
Cooling system	frost free
Refrigerant	R600a

### DIMENSIONS

Total height (mm)	1725
Cabinet height (mm)	1705
Total width (mm)	699
Cabinet width (mm)	693
Total depth (mm)	773
Cabinet depth (mm)	641
Depth door open 90degree (mm)	1360
Air space above cabinet (mm)	50
Food compartment capacity (gross in litres)	311
Freezer compartment capacity (gross in litres)	142
Total Gross Capacity (L)	453
Food compartment capacity (net in litres)	297
Total Net Capacity (L)	419

## ENERGY

---

Energy Star Rating AS/NZS 4474.2:2009 4.5

---

Energy consumption AS/NZS 4474.2:2009 (kWhr/yr) 297

---

## FOOD COMPARTMENT

---

### DELI-COMPARTMENT

---

Deli-Compartment Runner system telescopic

---

Full width compartment 1

---

### CRISPERS

---

Crisper lid/shelf glass

---

Crispers Runner system telescopic

---

Full width crisper 1

---

## REFRIGERATOR SYSTEM

---

Controls electronic (with display)

---

Controls location internal

---

Controls type touch

---

Control functions drink chill alarm, freezer temp alarm, holiday mode, eco mode, fast ice function, boost mode

---

Door alarm fridge

---

## SHELVING

---

Shelf material glass

---

## LIGHTING

---

Main light LED

---

Crisper features	humidity controlled,automatic humidity control,fully sealed
------------------	--

---

## OTHER PROPERTIES

---

Other Properties-FOOD COMPARTMENT	Deodoriser,Shelf bottle rack,Egg tray
--------------------------------------	--

---

## DAIRY COMPARTMENT

---

Half width, with lid	1
----------------------	---

---

## BASKET/DRAWER

---

Full width plastic basket	2
---------------------------	---

---

Basket/Drawer runner system	telescopic
--------------------------------	------------

---

## FOOD COMPARTMENT DOOR

---

### BINS

---

Deep bottle bin	1
-----------------	---

---

Shallow bin	1
-------------	---

---

## FREEZER COMPARTMENT

---

### ICE FACILITY

---

Twist ice and serve	2
---------------------	---

---

 
## OTHER PROPERTIES

---


Half width shallow freezer drawer	1
--------------------------------------	---

---


## Dimensions

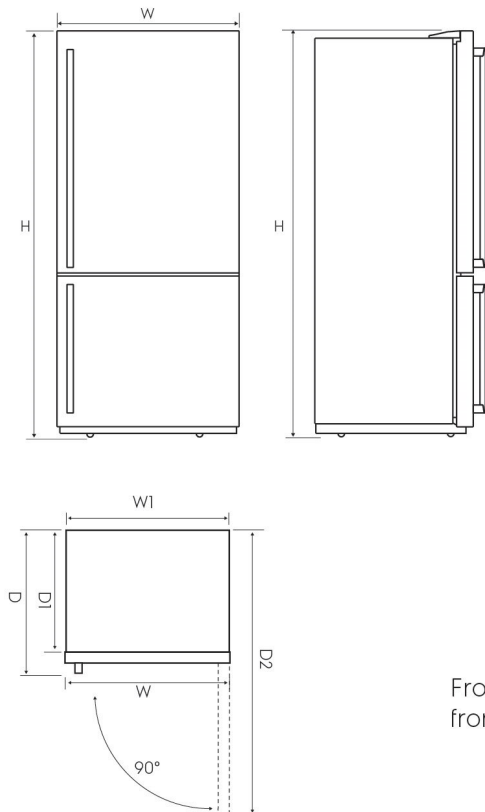


### Minimum Recommended Airspaces

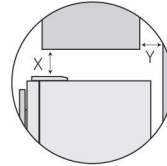 

 If you have a cupboard above the refrigerator with a rear gap of less than 100mm (Y), recommended minimum clearance at the top of the refrigerator increases from 30mm to 70mm (X).

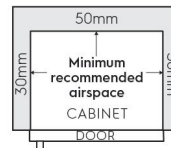

 **Please note:** Doors are designed to sit proud of cabinetry (not flush).

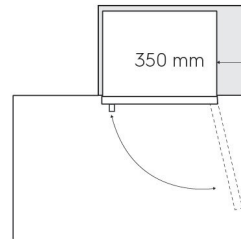

When positioned in a corner area, spacing of at least 400mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

Front face of bench aligned to front corner edge of cabinet.

Bottom Mount Models	Door width (W)	Total depth (D)	Maximum height (H)	Cabinet width (W1)	Cabinet depth (D1)	Depth door open (D2)
EBE5367SB, EBE5307BB, EBE5307SB	796	773	1725	790	641	1457
EBE4507BB, EBE4507SB	699	773	1725	693	641	1360

For connection kit installation instructions go to [electrolux.com.au](http://electrolux.com.au)

**Important!** Please ensure that the access to your kitchen (including doorways, corridors, island benches, etc) allows sufficient clearance to move your fridge into position.

**Please note!** Dimensions to be used as a guide only. All customers MUST refer to the user manual supplied with the product for detailed installation instructions.



## Terms and Conditions

### IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

### PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products Pty Ltd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

### WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

#### ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640

fax: 1800 350 067

email: [customercare@electrolux.com.au](mailto:customercare@electrolux.com.au)

web: [www.electrolux.com.au](http://www.electrolux.com.au)

#### ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230

fax: 09 573 2221

email: [customercare@electrolux.co.nz](mailto:customercare@electrolux.co.nz)

web: [www.electrolux.co.nz](http://www.electrolux.co.nz)