

A ceramic cooktop with stainless steel finish, barbecue grill and deep fryer in one unit with integrated front controls, cast iron grill plate with a deep fry basket and char grill griddle plate.



Product Details

FEATURES

Power indicator lights

Indicator lights positioned on the cooktop to show if the power is on

Residual heat indicator

Indicates which area is too hot to comfortably touch. Remains on if ceramic surface is above 40c

Designer Integrated Unit

This unit can be matched with a range of different hobs, 30 or 60cm gas or electric ceramic including the bbq/deep fryer. Design will blend with any product..

Controls thermostatically regulated

Prevents overheating. Will cycle on & off at selected temperature to ensure perfect char grill and deep fry results.

Built-in drain for emptying deep fryer oil

Convenient for user to regularly change deep fry oils to ensure fresh and healthier results.

Overheat Protection

Individual limiters on each element zone. If required activates around 400°C and will cycle after cooling down if there is a problem that has not been rectified.

Easy clean ceramic hob surface

Ceramic surface is wipe over cleaning. Care however should be taken to lift pots not slide them and to wipe up spills immediately especially sugar based substances

Dish to hold Lava Stones

Lava stones should be washed regularly to ensure efficient operations and perfectly cooked results. Dish can be washed in a dishwasher. Lava stones can be boiled in a large pot with a mild detergent and water mix to remove fats and food residues or they can be placed into the deep fryer basket and put into the dishwasher in place of cutlery basket. Dry thoroughly before returning the tray in the barbecue.

Deep Fry Basket

Basket used to deep fry. Convenient to use and easy to drain foods. Hooks onto unit to drain. Can be cleaned in a dishwasher.

Char Grill Griddle Plate

Cast Iron Char Grill Griddle Plate used to grill food. Should be cleaned regularly. Can be washed in a dishwasher. Re-season with oil before replacing on Barbecue.

Specifications

Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products Pty Ltd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640

fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230

fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz