

EHD8680X ceramic hob with stainless steel finish, front touch controls with digital display.



Product Details

FEATURES

Keylock The keylock locks off the whole cooktop to protect the operator when cleaning, and prevents children inadvertently operating the cooktop.	Residual heat indicator Indicates which area is too hot to comfortably touch. Remains on if ceramic surface is above 40c	Designer Integrated Unit This unit can be matched with a range of different hobs, 30 or 60cm gas or electric ceramic including the bbq/deep fryer. Design will blend with any product..	Booster Function Provides faster than normal heat-up, can be activated or de-activated at anytime. Keeps oil temperature when adding foods, operates for maximum 10 minutes. Booster element is either 800 watt or 500 watt depending on element size.
Pot Detection If the pot is removed, a signal is given to the system switching off the power to the zone and a symbol blinks in the display. As the pot is returned, cooking restarts from the original power level. After 10 min without a pot that element shuts down and must be restarted to continue cooking.	Timer Function Allows each cooker to be programmed individually to switch off at the end of a selected time period. Timer allows for a maximum 99 minutes cooking. Time remaining is showing in the LED Display.	Easy clean ceramic hob surface Ceramic surface is wipe over cleaning. Care however should be taken to lift pots not slide them and to wipe up spills immediately especially sugar based substances	Automatic Switch Off The Auto switch-off is a safety function that switches a zone off automatically if no change of setting has been made during a specified time. Lower settings have longer switch-off periods reflecting their use for slow simmering. The maximum time that element will remain operative on setting 1 is 6 hours, on setting 9 time is reduced to 1.5 hours.
Hot surface indicator hot surface indicator			

Specifications

Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products Pty Ltd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640

fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230

fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz