

524L natural stainless steel French door refirgerator featuring a TasteLock Easy-glide crisper, 4 star energy efficiency, a mark resistant real stainless steel finish and continuous filtered ice and water.





# **Product Details**

# **FEATURES**

TasteLock Easy-glide crispers

Energy efficiency
Enjoy a big performance
without a big bill. Our
refrigerators are designed be
energy efficient protecting
the environment and reducing
your power costs.

Mark resistant real stainless steel

Filtered ice and water

FlexStor

FreshPlus Cooling
Keep your ingredients at their
fresh flavourful best. When
the fridge door is open, the
innovative FreshPlus
technology immediately
begins the recooling process
to replace the lost cold air
faster when the door closes.
This ensures better
preservation of farm fresh
food and helps minimise
waste.

MultiZone Deli compartment Designed to isolate odours and seal in freshness, discover the perfect place to store your artisan cheeses, cured meats and deli items safely away from other ingredients. Fast Ice function
When adding a large amount
of food to the freezer, simply
use the Fast Ice function,
which decreases the
temperature to -23C for 90
minutes before returning to
the pre-set mode.

Boost mode After a large grocery shop, use the Boost function when adding food to your fridge, so that the temperature decreases for 90 minutes before returning to the pre-set mode. Drinks chill
Use the handy drinks chill
feature to remind yourself
when to take your drinks out
of the freezer.

Crispers on telescopic runners
Enjoy effortless access to all of your food, even items right at the back of the crisper, with easy-slide runners that fully extend.

TwinTech Cooling System





Multi-function electronic touch controls

Ideally located on the inside of the cabinet, you can set the temperature and use functions such as boost mode, fast ice, holiday mode and drinks chill with just a touch of a button. Fridge & freezer door alarm An alarm sounds if the door is left open to help keep the interior cool and reduce the risk of spoilage. Holiday mode
Going away? Set the fridge to
Holiday Mode to help
minimise defrosting and save
energy.

R600a refrigerant Our fridges use R600a, a non-synthetic refrigerant thats more environmentally friendly than the commonly used R134a.

# **LED** Lighting

With our new LED lighting at both the top and sides of the fridge, the light-filled interior illuminates the content of your fridge so you can find anything you need quickly and easily.

#### Frost free

Save your precious time with a freezer that doesn't ice up and need manual defrosting.

FreshSense deodoriser
The in-built Fresh Sense
deodoriser freshens the air
and absorbs strong odours
like seafood and cheese, to
keep your fridge smelling
clean and fresh.

#### **BENEFITS**

#### Fresh is best

TasteLock crispers with automatic humidity control ensure your fruit and vegetables are preserved in the optimal environment. Designed with your comfort in mind, the easy glide crispers open effortlessly and provide easy access even when they're full.

#### Power saver

Enjoy better performance without a big bill. Our refrigerators are designed to be energy efficient to help reduce your power costs.

#### Stylish and smart

High quality, mark-resistant real stainless steel, now available in a new chic dark hue or classic natural stainless steel, lends a touch of class to any kitchen. Inside, the generous interior marries innovation and style in equal measure.

#### Thirst-quencher

Like a cool glass of pure, filtered water? Your fridge is there to deliver, any time of the day or night at the touch of a button.

#### Ice on the go

You'll love the efficient, always-ready ice-maker in your new fridge. Efficient and compact, it's ideal for hot summer days or effortless entertaining.

#### Designed just for you

Customise your fridge just the way you want it. FlexStor™ makes it simple to arrange the fridge to your needs with adjustable door bins and shelves. Different sized compartments effortlessly accommodate items big or small.





#### Keep it cool

The fridge door is one of the most opened in any household, which is why we came up with FreshPlus technology to help maintain the perfect temperature inside your fridge. It automatically detects when it needs to begin cooling, keeping the temperature down to lock the freshness in.

#### Deli delights

The MultiZone deli compartment lets you indulge in your favourite artisan cheeses and deli delights without leaking odours into other food items.

#### Increase the chill

With a combination of Fast Ice and Boost mode you will always be prepared when entertaining. After a large shop, Boost Mode increases the chill rate of the refrigerator for 90 minutes whilst the Fast Ice function lowers the freezer to -23C for 12 hours, before returning to their pre-set temperatures, to ensure your produce stays fresher longer.

#### Effortless access

It is one of the most hardworking appliances in your house, so it makes sense your fridge takes the effort out of simple tasks. Our smooth telescopic runners ensure you can reach the very back of the crisper and freezer drawers easily.

Two coolers. One great result.

Two independent cooling systems are working together to keep your fridge working at its best, every day. One keeps your freezer chilled, the other controls the refrigerator for stable temperature and humidity.



# **Specifications**

# PRODUCT PROFILE

2
3
french door
Stainless steel
bar handle
left and right
frost free
R600a
water
Yes

# **DIMENSIONS**

Total height (mm)	1725
Cabinet height (mm)	1705
Total width (mm)	796
Cabinet width (mm)	790
Total depth (mm)	781
Cabinet depth (mm)	641
Depth door open 90degree (mm)	1054
Air space above cabinet (mm)	50
Food compartment capacity (gross in litres)	358
Freezer compartment capacity (gross in litres)	166
Total Gross Capacity (L)	524
Food compartment capacity (net in litres)	336
Total Net Capacity (L)	467



E	NI		D	$\cap$	V
	IV	_	ľ	J	

Energy Star Rating AS/NZS 4
4474.2:2009

Energy consumption 368
AS/NZS 4474.2:2009
(kWhr/yr)

# **REFRIGERATOR SYSTEM**

Controls	electronic (with display)
Controls location	internal
Controls type	touch
Control functions	drink chill alarm,freezer temp alarm,holiday mode,eco mode,fast ice function,boost mode
Door alarm	fridge and freezer

#### FOOD COMPARTMENT

# **DELI-COMPARTMENT**

Deli-Compartment Runner telescopic system

Full width compartment 1

#### **SHELVING**

Shelf material	glass
Oneil material	giass

# **CRISPERS**

Crisper lid/shelf glass

Crispers Runner system telescopic

Full width crisper 1

# **LIGHTING**

Main light	LED



automatic humidity control,fully sealed

# OTHER PROPERTIES

Other Properties-FOOD COMPARTMENT

Deodoriser, Shelf bottle rack

# FOOD COMPARTMENT DOOR

# **BINS**

Deep bottle bin 2

Shallow bin 4

#### DAIRY COMPARTMENT

Full width dairy, one lid

2

#### **EXTERNAL**

Dispenser through door

water

# FREEZER COMPARTMENT

# ICE FACILITY

Ice cube storage bin 1

Automatic ice maker 1

Ice Maker Automatic

# **BASKET/DRAWER**

Full width plastic basket 1

Basket/Drawer runner telescopic system

Full width deep plastic 1 basket

Half-width plastic basket 1

# **LIGHTING**







Main light LED





# **Dimensions**

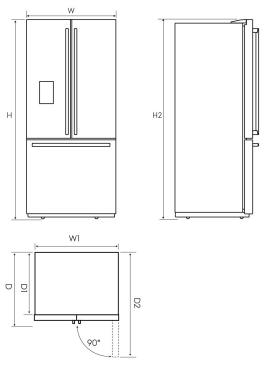

#### Minimum Recommended Airspaces

 

 

 

If you have a cupboard above the refrigerator with a rear gap of less than 100mm (Y), recommended minimum clearance at the top of the refigerator increases from 30mm to 70mm (X).

Please note: If 5mm side clearance, the fridge cabinet must sit at least 5mm proud of kitchen cabinetry for doors to open. A 5mm side clearance requires 50mm rear clearance and 50–90mm clearance above.

When positioned in a corner area, spacing of at least 300mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

Front face of bench aligned to front corner edge of cabinet.

French door with single drawer models:	Door width	Total depth	Maximum	Cabinet	Cabinet depth	Depth door
	(W)	(D)	height (H)	width (W1)	(D1)	open (D2)
EHE5267BB, EHE5267SB	796	781	1725	790	641	1055

For connection kit installation instructions go to electrolux.com.au

Important! Please ensure that the access to your kitchen (including doorways, corridors, island benches, etc) allows sufficient clearance to move your fridge into position.

Please note! Dimensions to be used as a guide only. All customers MUST refer to the user manual supplied with the product for detailed installation instructions.



# **Terms and Conditions**

#### **IMPORTANT**

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

#### PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous productdevelopment, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products PtyLtd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

#### WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

#### **ELECTROLUX HOME PRODUCTS AUSTRALIA**

telephone: 1300 363 640 fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

**ELECTROLUX HOME PRODUCTS NEW ZEALAND** 

telephone: 09 573 2230 fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz