

Laundry Pedestal Stand with Drawer raises your Front Load Washer or Dryer to an optimal working height, for ease of loading and unloading of washing. A clever way to safely store your laundry essentials so you can keep your laundry neat and tidy.



Product Details

FEATURES

Store all your laundry essentials in the large storage drawer

View, load and transfer laundry at the perfect height

BENEFITS

Extra Storage Space

You can never have enough storage. The pedestal opens up to reveal a large storage drawer, perfect for all your laundry essentials, so you can keep your laundry neat and tidy.

Ergonomic solution

The pedestal raises your front load washer or dryer to a perfect height, which means a better working height when loading or unloading your laundry.

Specifications

PRODUCT PROFILE

Domestic warranty details (yrs) 1

Product Relates to Washing Machine,Dryer

Install, Perform, Care Care

SPECIFICATIONS

Material Steel Casing

SHIPPING

Shipping Volume (m3) 0.188

Shipping Weight (Kg) 23

Pack Dimensions Height (mm) 350

FEATURES

Accessory Other Features Model specific - check for compatibility

DIMENSIONS

Total height (mm) 312

Total width (mm) 595

Total depth (mm) 615

STUFFING QUANTITIES

20ft 120

40ft HC 324

SHIPPING

Pack Dimension Width (mm)	660
------------------------------	-----

Pack Dimension Depth (mm)	630
------------------------------	-----

Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products Pty Ltd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640

fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230

fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz