

Universal Drain Hose - 2.6m





Product Details

FEATURES

Added convenience with wall mounting hook included.

Convenient 2.6m hose length

Suitable for most Front Load and Top Load Washing Machines and Dishwashers

BENEFITS

Easily replaces a burst or broken hose Simply unscrew your existing drain hose and attach the Unilux drain hose for the perfect fit. An easy 2.6m for when you just can't reach Convenient 2.6m length hose gives you the additional length you need to connect your appliance to the drain outlet when you just can't reach.

Practical mounting
Wall mounting hook included for added convenience and
organisation.

Quick and easy to install*

Easy and efficient installation process. With minimal tools and assistance required. *You may require lifting assistance.

Suitable for most brands Suitable for most Front Load and Top Load Washing Machines and Dishwashers with a 20mm hose diameter.



Specifications

PRODUCT PROFILE

Domestic warranty details (yrs)	1
Product Relates to	Washing Machine, Dishwasher
Install, Perform, Care	Install

SHIPPING

Shipping Weight (Kg)	1
Pack Dimensions Height (mm)	303
Pack Dimension Width (mm)	303
Pack Dimension Depth (mm)	63

FEATURES

Accessory Other Features

Flexible hose,Universal,Suitable for models from most brands,May require assistance moving appliances when installing



Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous productdevelopment, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products PtyLtd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640 fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230

fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz