

Universal Dishwasher Cutlery Basket with fold down handle





Product Details

FEATURES

Quick and easy to setup

Neatly store cutlery

Space saving solution

Anti nesting cutlery separation

BENEFITS

Space saving

Clever modular cutlery basket with detachable compartments and a fold-away handle prevents interference with the spray arm

Extra capacity

Take the stress out of additional cleaning and enjoy extra cleaning capacity in busy meal-times or replace a worn-out or damaged basket.

Clever cutlery organisation

Make cleaning and packing away quicker and easier with organised cutlery. No more cutlery sliding through the cracks to the dishwasher floor. Simply lift and carry straight to your cutlery drawer for quick and easy storage.

Use in place of a cutlery drawer

A great substitute to the top cutlery drawer if you prefer a traditional basket that you can pick up and take to your bench top when packing away cutlery.

Anti-nesting cleaning

Large capacity to hold up to 78 cutlery pieces when using the anti-nest cutlery cover/s.

Suitable for most brands

The cutlery basket is suitable for most branded dishwashers.



Specifications

PRODUCT PROFILE

Domestic warranty details (yrs)	1
Product Relates to	Dishwasher
Install, Perform, Care	Perform

FEATURES

Accessory Other Features

Quick & easy

installation, Dishwasher

cleanable, Universal, Suitable for

models from most brands,Detachable compartments,Modular

design,Fold-down handle,Suits

most 45cm & 60cm

dishwashers, Convenient carry

basket

SHIPPING

Shipping Weight (Kg)	1
Pack Dimensions Height (mm)	280
Pack Dimension Width (mm)	185
Pack Dimension Depth (mm)	140



Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous productdevelopment, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products PtyLtd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640 fax: 1800 350 067

email: customercare@electrolux.com.au

web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND

telephone: 09 573 2230 fax: 09 573 2221

email: customercare@electrolux.co.nz

web: www.electrolux.co.nz