

Thinking of you

 **Electrolux**



user manual
sensor dry 7kg
condenser dryer

EDI97170W



Congratulations

Congratulations and thank you for choosing our EDI97170W tumble dryer. We are sure you will find your new tumble dryer a pleasure to use. Before you use your tumble dryer, we recommend that you read through the whole user manual, which provides the description of the tumble dryer and its functions.

To avoid the risks that are always present when you use an electrical appliance it is important that the tumble dryer is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the tumble dryer please check it is not damaged. If in doubt, do not use the appliance but contact your local Electrolux Service Centre.

The symbols you will see in this booklet have these meanings:

Conditions of use

This appliance is intended to be used in household and similar applications such as:

- Farm houses
- By clients in serviced apartments, holiday apartments and other residential type environments.



warning

This symbol indicates information concerning your personal safety



caution

This symbol indicates information on how to avoid damaging the dryer



environmental tip

This symbol indicates tips and information about use of the dryer

Contents

| | |
|---|-----|
| Product description | ii |
| Control panel | iii |
| What is shown in the display | iii |
| Important safety information | 1 |
| Environment | 3 |
| Before first use | 4 |
| Sorting and preparing laundry | 4 |
| Starting up for the first time | 5 |
| Iron Aid™ Steam System | 5 |
| Starting an Iron Aid™ program | 9 |
| Drying | 11 |
| Starting a drying program | 13 |
| Drying rack | 13 |
| Cleaning and maintenance | 15 |
| What to do if... | 18 |
| Technical data | 20 |
| Machine settings | 21 |
| Installation | 21 |
| Service | 26 |
| Warranty | 26 |



environmental tip

This symbol indicates tips and information about economical and ecological use of the dryer



dangerous voltage


This symbol indicates risk of injury from electrical current



caution risk of fire


This symbol indicates that extreme care must be taken to avoid a fire

Product Description

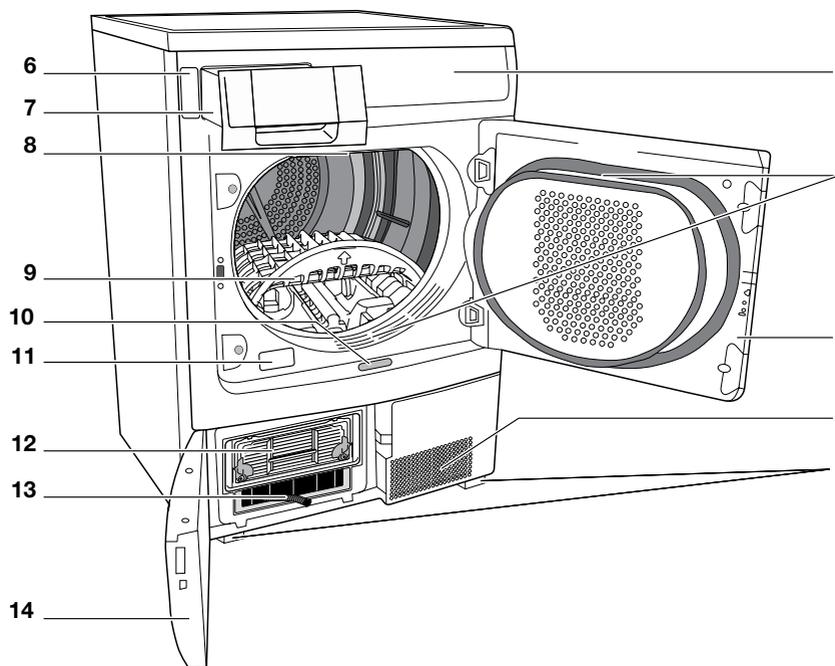


- | | |
|--|---|
| 1 Control panel | 8 Drum light |
| 2 Fluff filters | 9 Drying rack |
| 3 Loading door (reversible) | 10 Push button for base door opening |
| 4 Ventilation grille | 11 Rating Plate |
| 5 Adjustable feet | 12 Heat exchanger |
| 6 Water recirculation valve/filter, Filler neck for steam water tank | 13 Drainage hose for water tank |
| 7 Drawer with condensed water container | 14 Heat exchanger door |

Control Panel

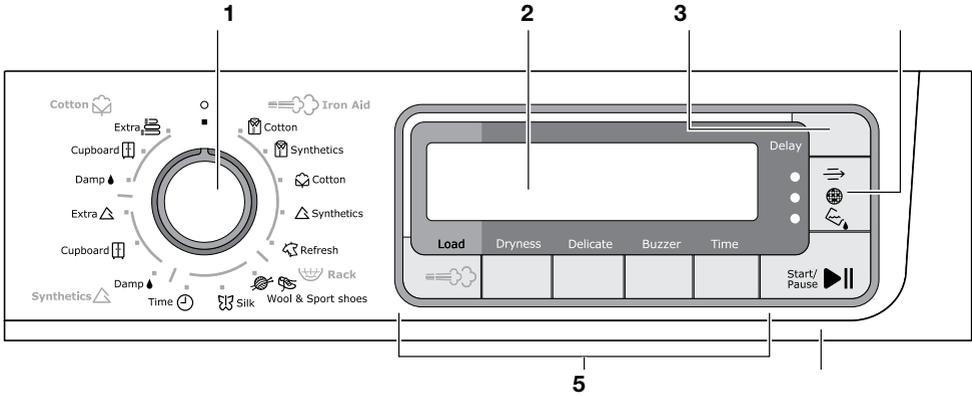

- 1** Program knob and On/Off switch
- 2** Display
- 3** DELAY TIMER button
- 4** Maintenance displays
 - HEAT EXCHANGER
 - FILTER
 - CONTAINER
- 5** Function buttons
- 6** START/PAUSE button

What is shown in the display

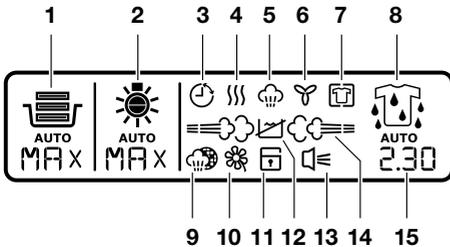

- 1** LOAD
- 2** DRYNESS
- 3** Start time preselection
- 4** Drying
- 5** Iron Aid program
- 6** Cooling
- 7** Anticrease
- 8** Degree of dryness Display
- 9** Steam Filter indicator
- 10** DELICATE
- 11** Child safety device
- 12** Steam water tank indicator
- 13** BUZZER
- 14** Steam display
- 15** Start time /program duration display

Safety Information



caution

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

General safety

- It is dangerous to alter the specs or attempt to modify this product in anyways
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a persons responsible for their safety.
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fire caused by excessive drying, do not use appliance to dry the following items: cushions, quilts and the like (these items accumulate heat).
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- Oil affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat can not escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so creating a fire hazard.
- Tumble dryer is not to be used if industrial chemicals have been used for cleaning
- **Danger of explosion:** never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- The height adjustable screw feet must never be removed.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the appliance with jets of water. Risk of electric shock!
- Do not lean on the open door. The appliance may tip over.
- Once the drying cycle or Iron Aid program has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.
- Take care when interrupting the Iron Aid program: Do not open the machine door during the steam phase. Hot steam may result in burns. The display shows a message to indicate the steam phase.

- The final part of a drying cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.



caution

Do not touch the back of the appliance while it is operating.



warning

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.



caution risk of fire

Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) so that the items are left at a temperature which ensures they will not be damaged.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

Use

- The appliance is intended for drying and steam treatment of standard laundry in domestic applications.
- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only dry fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- When using dry-cleaning sets: only use
- Do not allow lint to accumulate around the tumble dryer. Those products which are declared as suitable for the dryer by the manufacturer.
- Clean the micro-fine filter and fine strainer after each drying cycle or Iron Aid program.
- Do not use the machine without a lint filter or with a damaged lint filter. Risk of fire!
- Only fill the water reservoir for steam treatment with distilled water. Do not use tap water or any additives! The condensed water from this appliance's condensed water container can also be used, if it is filtered (e.g. with a coffee filter).
- Clean the heat exchanger regularly.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- With stacked washer and Iron Aid appliance: do not place objects on the appliance. These may fall off during operation.
- The lamp cover for the interior light must be screwed down tightly.

- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.



caution

hot surface : Do not touch the door light cover surface when the light is switched on.

Child safety

- This machine is not intended for use by young children or infirm persons without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children – danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.

Environment

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Old appliance



warning

Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug. Destroy loading door hook. Children cannot then lock themselves in the machine and put their lives at risk.

Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



environmental tip

- In the dryer, laundry become fluffy and soft. Fabric softeners are not therefore needed when washing.
 - Your dryer will function most economically if you:
 - always keep the ventilation slots on the base of the dryer unobstructed;
 - use the loading volumes specified in the program overview;
 - ensure you have good ventilation in the installation room;
 - clean the micro-fine filter and fine strainer after each drying cycle;
 - spin the laundry well before drying.
-  Energy consumption depends on spinning speed set in washing machine. Higher spinning speed - lower energy consumption.

Before first use

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (30 MIN) with damp cloths in the machine.

1. Turn the program knob to TIME .
2. Press the TIME button repeatedly until 0.30 appears in the display.
3. Press the START/PAUSE button.

Sorting and preparing laundry

Sorting laundry

- Sort by fabric type:
 - Cotton/linen for programs in  COTTONS program group.
 - Mixed fibres and synthetics for programs in the  SYNTHETICS program group.
- Sorting by care label. The care labels mean:

| | |
|---|---|
|  |  |
| Drying in the tumble dryer possible in principle | Dry at normal temperature |
|  |  |
| Dry at reduced temperature (press DELICATE button!) | Drying in the tumble dryer not possible |

Important! Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble drying.

This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying.

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the EXTRA program. Items may shrink!
- Wool and wool-like textiles can be dried using the  WOOL program. Before the drying cycle spin the woollen textiles as well as possible (max. 1200 rpm). Only dry woollen textiles together which are similar or the same with respect to material, colour and weight. Please dry heavy laundry items made of wool separately.

Special notes about Iron Aid



caution

The following textiles cannot be treated using an Iron Aid program: woollen knitwear, leather, textiles with large metal, wooden or plastic parts, textiles with rusting metal parts, oilskins or wax cotton garments.

- To smooth or freshen laundry with an Iron Aid program, sort laundry by size, weight, material and colour. Only smooth textiles together that are similar in terms of size, weight, material and colour.
- Do not dry new, coloured textiles together with light-coloured laundry items. Colours may fade (check colour fastness of fabric when damp in an inconspicuous area).
- Do not use dry cleaning sets such as dryel in combination with Iron Aid programs

Preparing laundry

- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Special notes about Iron Aid

- Before treating garments with an Iron Aid program, remove stains by washing or using localised stain removal.
- Turn items with double-layered fabrics inside out (e.g. with cotton lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Starting up for the first time

Switching appliance on / switching light on.

Turn the program selector to any program.

The appliance has been switched on. When the loading door is opened, the drum is illuminated.

Opening loading door / loading laundry


1. Open loading door: Push against the loading door (push point).
2. Load your laundry (do not force it in/ overload the machine).



caution

Be careful not to trap laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

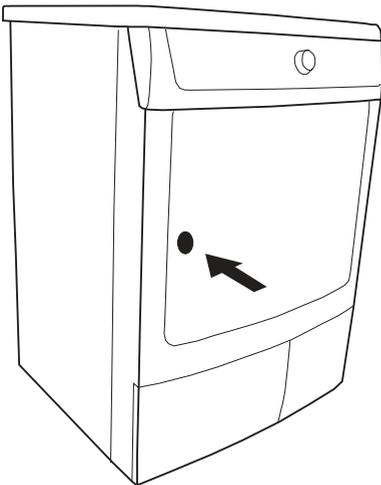

Iron Aid™ Steam System

Fill water tank

You must fill up the water tank before using an Iron Aid program for the first time.

Use the distilled water provided if there is not yet any condensed water from previous drying programs (see chapter on “Cleaning and Maintenance, Emptying condensed water container”). If, after an Iron Aid program is selected, the  water tank indicator on the display lights up, you will need to fill up the


water tank with distilled water. Otherwise, you will not be able to start any Iron Aid program.




caution

Important! Only fill the water tank with distilled or fully desalinated water. Do not use tap water or additives! You can also use the condensed water from the tank, as long as you filter it first (use the canister supplied with the filter fitted: see figure opposite).


1. Pull drawer containing condensed water container out a little (1),

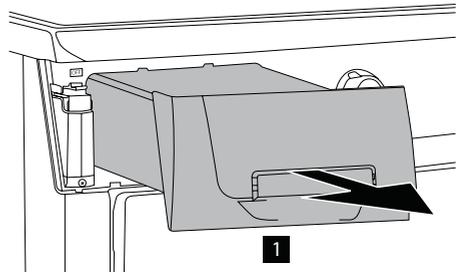

2. Push down the water tank's filler neck (1) and pull out it (2).

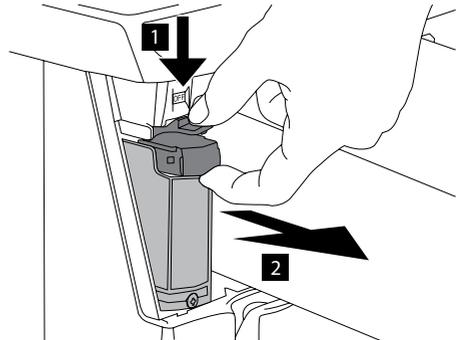

3. Fill with distilled water from the canister provided, up to the MAX mark inside the container.

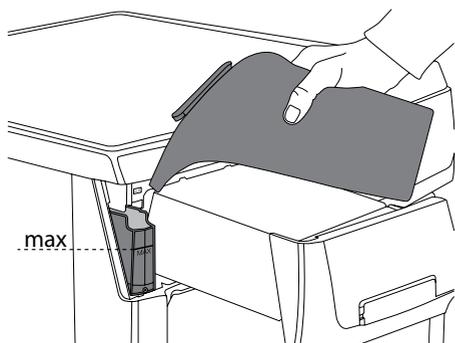

4. Push filler neck and drawer with condensed water container back in. When dry, all textiles not specifically prohibited in the chapter 'Sorting and preparing laundry' may be treated with the Iron Aid Steam System. Wet textiles may only be treated if they are labelled as suitable for dry programs.

Water recirculation system

This system allows you to automatically use for an Iron Aid Steam cycle the condensed water collected in the condense water tank during a drying cycle.




caution

The water in the condense water tank will never automatically fill the steam water tank. The water recirculation system works only if it is supplied by water arising during standard drying cycles.


To activate this system turn the valve to the ON position. When the valve is ON the steam water tank will be filled during the next drying cycle. Water will be supplied by the water circuit directly to the steam water tank filling it automatically.

To activate recirculation set valve to the ON position. To do that:

1. Pull drawer containing condensed water container out a little (1). Behind the drawer there is water tank's filler neck (2).

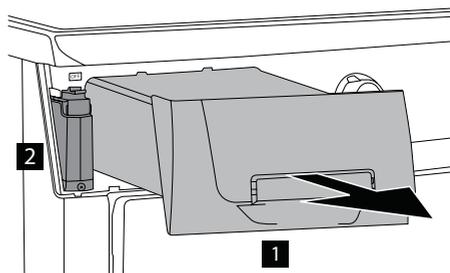

2. Turn the valve to the ON position. Water will be supplied by the water circuit directly to the steam water tank filling it automatically during the next drying cycle.

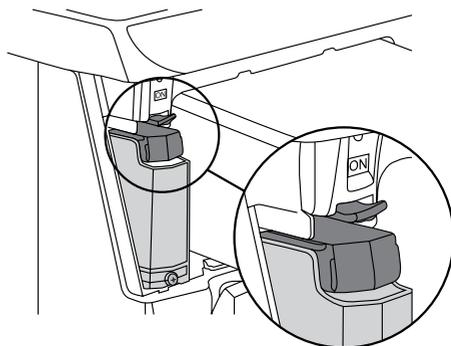

The steam water tank is empty. Please fill it and then press START/PAUSE

- i** If valve is closed (OFF position) recirculation system does not work.

Overview of Iron Aid programs

| Programs | max. load (weight when dry) | Additional functions / options | | Application/properties | |
|---|--------------------------------|--------------------------------|--------|---|----------|
| | | LOAD | BUZZER | | |
|  COTTON | 1.0 kg | • | • | For 1- 6 cotton shirts. Min. 80% natural fibres (cotton, linen etc). | wet, dry |
|  SYNTHETICS | 1.0 kg | • | • | For 1- 6 synthetic shirts. Max. 20% natural fibres (cotton, linen etc). | wet, dry |
|  COTTON | 3.0 kg | • | • | For smoothing cotton garments. Min. 80% natural fibres (cotton, linen etc). | wet, dry |
|  SYNTHETICS | 1.5 kg | • | • | For smoothing easy-care garments. Max. 20% natural fibres (cotton, linen etc). | wet, dry |
|  REFRESH | 2.5 kg | • | • | For one suit or up to two suit jackets or pairs of trousers or similar garments. Also suitable for removing odours. For dry garments only | |

i All information on applications is for guidance only. Smoothing results may vary depending on the selected program and especially the fittings and material properties of the textile. The results can be improved if necessary by using different programs and steam volumes. For example, some textiles containing more than 20% synthetics but with the right fittings may behave more like cotton textiles in an Iron Aid program. You may therefore get better smoothing results by selecting a cotton Iron Aid program.


i Given the wide range of different textile grades and properties that can be manufactured today using different mechanical and chemical processes, we recommend running the first few Iron Aid programs at low steam levels and with a small number of garments that are as similar as possible. Later, you can carefully start to vary the conditions of Iron Aid programs to learn from experience how to get the best results from the volume of laundry loaded, the quality of the textiles and the most suitable steam levels and Iron Aid™ programs. Please also note the accompanying 'Textile Guide'.

| Programme | LOAD | Loading volume | DURATION dry [min.] ¹⁾ | DURATION wet [min.] ¹⁾ |
|---|-------------------|--|-----------------------------------|-----------------------------------|
|  COTTON | MIN MED MAX | 1 - 2 shirts 3 - 4 shirts 5 - 6 shirts | 20-23 | 41-51 |
|  SYNTHETICS | MIN MED MAX | 1 - 2 shirts 3 - 4 shirts 5 - 6shirts | 14-17 | 24-49 |
|  COTTON | MIN MED MAX | 0.5 - 1 kg 1 - 2 kg 2 - 3 kg | 13-16 | 53-64 |
|  SYNTHETICS | MIN MED MAX | 0.2 - 0.5 kg 0.5 - 1 kg 1 - 1.5 kg | 12-16 | 43-53 |
|  REFRESH | MIN MED MAX | 1 pair of trousers 1 jacket 1 suit | 12-16 | |

i All information provided on selecting the steam level and corresponding load are suggestions only. In some cases, using a higher steam level or smaller load may give better results. The  REFRESH program is a gentle Iron Aid program for non washable textiles. Any distortion to the shape of a garment which might occur in few cases, can be remedied by ironing.

Selecting the program

Use the program selector to set the program you require. The estimated program duration (in minutes) appears in the multi-display.

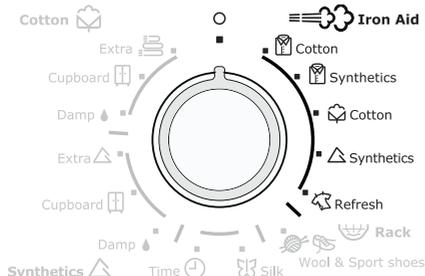


Select steam level LOAD (LOAD)

To achieve the best results, different steam levels are required for different volumes of laundry.

The LOAD button is used to set the required steam level: MIN, MED or MAX. All Iron Aid programs, apart from the  REFRESH program, automatically recognise the remaining dampness in clothes. When laundry is wet, a drying cycle is activated first if required. The table shows the steam levels appropriate for the selected load, under LOAD.

1. Press the LOAD button repeatedly until the desired steam level (MIN, MED or MAX) is shown in the display

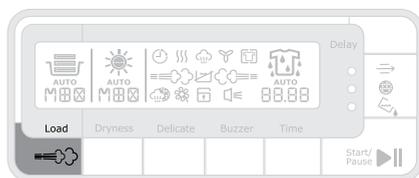


If the LOAD button is not pressed after an  Iron Aid program is selected, then medium steam level (MED) is selected automatically. If you select the  REFRESH program, MIN is selected automatically.

i Important: If in doubt, always select a lower steam level first until you have more experience with load volumes, fabric types and the corresponding optimum steam level. If too high a steam level is selected, garments may lose their shape. If too low a steam level is selected, creases may remain.

Selecting additional functions

The additional functions available for the Iron Aid programs are BUZZER (BUZZER), DELAY (DELAY) and the CHILD LOCK.

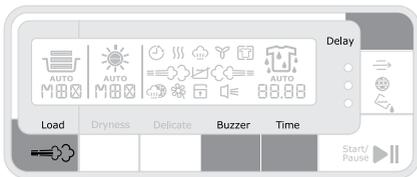

Buzzer (buzzer)

The appliance is supplied with the BUZZER  function activated. When the drying cycle has finished, an intermittent acoustic signal will sound. Each time a button is pressed or a program is changed using the program knob, an audible signal is also set to sound.

The button is used to switch the function on or off. When the function is active, the BUZZER  symbol appears in the display.

Delay (delay)

i With the DELAY button, you can delay the start of a program by between 30 minutes (00.30) and a maximum of 20 hours (20.00).

1. Select the program and additional functions.
2. Press the DELAY button as many times as necessary until the required start delay appears on the display, e.g. if the program is to be started in 12 hours.

3. To activate the delay timer, press the START/PAUSE button. The amount of time remaining until the program is set to start is continuously displayed (e.g. (15.00, 14.00, 13.00, ... 15.00, 00.30, etc)).

i If the display is showing 20.00 and you press the button again, the time delay will be cancelled. The display will show 0 and then the duration of the selected program.

Child lock

The child lock can be set to prevent a program being accidentally started or a program in operation being accidentally changed. The child safety device locks all buttons and the program knob. The child safety device can be activated or deactivated by holding down the BUZZER and TIME buttons simultaneously for 5 seconds.

- Before program is started: Appliance cannot be used.
- After program is started: Program in operation cannot be changed. The symbol  appears in the display to indicate that the child safety device is activated. The child safety device is not deactivated once the program comes to an end. If you want to set a new program, you must first deactivate the child safety device.

Starting an Iron Aid™ program

Press the START/PAUSE button. The program is started. First, the drying phase indicator appears in the display. The display will also show the program duration for the selected Iron Aid program, not including the additional drying phase. With wet laundry, after a few minutes the appliance will show the correct program duration for the Iron Aid program including the preceding drying program. As soon as the right level of dryness is reached, the Iron Aid program will start automatically. The steam indicator shows the progress of the Iron Aid program in the display. The individual steam phases are shown by animated clouds of steam.

**caution**

Important: During the steam phases that form part of the Iron Aid program and also the anti-crease phase (represented by animated clouds of steam in the display), the loading door cannot be opened. Risk of burns!

If the  water tank indicator lights up when you select an Iron Aid program, the program cannot be started. You will need to fill the water tank first (see section on 'Cleaning and maintenance, filling water tank'.)

 It is normal for the appliance to make noises during an Iron Aid or drying program if garments with hard parts, such as metal buttons, are put in the drum.

Changing a program

To change a program which has been selected by mistake once the program has started, first turn the program selector to **OFF** and then reset the program.

 The program can no longer be changed directly once the program has started. If you nevertheless attempt to change the program with the program knob or an additional function button (except the BUZZER button), the START/PAUSE button and  will flash in the display. The drying program is not however affected by this.

Putting in extra items or taking items out before end of program

1. Open door.
2. Load or remove laundry items.
3. Close door securely.
4. Press the START/PAUSE button to continue the drying cycle.

Iron Aid program complete / removing laundry

After the Iron Aid phase has ended, **00.00** is illuminated and the icon  ANTICREASE appears in the display. If the  BUZZER has

been activated, an audible signal sounds at regular intervals.

 The Iron Aid program is automatically followed by an anti-crease phase, including brief steam phases, which lasts around 90 minutes.

The drum rotates during the anti-crease phase. This keeps the laundry loose and free of creases. It can be removed at any point during the anti-crease phase, except during steam phases (look for steam animation in the display!). Laundry should be removed as quickly as possible.

1. Open the loading door to remove the laundry.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See "Cleaning and maintenance" section.)
3. Remove laundry one garment at a time.
4. Turn the program knob to **OFF**. Important! After each drying cycle
 - Clean the micro-fine filter and fine filter]
 - Drain the condensed water container (See section "Cleaning and maintenance".)
5. Close door.

**caution**

To retain the effects of the Iron Aid treatment, clothes must be removed one garment at a time during the anticrease phase and hung immediately on a clothes hanger to dry (for at least 5-15 mins, depending on fabric and selected steam level). Do up the buttons and tug the garment into shape, paying particular attention to cuffs and seams.

Drying


Overview of drying programs

| Programmes | max. load (weight when dry) | Additional functions / options | | | | Application/properties | Care symbols |
|---|--------------------------------|--------------------------------|------------------|---------|------|--|--|
| | | BUZZER | DELICATE | DRYNESS | TIME | | |
|  COTTON | | | | | | | |
|  EXTRA | 7 kg | • | • | • | - | Thorough drying of thick or multilayered fabrics, e.g. terry towelling items, bathrobes. |  |
|  CUPBOARD | 7 kg | • | • | • | - | Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels. |  |
|  DAMP | 7 kg | • | • | • | - | For normal thickness cotton or linen laundry, e.g. bedding, table linen . |  |
|  SYNTHETICS | | | | | | | |
|  EXTRA | 3 kg | • | • | • | - | Thorough drying of thick or multilayered fabrics, e.g. pullovers, bedding, table linen. |  1) |
|  CUPBOARD | 3 kg | • | • | • | - | For thin fabrics which are not ironed e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires. |  1) |
|  DAMP | 3 kg | • | • | • | - | For thin textiles which are still to be ironed, e.g. knitted items, shirts. |  1) |
| TIME | | | | | | | |
|  TIME | 7 kg | • | • | - | • | For further drying of individual items of laundry or for small volumes of less than 1kg. You can select a programme duration from 10 mins to 3 hrs in 10-minute steps. |  |
|  SPECIAL | | | | | | | |
|  SILK | 1 kg | • | a u t o | • | - | Special programme for drying silk using warm air and gentle movement. . | |
|  WOOL & SPORT SHOES (with RACK) | 1 kg | • | a u t o | - | • | For drying woollen fabrics after they have been washed, using warm air at minimum mechanical load (Follow section "Sorting and preparing washing"). Recommendation: Remove fabrics immediately after drying, as no anticrease programme follows. For gentle drying of one pair of sport shoes, washed and spindried at 1000 rpm. You can select a programme duration from 10 mins to 3 hrs in 10-minute steps. | |

1) Press the DELICATE button.


Selecting the program

Use the program selector to set the program you require. The estimated program duration (in minutes) appears in the multi-display.

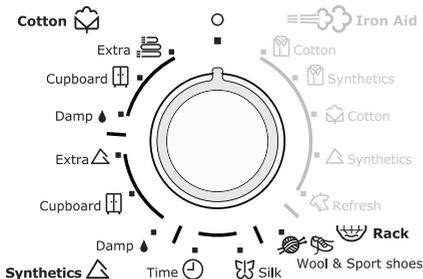

Selecting additional functions

You can choose from the additional functions DRYNESS, DELICATE, BUZZER and TIME (if a TIME program has been selected). The symbols of the functions available for the selected program are shown in the display.

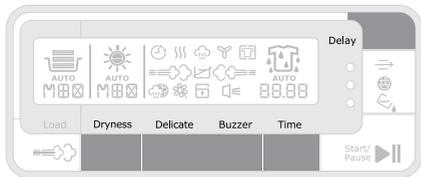

Dryness

If laundry comes out of the machine too damp after a standard drying program, you can increase the drying result by using the DRYNESS function. Laundry becomes drier as you move from MIN to MAX.

1. Press the DRYNESS button repeatedly until the desired dryness level (MIN , MED or MAX) is shown in the display. If another program has been selected, AUTO flashes in the display.

If wool or silk comes out of the machine too damp at the end of a  WOOL or  SILK program, you can dry it again by restarting the appropriate program, this time with the DRYNESS function selected and dryness level MIN , MED or MAX . In the case of a drying cycle with relatively dry laundry, the length of

the program cycle displayed at the beginning is corrected after a while.



caution

Make sure that by selecting the DRYNESS function, you do not overdry your wool or silk.

Delicate

For especially gentle drying of sensitive fabrics with the care label and for temperature sensitive textiles (e.g. acrylic, viscose). Program is executed with reduced heat. DELICATE is only suitable for use with loads of up to 3kg.

1. Press the DELICATE button. The DELICATE symbol appears in the display.

Time

To select the program duration after setting the  TIME program. You can select a program duration from 10 minutes to 3 hours in 10-minute steps. (corresponding to the  COOLING program).

1. Turn the program knob to the  TIMED Program. The **00.10** minutes is in the display
2. Press the TIME button repeatedly until the desired program duration is shown in the display, e.g. **00.20** for a program of 20 minutes. If the program duration is not selected, the duration is automatically set to 10 mins.

Buzzer

See chapter "Iron Aid™ Steam System", section "Selecting additional functions - BUZZER"

Delay

See chapter "Iron Aid™ Steam System", section "Selecting additional functions - DELAY"

Child lock

See chapter "Iron Aid™ Steam System", section "Selecting additional functions - CHILD LOCK"

Starting a drying program

Press the START/PAUSE button. The program is started. The program progress display shows drying progress. The symbols for DRYING  and COOLING  appear in the display one after the other. The number of droplets in the dryness indicator gradually goes down as the drying process progresses.

Changing a program

To change a program which has been selected by mistake once the program has started, first turn the program selector to **O** off and then reset the program.

i The program can no longer be changed directly once the program has started. If you nevertheless attempt to change the program with the program knob or an additional function button (except the BUZZER button), the START/PAUSE button and  will flash in the multi-display. The drying program is not however affected by this.

Removing laundry or loading laundry when necessary



warning

Laundry and drum can become hot. Risk of burns!

1. Open loading door
2. Load or remove laundry items.
3. Close the door securely. Lock must audibly lock.
4. Press the START/PAUSE button to continue the drying cycle.

Drying cycle complete / removing laundry

Once the drying program has finished,  CREASE GUARD lights up in the display. If the  BUZZER is activated, an audible signal sounds at regular intervals.

i The drying cycle is automatically followed by a anti-crease phase which lasts around 30 minutes.

The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. It can be removed at any time during

the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.)

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See "Cleaning and maintenance" section.)
3. Remove laundry.
4. Turn the program knob to **O** off.
5. Important! After each drying cycle
 - Clean the micro-fine filter and fine filter
 - Drain the condensed water container (See section "Cleaning and maintenance".)
6. Close door.

Drying Rack

Special equipment for gentle drying washable woollens and sport shoes. Incomparable for drying wet woollens - eliminated movement, protection from matting.


i For drying rack unpacking see Installation chapter.


Important! Before drying rack installation check the dryer drum. **It must be empty!**

Sport shoes cannot be dry without the drying rack - drum damage.

Installation and use

1. Open the loading door.
2. Insert the rack carefully resting its two support brackets on the front of plastic flange.

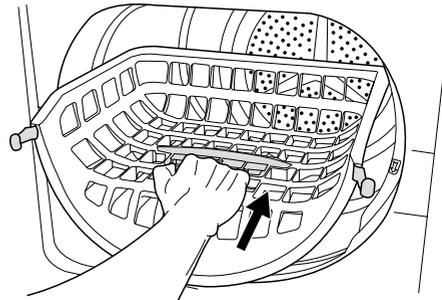


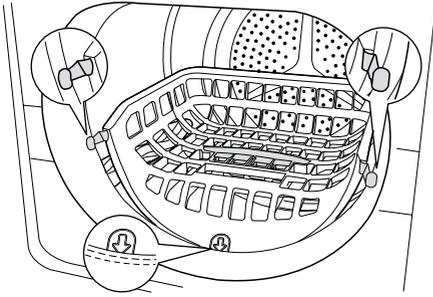


3. Place the woollens or pair of sport shoes on the rack.
4. Select the suitable rack drying program and drying time.
5. Press the START/PAUSE button.
6. When cycle is finished open the loading door and remove the woollens or shoes.
7. Turn the program selector to OFF.
8. Take out the drying rack of the drum.

Drying tips


- for the best drying result spread the woollens out loosely on the drying rack and roll it up
- do not squash and fold the woollens

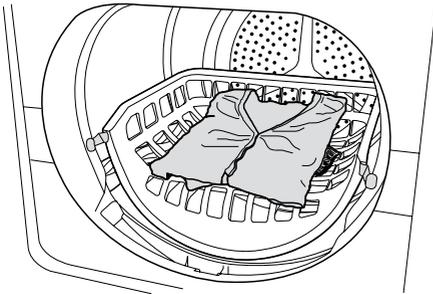

- open support and put sport shoes on it

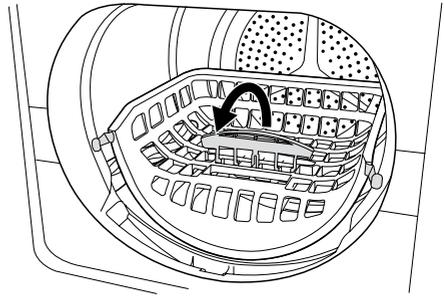

- the insoles should be placed beside the shoes on the drying rack and the shoelaces should be tied

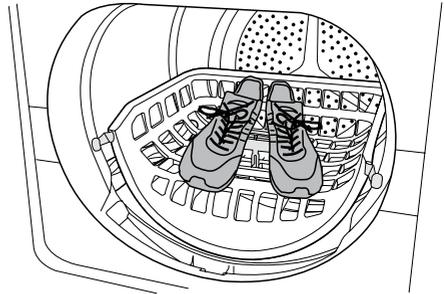

Cleaning and maintenance

Cleaning lint filters


To ensure that the appliance works perfectly, the lint filters in the door and in front of the drum must be cleaned after every Iron Aid™ or drying cycle.




caution

Important. Never operate the dryer without the lint filter or with a damaged or blocked lint filter.


1. Open loading door

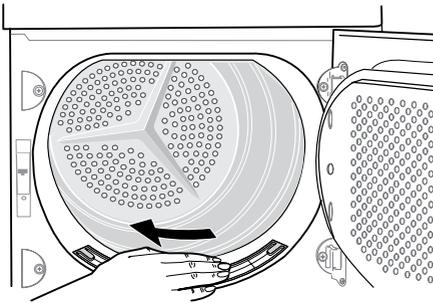

2. Use a damp hand to clean the microfine filter, which is built into the lower part of the loading aperture.
3. After a period of time, a patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter from the door pulling it out. It can be positioned with the tooth facing to the left or to the right). After cleaning do not forget to put it back.

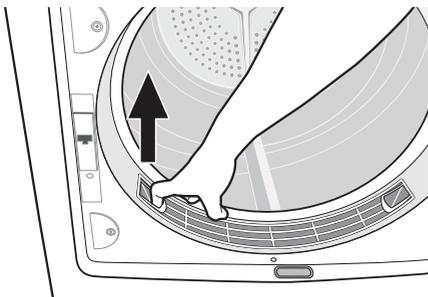


4. Remove fluff from lint filter, preferably using a damp hand for this purpose.
5. Replace the filter.

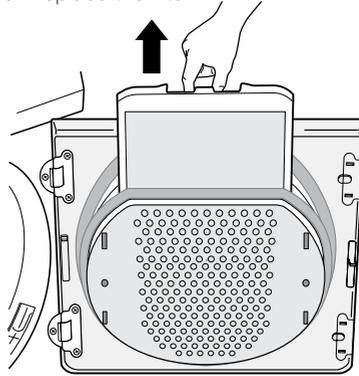


Cleaning the water recirculation valve/ filter

If the  STEAM FILTER symbol is shown in the display, the recirculation filter needs to be cleaned. The valve/filter is placed behind the tank handle - see chapter "Product description".


1. Push down the water tank's filler neck (1) and pull out it (2).

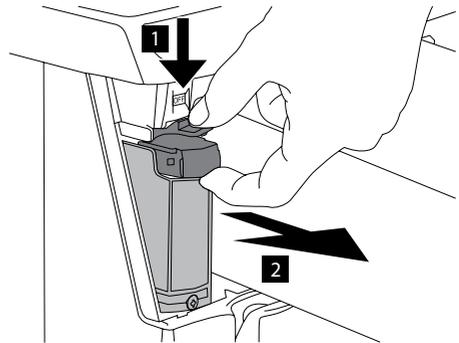

2. Clean the valve/filter under warm water.

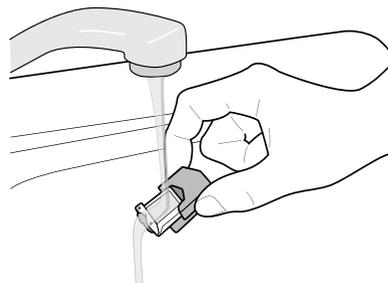

3. Re-insert the valve/filter.
4. Turn the valve/filter in ON position.

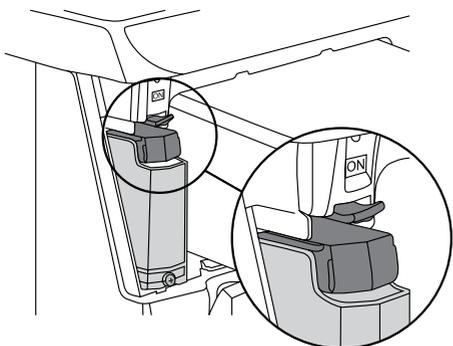

Clean the door seal



Wipe the door seal using a damp cloth immediately after the Iron Aid or drying cycle. Emptying the condensed water container is full, an active program will break off automatically and the  icon display will light up. In order to continue the program, the condensed water container must first be emptied.



warning

The condensed water is not suitable for drinking or for preparing food.


1. Pull drawer containing condensed water container all the way out (1) and pull up the condensed water container's drainage pipe as far as it will go (2).

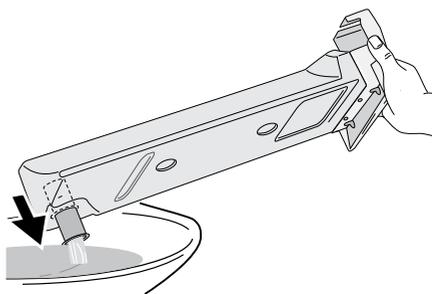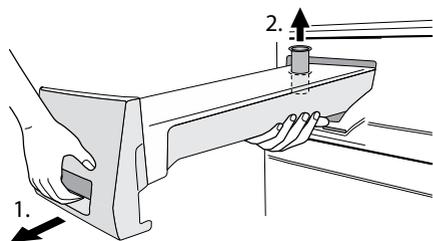

3. Push drainage pipe in and refit condensed water container.

If the program has been interrupted as a result of the condensed water container being full: Press the START/ PAUSE button to continue the drying cycle.

- i** The condensed water container has a volume of approx. 4 litres. This is sufficient for around 7 kg of laundry which has previously been spun at 1000 revolutions/minute.
4. The condensed water can be used as distilled water, e.g. for steam irons. However, first filter the condensed water to remove any residues and small pieces of fluff.

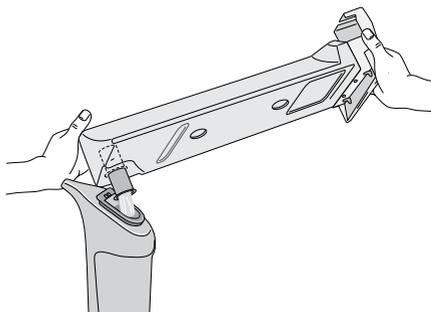

- i** Using the attached canister to filter: Pour the water out of the container straight through the filter at the top of the canister.


Cleaning heat exchanger

If the  HEAT EXCHANGER is displayed, the heat exchanger needs to be cleaned.


caution

Operating when the heat exchanger is blocked with fluff can damage the dryer. This also increases energy consumption.


1. Open door.
2. Open door in plinth. To do this, press the release button on the bottom of the door aperture and open the door in the plinth to the left.

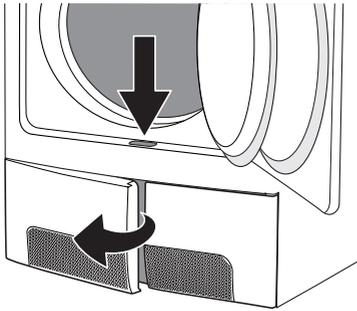

3. Clean fluff from the inside of the door and the heat exchanger front chamber. Wipe the door seal with a damp cloth.
4. Turn both lock washers inwards.

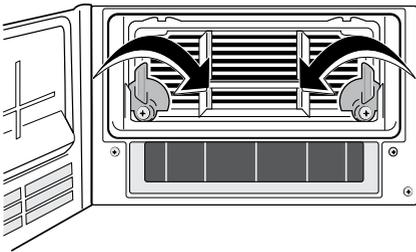

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.

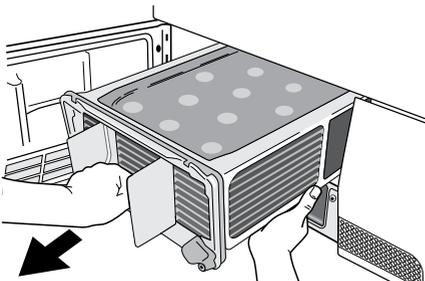

6. To empty the heat exchanger, hold vertically over a washing-up bowl.

caution

Do not use sharp objects to clean. The heat exchanger could develop leaks.

7. Clean heat exchanger. It is best to use a brush or to rinse thoroughly with a hand-held shower.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close door in plinth.

 The appliance will not operate if the \Rightarrow HEAT EXCHANGER indicator is still lit.

caution

Never operate the dryer without the heat exchanger. Cleaning the drum

Cleaning the drum

caution

Do not use abrasives or steel wool to clean the drum.

 Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the appliance.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

Clean control panel and housing

caution

Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the control panel and housing.

What to do if ...

Troubleshooting by yourself

If during operation, the error code E plus number or letter) appears on the multi-display:

Switch the appliance off and on again. Reset

program. Press the START/ PAUSE button.

If the error appears again, please contact the Customer Care Department

| Problem | Possible cause | Remedy |
|---|--|---|
| Dryer does not work. | Mains plug is not plugged in or fuse is not working correctly. | Plug in at mains socket. Check fuse in fuse box (domestic installation). |
| | Loading door is open. | Close loading door. |
| IronAid program does not start. the  water tank indicator lights up. | Have you pressed the START/ PAUSE button? | Press the START/PAUSE button again. |
| | Water tank is empty. | Fill water tank. |
| After a IronAid program, garments are not sufficiently smooth. | Recirculation valve is closed (OFF position) | Turn the recirculation valve to ON position. |
| | Wrong program selected (e.g.  SYNTHETICS instead of  COTTON). | Note the composition of the fabric. |
| | Too low a LOAD level set. | Set a higher LOAD level. |
| | Too many garments in machine, or garments that are too different. | Load the machine with fewer garments, or only similar ones. |
| | Clothes are not removed until the anti-crease phase is finished. | Remove clothes quickly one at a time from the machine as soon as possible after the start of the anti-crease phase. |
| | Garments not hung on clothes hangers and/or not tugged into shape. | Hang garments on clothes hangers, do up buttons and tug garments into shape. |
| After a IronAid program, there are no creases left in the garments. | Multi-layered garments tend to lose their shape. | Reshape multi-layered garments by ironing after they come out of the machine. |
| | The IronAid programme has the effect of smoothing garments. | Iron creases in again after the Iron-Aid program. |
| Drying results unsatisfactory. | Wrong program selected. | Select a different program the next time you dry (see "Program overview" chapter). |
| | Lint filters clogged. | Clean lint filters. |
| | Fluff filter clogged. | Clean fluff filter. |
| | Heat exchanger clogged with lint. | Clean heat exchanger. |
| | Overloading of laundry. | Observe recommended loading volumes. |
| | Ventilation slots in base area - covered up. | Uncover ventilation slots in base area. |

| | | |
|---|--|---|
| | Residue on inside surface of drum or drum ribs. | Clean inside surface of drum and drum ribs. |
| | | Make an adjustment using the DRYNESS function (see chapter "Drying") |
| | Conductance of water at installation site differs from standard setting of machine. | Re-programme standard setting for degree of drying (see 'Programming options' chapter). |
| When a button is pressed - no reaction of the machine. | Drying protection. After the start of the programme, the option can no longer be set. | Turn the programme knob to OFF . Set the programme again. |
| Drum light does not work. | Programme selector in OFF position. | Turn programme selector to any programme. |
| | Defective light bulb. | Replace light bulb (see next section). |
| Displayed program time changes erratically or stays unchanged for a long time. | Programme time is corrected automatically depending on type and volume of laundry and level of dampness. | Automatic process; this is not a machine fault. |
| Program inactive,  CONTAINER display illuminated. | Condensed water container is full. | Empty Condensed water container, then start program with START/PAUSE button. |
| Drying cycle ends shortly after programme starts.  ANTICREASE display illuminated. | Not enough washing loaded or washing loaded is too dry for selected programme. | Select time program or higher drying level (e.g.  EXTRA instead of  CUPBOARD). |
| Drying cycle lasts an unusually long time. Note: After up to 5 hours the drying cycle ends automatically (see 'End of drying cycle'). | Lint filter clogged. | Clean lint filter. |
| | Fluff filter clogged. | Clean fluff filter. |
| | Load volume too big. | Reduce load volume. |
| | Laundry insufficiently spun. | Laundry must be adequately spun. |
| | Particularly high room temperature. Temporary switching off of the compressor to avoid overload. | Automatic process, there is no fault with the appliance. If possible, lower the room temperature. |
| Discoloration | Colour fastness of textiles. | Check colour fastness of textiles. Only treat textiles together if they are a similar colour. |

Changing the bulb for interior lighting

Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from your local Service Force centre.



warning

When the appliance is switched on, the interior lighting switches itself off after 4 minutes when the door is open.

**warning**

Do not use standard bulbs! These develop too much heat and may damage the machine!

**warning**

Before replacing the bulb, disconnect the mains plug.

1. Unscrew cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)

2. Replace defective bulb.
3. Screw cover back down.

Check the correct positioning of o-ring gasket before screwing back the door light cover.

Do not operate the dryer when missing o-ring gasket on door light cover.

**warning**

For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated.

Technical data

| | |
|---|-----------------|
| Height x width x depth | 85 x 60 x 58 cm |
| Drum volume | 108 l |
| Depth with loading door open | 109 cm |
| Height can be adjusted by | 1.5 cm |
| Weight when empty approx. | 46 kg |
| Loading volume (depends on program) ¹⁾ | max. 7 kg |
| Voltage | 230-240V |
| Required fuse | 10A |
| Total power | 2350 |
| Use | Domestic |
| Permissible ambient temperature | + 5°C to + 35°C |

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

Machine settings

| Setting | Implementation |
|---|---|
| BUZZER permanent off | <ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press simultaneously the DRYNESS and DELICATE buttons and hold down for approx. 5 seconds. 3. The buzzer is by default always off. You can use BUZZER button to activate or deactivate sound but machine does not memorize your selection. |
| <p>Water hardness</p> <p>Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values. Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water.</p> | <ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press simultaneously the DELICATE and START/PAUSE buttons and hold down for approx. 5 seconds. The current setting is on the display: <ul style="list-style-type: none"> -  low conductivity <300 micro S/cm -  medium conductivity 300-600 micro S/cm -  high conductivity >600 micro S/cm 3. Press the START/PAUSE button sequentially until you set desired level. 4. To memorize setting press simultaneously the the DELICATE and START/PAUSE buttons or turn knob to O OFF position |


Installation

Appliance positioning

- It is recommended that, for your convenience, the tumble dryer is positioned close to your washing machine.
- The tumble dryer must be installed in a clean place, where dirt does not build up.
- Air must be able to circulate freely all round the tumble dryer. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.
- To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.
- Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.
- The feet must never be removed. Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the dryer.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- If this appliance is supplied from a cord extension set or electrical portable device, the cord extension set or the electrical portable outlet device must be positioned so that is not subject to splashing or ingress of moisture.

Important!

- The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.
- When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.
- Should the appliance be moved, it must be transported vertically.
- The appliance must not be installed behind the lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the dryer is restricted. Removing transport safety packaging

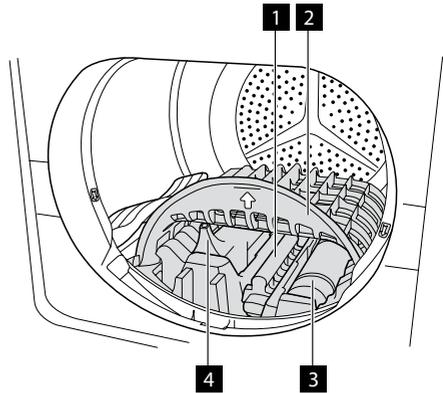


To unpack the rack:

1. Remove middle polystyrene part by pulling it.



caution

Before use all parts of the transport packaging must be removed.

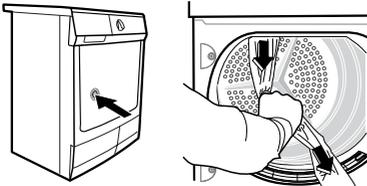


1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.

Drying rack unpacking




caution


Before appliance use all packaging parts and drying rack must be removed from the drum. The inside of the drum must be clean.

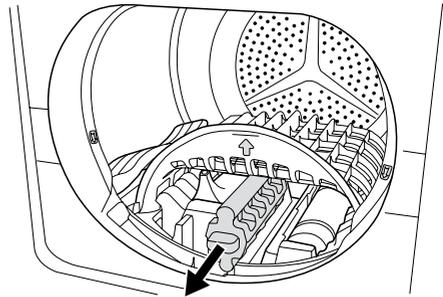


Loosen polystyrene parts 3 and 4.

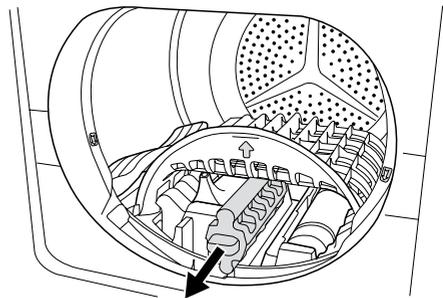


2. Lift slightly rack and take it carefully out from the drum.

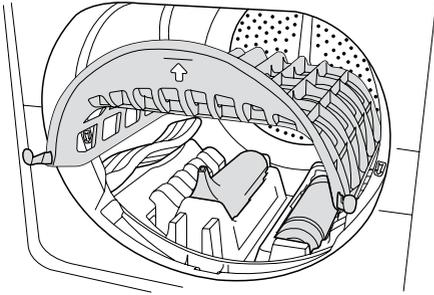

3. Remove right polystyrene part by pulling it. Inside this part there is a bottle of distilled water for steam program purposes.

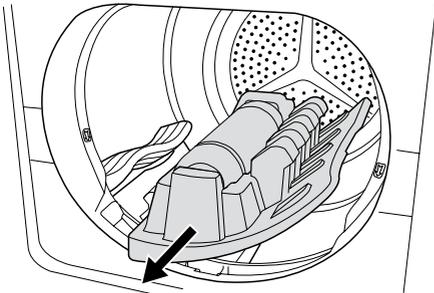

4. Remove left polystyrene part by pulling it. Inside this part there is a canister for filling distilled water tank for steam program purposes.

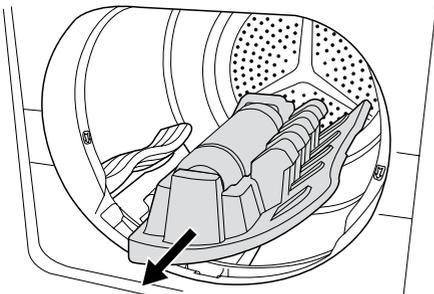

Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Product description" chapter).

Connect the machine to an earthed socket, in accordance with current wiring regulations.



warning

The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Center.



warning

The plug must be accessible after installing the machine.

Special accessories

• Stacking kit

These intermediate installation kits can be used to arrange the dryer and a washing machine (60cm wide, front loaded) as a space-saving washer/dryer stack. The washing machine is at the bottom and the dryer is at the top. Read carefully the instructions supplied with the kit.

Available from your specialist dealer

• Draining kit

Installation kit for direct draining of the condensed water into a basin, siphon, gully, etc. The water reservoir then no longer has to be drained, it must however remain in its intended position in the machine. Fixed hose has to be on the suitable height from minimum of 50cm to maximum of 1m from floor level and cannot be looped. If possible shorten the draining hose.

Read carefully the instructions supplied with the kit.

Service

If there are technical faults, first check if you can remedy the problem yourself with the help of the operating instructions - see chapter What to do if...

If you cannot remedy the problem on your own, get in touch with the Customer Care Department or one of our service partners.

To assist you quickly, these data are necessary:

- Model description
- Product number (PNC)
- Serial number (S No. is on rating plate stuck to the product - to find it see chapter Product description)

Type of failure

- Any error messages shown by the display.
So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND
APPLIANCE: ELECTROLUX DRYER

This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. In this warranty
 - (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
 - (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
 - (c) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
 - (d) 'ASC' means Electrolux' authorised serviced centres;
 - (e) 'Electrolux' means Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot, NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
 - (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period;
 - (g) 'Warranty Period' means:
 - (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 24 months and in New Zealand for 24 months, following the date of original purchase of the Appliance;
 - (ii) where the Appliance is used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be warranted against manufacturing defects in Australia for 3 months and in New Zealand for 3 months, following the date of original purchase of the Appliance.
 - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
4. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of:
 - (a) travel of an authorised representative;
 - (b) transportation and delivery of the Appliance to and from Electrolux or its ASC,

In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
 - (a) the Appliance is damaged by:

- (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) power surges, electrical storm damage or incorrect power supply
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation
 - (viii) failure to comply with any additional instructions supplied with the Appliance;
- (b) the Appliance is modified without authority from Electrolux in writing;
- (c) the Appliance’s serial number or warranty seal has been removed or defaced;
- (d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC.
8. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.
9. To the extent permitted by law, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.
13. To enquire about claiming under this warranty, please follow these steps:
- (a) carefully check the operating instructions, user manual and the terms of this warranty;
 - (b) have the model and serial number of the Appliance available;
 - (c) have the proof of purchase (eg an invoice) available;
 - (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice

Before calling for service, please ensure that the steps listed in point 13 above have been followed.

| | | |
|--|---|--|
| <p>FOR SERVICE or to find the address of your nearest state service centre in Australia PLEASE CALL 13 13 49 For the cost of a local call (Australia only)</p> | <p>SERVICE AUSTRALIA  Electrolux ELECTROLUX HOME PRODUCTS www.electrolux.com.au</p> | <p>FOR SPARE PARTS or to find the address of your nearest state spare parts centre in Australia PLEASE CALL 13 13 50 For the cost of a local call (Australia only)</p> |
| <p>FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand FREE CALL 0800 10 66 10 (New Zealand only)</p> | <p>SERVICE NEW ZEALAND  Electrolux ELECTROLUX HOME PRODUCTS www.electrolux.co.nz</p> | <p>FOR SPARE PARTS or to find the address of your nearest state spare parts centre in New Zealand FREE CALL 0800 10 66 20 (New Zealand only)</p> |

Thinking of you

 **Electrolux**



we were thinking of you
when we made this product

Electrolux Home Products Australia

telephone: 1300 363 640
fax: 1800 350 067
email: customercare@electrolux.com.au
web: www.electrolux.com.au

Electrolux Home Products New Zealand

phone: 09 573 2384
fax: 09 573 2221
email: customercare@electrolux.co.nz
web: www.electrolux.co.nz

The Thoughtful Design Innovator.

Do you remember the last time you opened a gift that made you say "Oh! How did you know? That's exactly what I wanted!" That's the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but design for the user's sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience that ultimate 21st century luxury, ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world. So when we say we're thinking of you, you know we mean just that.

The "Thinking of you" promise from Electrolux goes beyond meeting the needs of today's consumers. It also means we're committed to making appliances safe for the environment – now and for future generations.

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com.au