

Electrolux - The thoughtful design innovator.

Do you remember the last time you opened a gift that made you say "Oh how did you know? That's exactly what I wanted" That's the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of their products. Electrolux devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that customers really need and importantly, want.

This kind of thoughtful care means innovating with insight. For Electrolux, thoughtful design means making appliances easier to use and tasks more enjoyable to perform. Electrolux aim is to make this 'innovation with insight' available to people all over the world. So when we say we're thinking of you, you know we mean just that.

Electrolux. Thinking of you.

Share more of our thinking at
www.electrolux.com

Electrolux Small Appliances

Electrolux Pty Ltd ACN 000 015 136
57-63 Fairchild Street, Heatherton,
VIC 3202, Australia

www.electrolux.com.au

Customer Care: 1300 365 305
info.aus@electrolux.com.au

Electrolux Small Appliances

a division of Electrolux NZ LTD
3 -5 Niall Burgess Road, Mt Wellington,
Auckland, New Zealand

www.electrolux.co.nz

Customer Care: 0508 730 730 (free call NZ only)



Thinking of you
Electrolux

Quick Start
Guide



SLG 5-star rating*



ultracaptic™

Powerful cleaning, hygienic disposal

*Tested by independent test institute SLG Prüf- und Zertifizierungs GmbH, according to international standards IEC 60312



ultracaptic™


Quick Start Guide

Thank you for choosing an Electrolux ultracaptic™ vacuum cleaner. This Quick Start Guide describes all ultracaptic™ models. Some of the accessories/features may not apply to your specific model. In order to ensure the best results, always use original Electrolux accessories. They have been designed especially for your vacuum cleaner.

Before starting

- Unpack your ultracaptic™ model and the accessory system and check that all accessories are included.*
 - Read the operation instruction carefully.
 - Pay special attention to the Safety Advice below.
- * Accessories may vary from model to model.

Enjoy your Electrolux ultracaptic™!

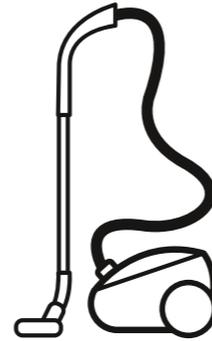

⚠ Safety requirement and warning

This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

WARNING: Turbo nozzles* have a rotating brush in which parts may become entrapped. Please use them with caution and only on intended surfaces. Please turn the vacuum cleaner off before removing entrapped parts or cleaning the brush.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and maintenance shall not be made by children without supervision.

Always disconnect the plug from the mains before cleaning or maintaining the appliance.

Never use the vacuum cleaner without its filters.

Caution

This appliance contains electrical connections:

- Never vacuum any liquid
- Do not immerse in any liquid for cleaning
- Disconnect the appliance from the mains when not in use
- The hose should be checked regularly and must not be used if damaged.

The above can cause serious damage to the motor, which is not covered by the warranty. **This vacuum cleaner is for domestic use only.**

Never use vacuum cleaner

- Close to flammable gases, etc.
- On sharp objects
- On hot or cold cinders, lit cigarette butts, etc.
- On fine dust, for instance plaster, concrete, flour.

Power cord precautions

- Regularly check that the plug and cord are not damaged. Never use the vacuum cleaner if the cord is damaged.
- If the cord is damaged, it must be replaced only by an authorised Electrolux service centre in order to avoid a hazard. Damage to the vacuum cleaner's cord is not covered by the warranty.
- Never pull or lift the vacuum cleaner by the cord.

All servicing and repairs must be performed by an authorised Electrolux service centre. Store the vacuum cleaner in a dry place.

Consumer information and sustainability policy

Electrolux declines all responsibility for all damages arising from any improper use of the appliance or in cases of tampering with the appliance. For more details of warranty and consumers' contacts see the Warranty Booklet in the packaging.

If you have any comments on the cleaner or the operating instructions manual please contact our customer care team.


Sustainability policy

This product is designed with the environment in mind. All plastic parts are marked for recycling purposes. For details see our website; www.electrolux.com

The packaging material is chosen to be environmentally friendly and can be recycled.

⚠ Wash the washable exhaust filter when required. Make sure the filter is completely dry before putting back.

Description of your ultracaptic™

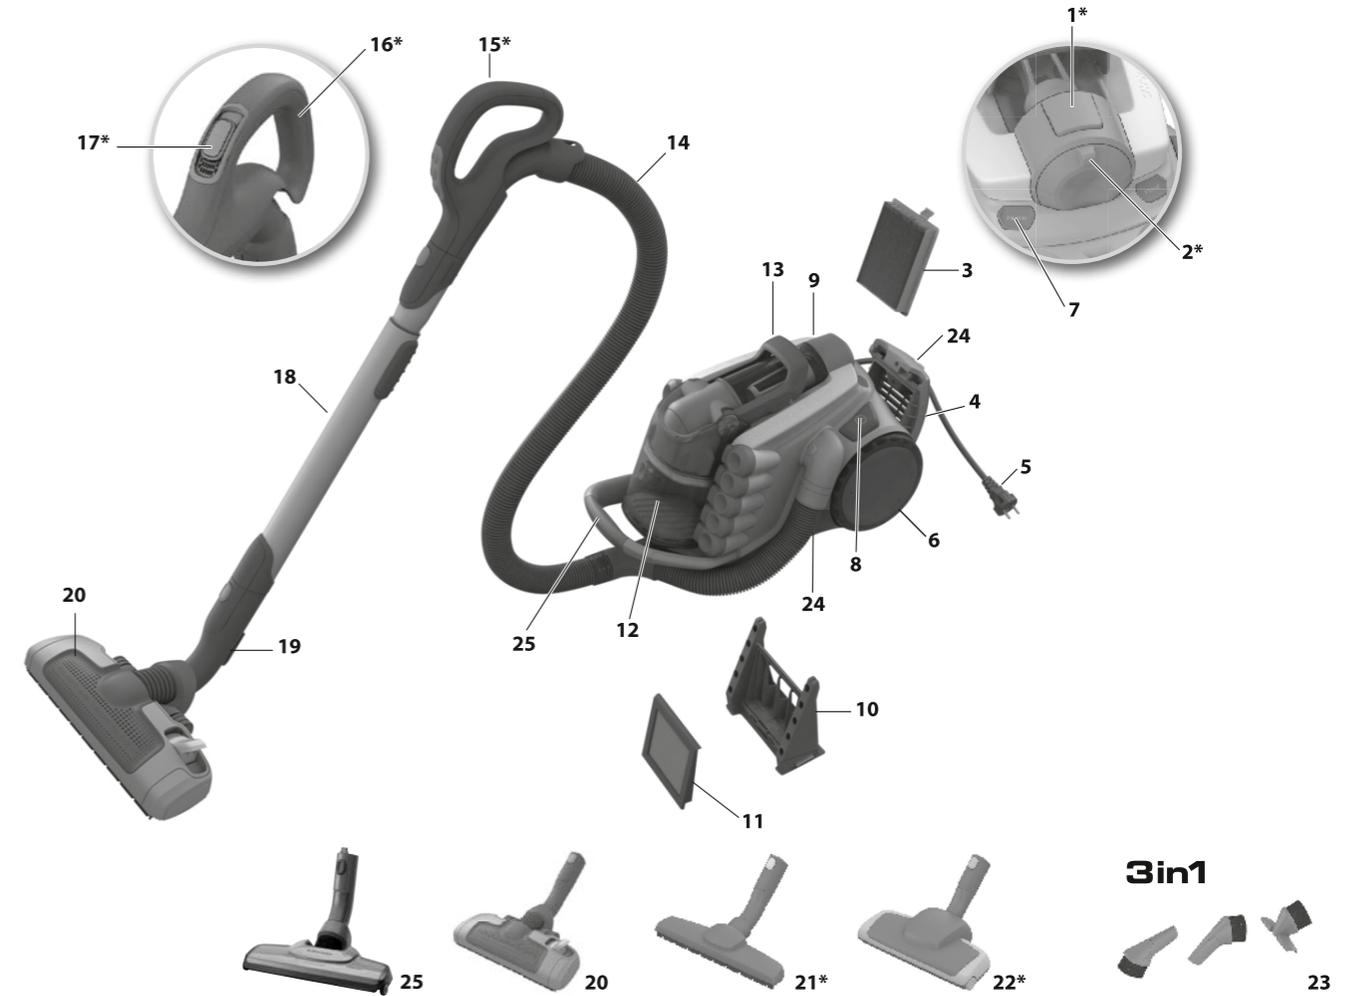

- | | | |
|---------------------------------|------------------------------------|---|
| 1. LED Display* | 10. Fine dust container | 19. Parking clip |
| 2. Electronic power regulation* | 11. Pre-Motor Filter | 20. AeroPro Silent Air Technology nozzle* |
| 3. Exhaust HEPA13 Filter | 12. Dust bin | 21. AeroPro hard floor nozzle* |
| 4. Filter grill | 13. Compactor handle | 22. AeroPro turbo nozzle* |
| 5. Power cord | 14. AeroPro hose | 23. AeroPro 3 in 1 nozzle |
| 6. Rear wheels | 15. AeroPro remote control handle* | 24. 2 parking slots |
| 7. Filter grill release | 16. AeroPro ergo handle* | 25. AeroPro motorized nozzle* |
| 8. On/Off button | 17. Airflow regulation valve* | |
| 9. Cord rewind button | 18. AeroPro telescopic tube | |

*Only applies to certain models

How to use the vacuum cleaner




Do not lift the machine by this handle.


1. **To carry machine**, lift it by the handle. Do not lift the machine by the compactor handle.



2. **Insert the hose into the two connections** (to remove it, press the lock buttons and pull the hose out)

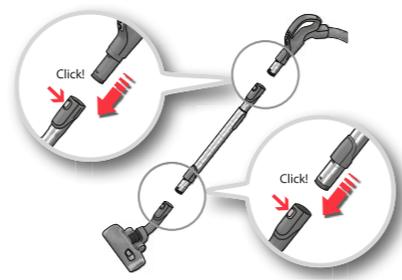

3. **Attach the telescopic tube to the floor nozzle and hose handle** (to remove them, press the lock button and pull the nozzle and hose off).

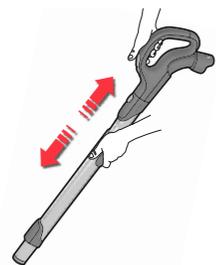

4. **Adjust the telescopic tube** by holding the lock with one hand and pulling the handle with the other hand.



5. **Pull out the power cord and plug it into the mains.**



6. **Press the On/Off button to turn machine on**, press again to turn off. Press the cord rewind button to retract the power cord.



7. **Regulate airflow by pushing the valve up and down.***



8. **Push the power regulation to the right to increase power, push to the left to reduce power.***



9. **Press the On/Off button to turn on and off.** Press '+' to increase power and press '-' to reduce power.*

Tips for storage



Insert the nozzle parking clip into one of the two parking slots on the side or on the back of the machine.

IMPORTANT:


Wash the washable exhaust filter when required.
Make sure the filter is completely dry before putting back.

Cleaning the washable exhaust filter

Wash the filter when required. If the filter is damaged, replace it with a new filter.

Rinse the inside (dirty side) in lukewarm tap water. Tap the filter frame to remove the water. Repeat the process four times.

Note: Do not use cleaning agents and avoid touching the filter surface. Let the filter dry completely before putting back.

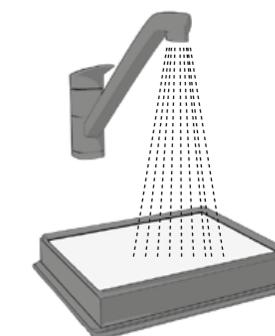

Tips on how to get the best results

Models with manual power regulation:




See the reference numbers below to find an optimal performance. (1 = MIN; 5 = MAX)

Models with display and remote control:



Follow the numbers for optimal performance. (1 = MIN; 5 = MAX)

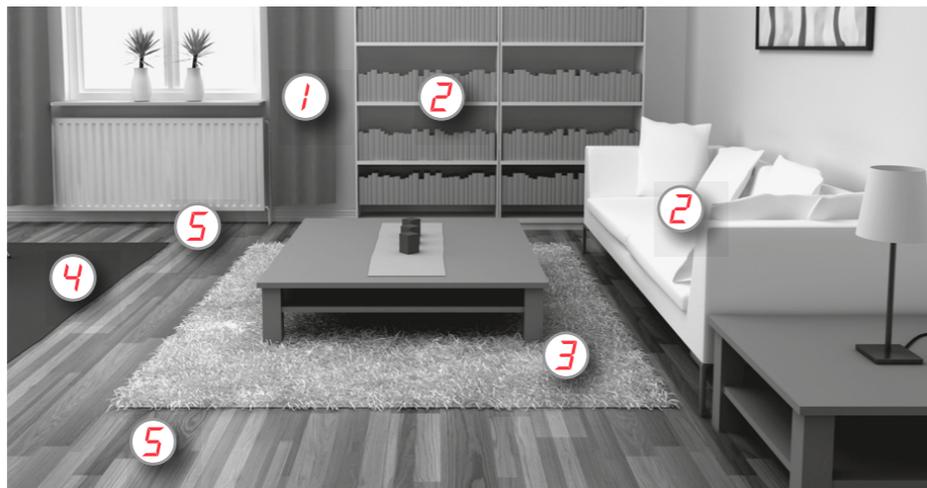

1 Curtains

3in1



2 Bookshelves, upholstery, crevices, corners

3in1



3 Delicate carpets

Brushes up



3 4 Rugs

Brushes up

Motorized nozzle gives the best dust pick-up and deep cleaning of carpets through the rotating brush roller agitating the carpet. Do not leave the motorized nozzle stationary with brush roller on.



Use Turbo nozzle (depending on model)



3 4 5 Hard floors

Brushes down

Brush roller on or off as preferred



Use Hard floor nozzle (depending on model)

Attention: on fur rugs, rugs with long fringes or deep pile **exceeding 15 mm the motorized nozzle should have the brush roller off.** Press BRUSH button to turn the brush roller off.

Dust compacting



1. **Dust compacting:** When max level is reached, compact dust gently.



2. **Lift the compactor handle to compact dust, handle gently to avoid dust overflowing, repeat if necessary.**




3. **Pull compactor handle back and continue cleaning until compacted dust reaches max level. Hear the click to ensure the dust compactor is locked in properly.**

Dust emptying



1. **Dust emptying:** When compacted dust reaches **maximum level**, lift dust container from machine by pulling the compactor handle.

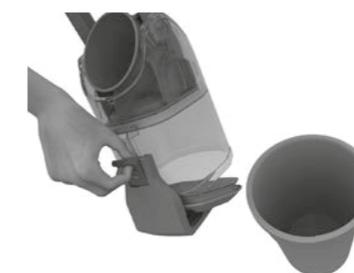

2. **Unlock button and push downwards to release bottom lid.**



3. **Empty compacted dust into the dustbin. Refit in reverse order.**

Washing exhaust HEPA filter



1. **Press the release buttons to open the back lid.**



2. **Remove the Exhaust HEPA13 filter and rinse with cold water.**



3. **Let dry for 24 hours before placing it back to the machine.** Replace the HEPA filter when required. HEPA filter reference: **EFH13W**

Cleaning the pre-motor fine dust filter to protect the motor



1. Press buttons to pull out the fine dust container from the bottom of the machine.




2. Remove the Pre-motor filter from the fine dust container.



3. Wash the filter with cold water.



4. Dry filter by squeezing it. Let dry for 24 hours before fitting it back to the machine.

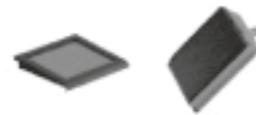

5. Filters should be washed every 6 months and replaced when required. Filter reference: EF 137, EFH13W



6. Open the fine dust container lid and tap gently to empty dust when required.

Cleaning fine dust container and cyclone cone



7. Open the fine dust container lid and wash the dust container with water. Wash the fine dust container every 2 years.



8. Let dry for 24 hours before putting the filter and fine dust container back to the machine body.



⚠ If dust has entered the nose cone, clean it with your hand.

Cleaning the AeroPro Silent Air Technology nozzle*



Disconnect the nozzle from the tube. Use the hose handle to clean the nozzle.




If the wheels are stuck, clean them by removing the wheel cap with a small screwdriver.



Unscrew the wheel axis and clean all parts. Refit in reverse order.

Cleaning the AeroPro motorized nozzle*

⚠ Always disconnect the nozzle before cleaning it!

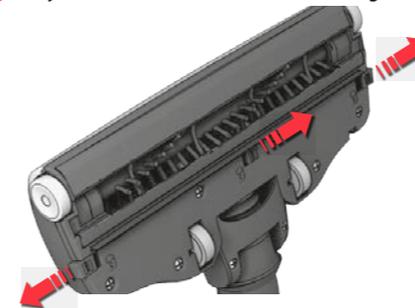

Open brush roll cover by pushing the latches. This will free the front wheels for cleaning.



Pull out the brush roll and remove entangled threads by snipping them away with scissors. Use the hose handle to clean the nozzle. Refit in reverse order.



If the wheels are stuck, remove them carefully by using a small screwdriver.

Cleaning the AeroPro Turbo nozzle*




Disconnect the nozzle from the vacuum cleaner tube and remove entangled threads, etc. by snipping them off with scissors. Use the hose handle to clean the nozzle.

Changing the remote handle battery*



Change battery when light indicator is blinking or when it is not responding when pressing any button.*

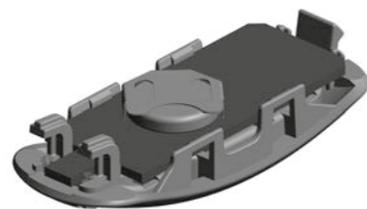

Use only Lithium batteries type CR1632. Batteries must be removed from the appliance before it is scrapped and are to be disposed of safely.*



⚠ Remote handle with motorized nozzle system DOES NOT have any batteries or light indicator, so DO NOT try to open the motorized handle.

TROUBLESHOOTING

The vacuum cleaner does not start

- Check that the cable is connected to the mains.
- Check that the plug and cable are not damaged.
- Check for a blown fuse.
- Check if the battery indicator lamp responds (certain models only).

The vacuum cleaner stops

- Check if dust container is full. If so, empty it and clean both the dust container and the filters before putting it back in the cleaner.
- Check if the nozzle, tube or hose is blocked.
- Check the motor and exhaust filter are clean.

The cleaner stops

The cleaner might be overheated: disconnect it from the mains; check if the nozzle, tube or hose are blocked. Let the cleaner cool down for 30 minutes before plugging it in again. If the cleaner still does not work, contact an authorized Electrolux service centre.

Cleaning the hose

Clean the hose by "squeezing" it. However, be careful in case the obstruction has been caused by glass or needles caught inside the hose.

Note: The warranty does not cover any damage to hoses caused by cleaning them.

Water has entered the vacuum cleaner

It will be necessary to replace the motor at an authorized Electrolux service centre. Damage to the motor caused by the penetration of water is not covered by the warranty. For any further problems, contact an authorized Electrolux service centre.

Recycle the materials with the symbol  Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.