



EHI745BA

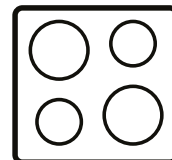

Induction hob

Installation & User manual

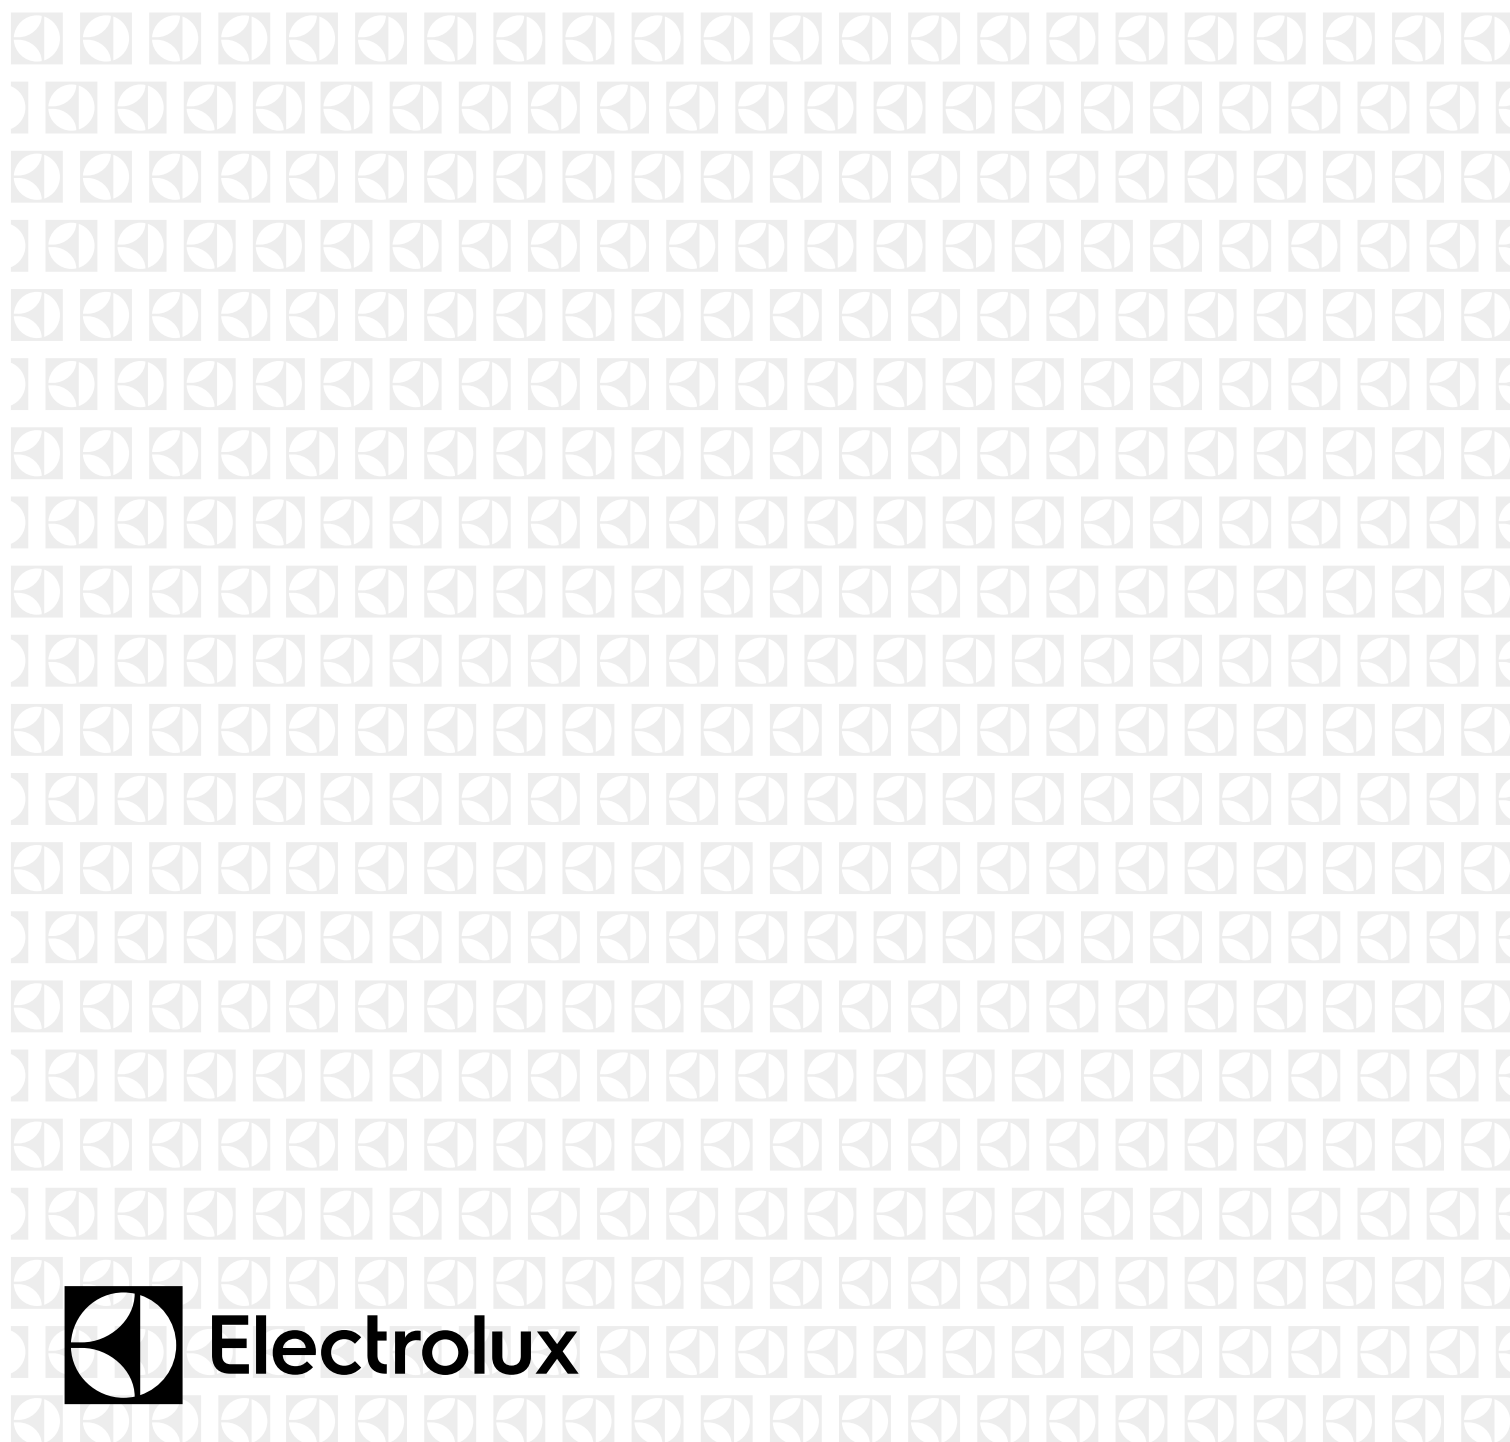

CONGRATULATIONS

Thank you for purchasing an Electrolux cooktop. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

BEFORE USING YOUR APPLIANCE

Check for any damage or marks. If you find the appliance damaged or marked you must report it within 7 days to claim for damages under the manufacturers warranty.

Before you use the appliance, we recommend that you read through the whole user manual which provides the description of the product and its functions. To avoid the risks that are always present when you use a gas appliance, it is important that the product is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

For future reference, please store this booklet in a safe place.

This appliance complies with the requirements of Australian Standard AS 4551 & AS/NZS 60335.2.6.

CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments.

BEFORE YOU CALL

Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable.

Record model and serial number here:

Model number: _____

Serial number: _____

CONTENTS

Safety information _____	3
Product description _____	5
Operating instructions _____	6
Helpful hints and tips _____	10
Care and cleaning _____	12
Troubleshooting _____	12
Installation _____	14
Technical information _____	15
Environment concerns _____	15
Warranty _____	17

SYMBOLS



WARNING!

This symbol indicates information concerning your personal safety.



CAUTION!

This symbol indicates information on how to avoid damaging the appliance.



IMPORTANT!

This symbol indicates tips and information about use of the appliance.



ENVIRONMENT!

This symbol indicates tips and information about economical and ecological use of the appliance.

SAFETY INFORMATION

Please read the user manual carefully and store in a handy place for later reference. Pass the user manual on to possible new owners of the appliance.

Read the following carefully to avoid damage or injury.

NOTE: You must read these warnings carefully before installing or using the appliance. If you need assistance, contact your Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.

Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
- If the appliance has a child safety device, we recommend that you activate it.

Children and vulnerable people safety



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Keep the minimum distance from the other appliances and units.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Seal the cut surfaces with a sealant to prevent moisture causing swelling.

Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
- If the appliance has a child safety device, we recommend that you activate it.

Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Keep the minimum distance from the other appliances and units.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Seal the cut surfaces with a sealant to prevent moisture causing swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware to fall from the appliance when the door or the window is opened.
- If the appliance is installed above drawers make sure that the space, between the bottom of the appliance and the upper drawer, is sufficient for air circulation.
- Make sure that the ventilation space of 5mm, between the worktop and the front of the below unit, is free. The warranty does not cover damages caused by the lack of an adequate ventilation space.
- The bottom of the appliance can get hot. We recommend to install a non-combustible separation panel under the appliance to prevent access to the bottom.

SAFETY INFORMATION

Use

! WARNING!

Risk of injury, burns or electric shock.

- Use this appliance in a household environment.
- Do not change the specification of this appliance.
- Do not use an external timer or a separate remote-control system to operate the appliance. Do not let the appliance stay unattended during operation.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Set the cooking zone to “off” after each use. Do not rely on the pan detector.
- Do not use the appliance as a work surface or as a storage surface.
- If there is a crack on the surface, disconnect power supply to prevent the electrical shock.
- Users with a pacemaker must keep a distance of minimum 30cm from the induction cooking zones when the appliance is in operation.

! WARNING!

Risk of fire or explosion.

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not try to extinguish a fire with water. Disconnect the appliance and cover the flame with a lid or a fire blanket.

! WARNING!

Risk of damage to the appliance.

- The glass ceramic can be damaged by objects falling onto it.
- The edge of the glass ceramic can be damaged by being knocked by the cookware.
- Cookware made of cast iron, cast aluminium or with damaged bottoms can scratch the glass ceramic if pushed across the surface.
- Before spillage can become burnt on to the cooking surface, remove it with a damp cloth.
- To avoid damaging cookware and glass ceramics, do not allow saucepans or frying pans to boil dry.
- Do not use the cooking zones with empty cookware or without cookware.
- Do not use the cooking zones with empty cookware or without cookware.
- Do not let cookware boil dry to prevent damage to cookware and the ceramic glass.
- Do not cover the parts of the appliance with aluminium foil.

NOTE: Damage including broken glass or scratches caused by misuse outlined above is not covered under warranty.

Care and cleaning

! WARNING!

Risk of damage to the appliance.

- Regularly clean the appliance to prevent the deterioration of the surface material.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.


Disposal

! WARNING!

Risk of injury or suffocation.


- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.

PRODUCT DESCRIPTION

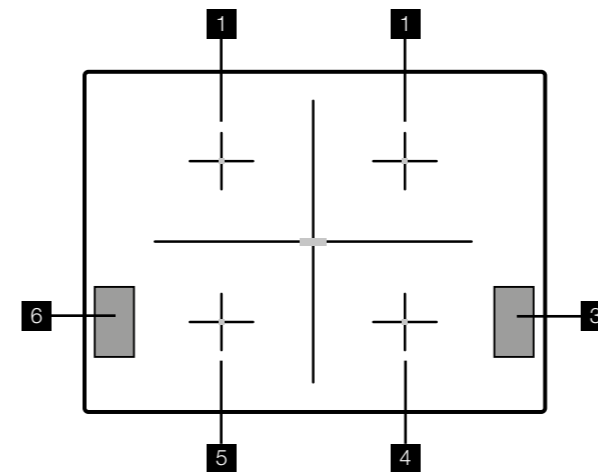

- 1** Induction cooking zone 2300W with power function 3200W
- 2** Induction cooking zone 2300W with power function 3200W
- 3** Control panel
- 4** Induction cooking zone 2300W with power function 3200W
- 5** Induction cooking zone 2300W with power function 3200W
- 6** Control panel

Control panel layout

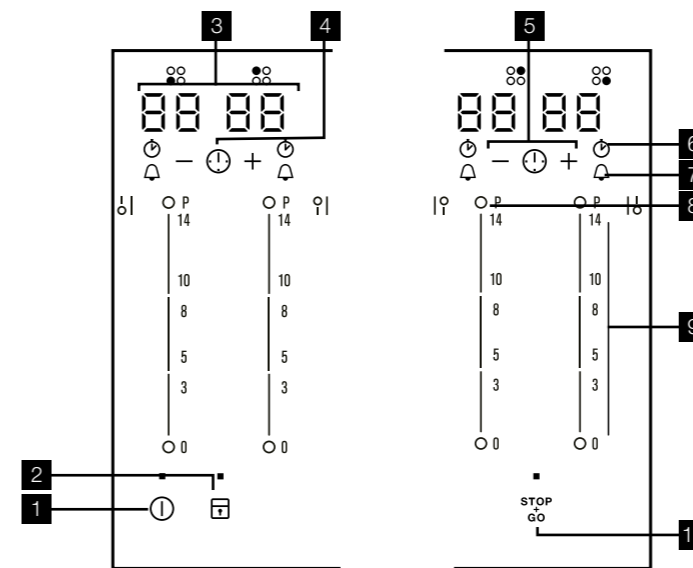

Sensor field	Function	Comment
1 ①	ON/OFF	To activate and deactivate the hob
2	Lock/ Child safety device	To lock/unlock the control panel
3 -	Heat setting and timer	To show the heat setting and time in minutes
4	-	To set the timer function
5 + / -	-	To increase or decrease the time
6	Countup timer	To show that the function operates
7	Count down timer / minute minder	To show that the function operates
8 P	Power function	To activate and deactivate the function
9 -	Control bar	To set a heat setting
10	STOP+GO	To activate and deactivate the function

PRODUCT DESCRIPTION

Heat setting displays

Display	Description
	The cooking zone is deactivated
-	The cooking zone operates
	The ^{STOP} function operates
	The automatic heat up function operates
	Power function operates
+ digit	There is a malfunction
/ = / _	OptiHeat Control (3 step Residual heat indicator) : continue cook / stay warm / residual heat
	Lock / The child safety function operates
	Not correct cookware or too small or no cookware on the cooking zone
	The automatic switch off function operates

OptiHeat control (3 step residual heat indicator)



WARNING!

/ = / _ Risk of burns from residual heat!

OptiHeat Control shows the level of the residual heat. The induction cooking zones make the heat necessary for cooking directly in the bottom of the cookware. The glass ceramic is hot from the heat of the cookware.

OPERATING INSTRUCTIONS

On and off

Touch for 1 second to activate or deactivate the appliance.

Automatic switch off

The function deactivates the appliance automatically if:


- All cooking zones are deactivated ().
- You do not set the heat setting after you activate the appliance.
- You spill something or put something on the control panel for more than 10 seconds, (a pan, a cloth, etc). An acoustic signal sounds after some time and the appliance deactivates. Remove the object or clean the control panel.
- The appliance becomes too hot (e.g. when a saucepan boils dry). Before you use the appliance again, wait for the cooking zone to cool down.
- You use incorrect cookware. The symbol comes on and the cooking zone deactivates automatically after 2 minutes.
- You do not deactivate a cooking zone or change the heat setting. After some time comes on and the appliance deactivates. See the table below.

Automatic switch off times

Heat setting	-	-	-	-
Stops after	6 hours	5 hours	4 hours	1.5 hours


The heat setting

Touch the control bar at the heat setting. Change to the left or the right, if it is necessary. Do not release before you have a correct heat setting. The display shows the heat setting.

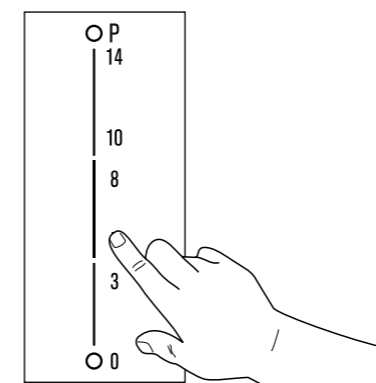

OPERATING INSTRUCTIONS

Automatic heat up

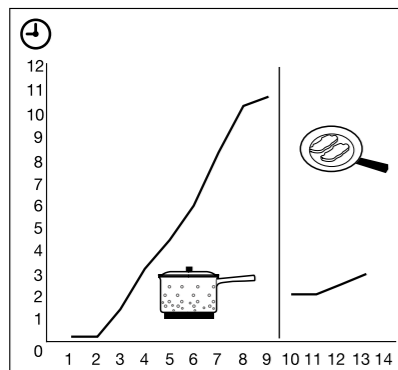

You can get a necessary heat setting in a shorter time if you activate the Automatic Heat Up function. This function sets the highest heat setting for some time (see the graphic), and then decreases to the necessary heat setting. To start the Automatic Heat Up function for a cooking zone:


1. Touch **P** (P comes on in the display).
2. Immediately touch the necessary heat setting. After 3 seconds (H) comes on in the display. To stop the function change the heat setting.

Switching on and off the power function

The Power function makes more power available to the induction cooking zones. The Power function is activated for 5 minutes at most. After that the induction cooking zone automatically switches back to heat setting (14). To switch on, touch **P**, (P) comes on. To switch off, touch a heat setting between (1) and (14).

Power management

The power management divides the power between two cooking zones in a pair (see the illustration). The power function increases the power to the maximum level for one cooking zone in the pair. The power in the second cooking zone automatically decreases. The heat setting display for the reduced zone changes between two levels.

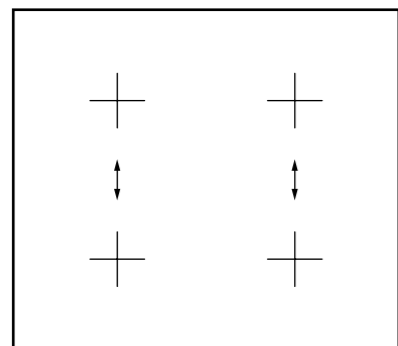

Timer

You can set one timer function for each cooking zone separately. To set a timer function for the zones on the left side use the timer on the left, for the zones on the right, the timer on the right.

Count Down Timer

Use this function to specify how long a cooking zone should operate during a single cooking session.

First set the heat setting for the cooking zone and then set the function.

To activate the function or change the (C) quickly again and again until the indicator (C) of a given zone lights up on the display. Then touch + or - to set the time (00 - 99 minutes). The function starts automatically after 4 seconds (C) comes on the display.

To activate the timer function for the second zone in a pair touch (C) 3 times quickly.

When the time comes to an end, a signal sounds and 00 flashes. Touch (C) to stop the signal.

To see the remaining time: touch (C).

To deactivate the function: choose the desired zone touching and then touch. The remaining time counts back to 00.

The symbol (C) goes out.

(C) CountUp Timer (The count up timer). You can use this function to monitor how long a cooking zone operates.

To activate the function: for the first zone in a pair touch (C) twice quickly. The function starts automatically when (C) lights up. To activate the function for the second zone in a pair touch (C) 4 times quickly.

To see how long the cooking zone operates: touch (C). The display shows the time, at first in seconds then in minutes.

To deactivate the function: choose the desired zone touching (C) and then touch. The symbol (C) goes out.

Minute Minder

You can use this function as a Minute Minder when the hob is activated but the cooking zones do not operate.

To activate the function: touch (C) quickly again and again until the indicator (C) of a given zone lights up on the display. Touch + or - to set the time. The function starts automatically after 4 seconds (C) comes on the display.

When the time comes to an end, a signal sounds and 00 flashes. Touch (C) to stop the signal.

i IMPORTANT!

The function has no effect on the operation of the cooking zones.

OPERATING INSTRUCTIONS

Stop+go

The ^{STOP} (STOP) function sets all cooking zones that operate to the lowest heat setting (1). When ^{STOP} (STOP) operates, you cannot change the heat setting.

^{STOP} (STOP) does not stop the timer function.

- To activate this function touch ^{STOP} (STOP). (STOP) comes on.
- To deactivate this function touch ^{STOP} (STOP). The heat setting that you set before comes on.

Lock

When the cooking zones operate, you can lock the control panel, but not (C). It prevents an accidental change of the heat setting. First set the heat setting. To start this function touch (L). The symbol (L) comes on for 4 seconds. The Timer stays on. To stop this function touch (L). The heat setting that you set before comes on. When you stop the appliance, you also stop this function.

The child safety device

This function prevents an accidental operation of the hob.

Starting the child safety device:

- Start the hob with (C). Do not set the heat settings.
- Touch (L) for 4 seconds. The symbol (L) comes on.
- Stop the hob with (C).

Switching off the child safety device:

- Start the hob with (C). Do not set the heat settings. Touch (L) for 4 seconds. The symbol (L) comes on.
- Stop the hob with (C).

Overriding the child safety device for one cooking session:

- Start the hob with (C). The symbol (L) comes on.
- Touch (L) for 4 seconds. Set the heat setting in less than 10 seconds. You can operate the hob.
- When you stop the hob with (C), the child safety device operates again.

OffSound Control (deactivation and activation of the sounds)

OffSound Control (deactivation and activation of the sounds)

Deactivation of the sounds

Deactivate the appliance.

Touch (C) for 3 seconds. The displays come on and goes out. Touch (L) for 3 seconds. (L) comes on, the sound is on. Touch (L) for 3 seconds. (L) comes on, the sound is off. When this function operates, you can hear the sounds only when:

- Touch (C).
- The Minute Minder comes down.

- The Count Down Timer comes down.
- You put something on the control panel.
- The Count Down Timer comes down.
- You put something on the control panel.

Activation of the sounds

Deactivate the appliance. Touch (C) for 3 seconds. The displays come on and goes out. Touch (L) for 3 seconds. (L) comes on, because the sound is off. Touch +, (L) comes on. The sound is on.

HELPFUL HINTS AND TIPS

INDUCTION COOKING ZONES

For induction cooking zones a strong electro-magnetic field creates the heat in the cookware very quickly.

Cookware for induction cooking zones

WARNING!

Use the induction cooking zones with correct cookware.

Cookware material:

- Correct: cast iron, steel, enamelled steel, stainless steel, the bottom made of multi-layer (with correct mark from a manufacturer).
- Not correct: aluminium, copper, brass, glass, ceramic, porcelain.

Cookware is correct for an induction hob if:

- Some water boils very quickly on a zone set to the highest heat setting.
- A magnet pulls on to the bottom of the cookware.

THE BOTTOM OF THE COOKWARE

Must be as thick and flat as possible.

Use of the cooking zones

IMPORTANT!

Put the cookware on the cross which is on the surface that you cook. Cover the cross fully. The magnetic part of the bottom of the cookware must be 125mm minimum. Induction cooking zones adapt to the dimension of the bottom of the cookware automatically. You can cook with the large cookware on two cooking zones at the same time.

The noises during operation

If you can hear:

- Crack noise: cookware is made of different materials (Sandwich construction).
- Whistle sound: you use one or more cooking zones with high power levels and the cookware is made of different materials (Sandwich construction).
- Humming: you use high power levels.
- Clicking: electric switching occurs.
- Hissing, buzzing: the fan operates.

The noises are normal and do not refer to any defects.

If unfamiliar with induction units please first compare the operating sounds of a demonstration model at your retailer before calling service. If a service call is placed and the sounds are normal you will be charged for the visit.

Energy saving

HOW TO SAVE ENERGY

- If it is possible, always put the lids on the cookware.
- Put cookware on a cooking zone before you start it.
- Use the residual heat to keep the food warm or to melt it.

THE COOKING ZONE EFFICIENCY

The cooking zone efficiency is related to the diameter of the cookware. The cookware with a smaller diameter than the minimum receives only a part of the power generated by the cooking zone. For the minimum diameters see the Technical data chapter.

Öko Timer



To save energy, the heater of the cooking zone deactivates before the count down timer sounds. The difference in the operation time depends on the heat setting level and the length of the cooking operation.

HELPFUL HINTS AND TIPS

Examples of cooking applications

The relation between the heat setting and the cooking zone consumption of power is not linear. When you increase the heat setting it is not proportional to the increase of the cooking zone consumption of power.

It means that the cooking zone with the medium heat setting uses less than a half of its power.

 The data in the table is for guidance only.

Heat setting	Use to:	Time	Hints	Nominal power consumption
1	Keep cooked foods warm	as required	Cover	3%
1-3	Hollandaise sauce, melt: butter, chocolate, gelatine	5 - 25 min	Mix occasionally	3-8%
1-3	Solidify: fluffy omelettes, baked eggs	10 - 40 min	Cook with a lid on	3-8%
3-5	Simmer rice and milk based dishes, heating up ready-cooked meals	25 - 50 min	Add at least twice as much liquid as rice, stir milk dishes part way through	8-13%
5-7	Steam vegetables, fish, meat	20 - 45 min	Add some tablespoons of liquid	13-18%
7-9	Steam potatoes	20 - 60 min	Use max. 1/4 L water for 750 g of potatoes	18-25%
7-9	Cook larger quantities of food, stews and soups	60 - 150 min	Up to 3 L liquid plus ingredients	18-25%
9-12	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	as necessary	Turn halfway through	25-45%
12-13	Heavy fry, hash browns, loin steaks, steaks	5 - 15 min	Turn halfway through	45-64%
14	Boil large quantities of water, cook pasta, sear meat (goulash, pot roast), deep fry chips			100%
P	Boil large quantities of water. Power management is activated.			

The Power function is suitable for heating large quantities of water.

Information on acrylamides

Important! According to the newest scientific knowledge, if you brown food (especially food that contains starch), acrylamides can pose a health risk. Thus, we recommend that you cook at the lowest temperatures and do not brown food too much.

CARE AND CLEANING

Clean the appliance after each use.
Always use cookware with clean bottom.

i IMPORTANT

Scratches or dark stains on the glass ceramic have no effect on how the appliance operates.

To remove the dirt

1. **Remove immediately:** melted plastic, plastic foil, and food with sugar. If not, the dirt can cause damage to the appliance. Use a special scraper for the glass. Put the scraper on the glass surface at an acute angle and move the blade on the surface.







Remove after the appliance is sufficiently cool: limescale rings, water rings, fat, stains, shiny metallic discolourations. Use a special cleaning agent for glass ceramic or stainless steel.

2. Clean the appliance with a moist cloth and some detergent.
3. At the end rub the appliance dry with a clean cloth.

TROUBLESHOOTING

Problem	Possible cause	Remedy
Red rings, limescale or water rings, shiny metallic or other discolouration, scratches/shadows, bubbles or other miscellaneous marks or stains on ceramic glass cooktop surface.	Cooktop surface has not been cleaned correctly. Cleaning/ maintenance of the cooktop surface is not covered under warranty. If a service call is placed to clean the cooktop you will be charged for the visit.	Use a ceramic glass cleaner such as Cerapol.
Pitting of ceramic glass surface.	Spillovers of liquid with high sugar content.	These types of spills must be removed immediately with a special scraper for the glass. If not permanent damage to the cooktop glass can occur which is not covered under warranty.
You cannot activate the appliance or operate it.	<ul style="list-style-type: none"> You touched 2 or more sensor fields at the same time. The Stop+Go function operates. There is water or fat stains on the control panel. 	<p>Activate the appliance again and set the heat setting in less than 10 seconds.</p> <p>Touch only one sensor field.</p> <p>Refer to the chapter "Operating instructions"</p> <p>Clean the control panel.</p>
An acoustic signal sounds and the appliance deactivates. An acoustic signal sounds when the appliance is deactivated.	You put something on one or more sensor fields.	Remove the object from the sensor fields.
The appliance deactivates.	You put something on the sensor field.	Remove the object from the sensor field.
The residual heat indicator does not come on.	The cooking zone is not hot because it operated only for a short time.	If the cooking zone operated sufficiently long to be hot, speak to the service centre.
The Automatic Heat Up function does not operate.	The cooking zone is hot. The highest heat setting is set.	Let the cooking zone become sufficiently cool. The highest heat setting has the same power as the Automatic Heat Up function.
The heat setting changes between two levels.	The Power management is activated.	Refer to "Power management".

  TROUBLESHOOTING

The sensor fields become hot.	The cookware is too large or you put it too near to the controls.	Put large cookware on the rear cooking zones if necessary.
There is no signal when you touch the panel sensor fields.	The signals are deactivated.	Activate the signals (refer to "OffSound control").
 comes on	The automatic switch-off operates.	Deactivate the appliance and activate it again.
 comes on	The Child Safety Device or the Lock function operates.	Refer to the chapter "Operating instructions".
 comes on	<ul style="list-style-type: none"> No cookware on the cooking zone. Incorrect cookware. The diameter of the bottom of the cookware is too small for the cooking zone. The cookware do not cover the cross. 	<p>Put cookware on the cooking zone.</p> <p>Use the correct cookware.</p> <p>Use larger diameter cookware.</p> <p>Cover the cross fully.</p>
 and number comes on	There is an error in the appliance.	Disconnect the appliance from the electrical supply for some time. Disconnect the fuse from the electrical system of the house. Connect it again. If  comes on again, speak to the after sales service.
 comes on	There is an error in the appliance, because either the cookware boils dry or you've used incorrect cookware. Overheating protection for cooking zone operates. The automatic switch-off operates.	Deactivate the appliance. Remove the hot cookware. After approximately 30 seconds, activate the cooking zone again. If the cookware was the problem, the error message goes out of the display, but the residual heat indicator can stay. Let the cookware become sufficiently cool and refer to "Cookware for the induction cooking zone" to see if your cookware is compatible with the appliance.

If you tried the above solutions and cannot repair the problem, speak to your dealer or the customer service centre. Give the data from the rating plate and an error message that comes on.

Make sure you operated the appliance correctly. If not the servicing by a customer service technician or dealer will not be free of charge, also during the warranty period. The instructions about the customer service and conditions of guarantee are in the guarantee booklet.

INSTALLATION



WARNING!
Refer to "Safety information" chapter.



IMPORTANT
BEFORE INSTALLATION
Before the installation of the appliance, record the information below from the rating plate. The rating plate is on the bottom of the appliance casing.

Model _____

PNC _____







Serial number _____

Built-in appliances

Only use the built-in appliances after you assemble the appliance into correct built-in units and work surfaces that align to the standards.

Connection cable

- Use the correct mains cable of type H05BB-F Tmax 90°C (or higher) for a single phase or two phase connection.

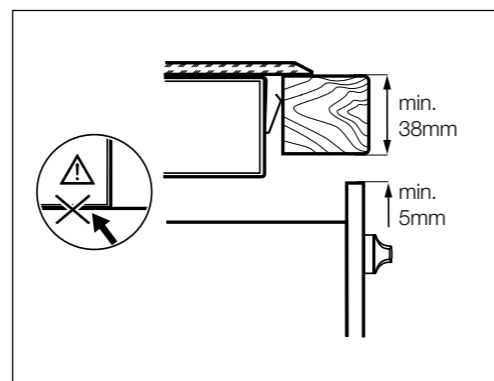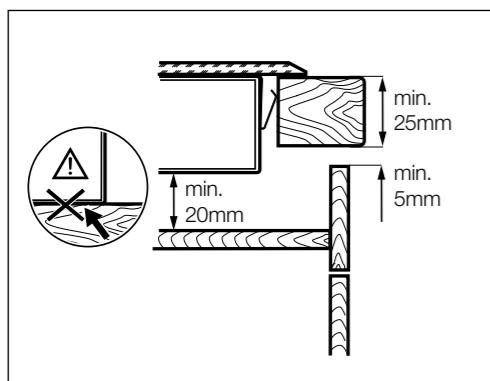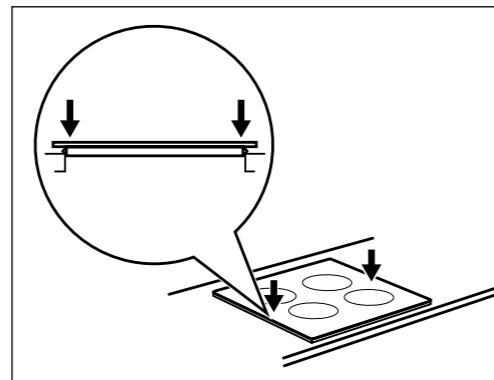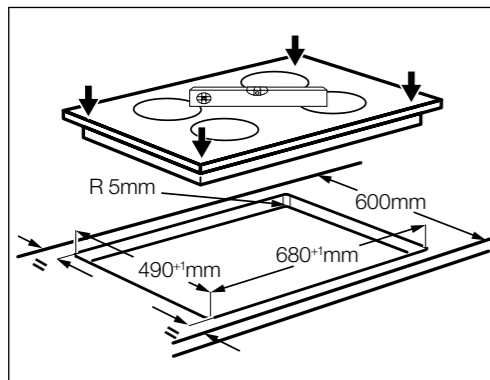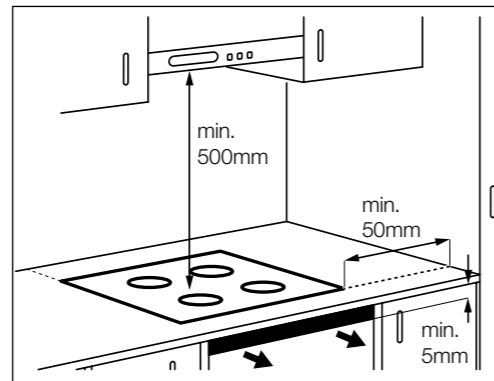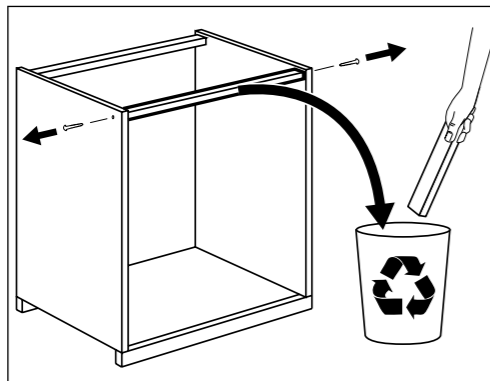

Make sure a ventilation space of 5mm directly below the benchtop is included in the installation and is kept free. The warranty does not cover functional failures caused by the lack of adequate ventilation.

TECHNICAL INFORMATION

Model.

Typ 58 GBD C3 AU

Induction 7.4 kW

Ser.Nr. _____

ELECTROLUX

Cooking zone	Nominal Power (Max heat setting) (W)	Power Function activated (W)	Power function maximum duration (min)	Minimum cookware diameter (mm)
Right rear	2300 W	3200 W	10	125
Right front	2300 W	3200 W	10	125
Left rear	2300 W	3200 W	10	125
Left front	2300 W	3200 W	10	125

The power of the cooking zones can be different in some small ranges from the data in the table. It changes with the material and dimensions of the cookware.



ENVIRONMENT

ENVIRONMENT CONCERNS

Recycle the materials with the symbol

Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

Electrolux Home Products Australia

telephone: 1300 363 640
fax: 1800 350 067
email: customercare@electrolux.com.au
web: electrolux.com.au



Electrolux Home Products New Zealand

telephone: 0800 436 245
fax: 0800 225 088
email: customercare@electrolux.co.nz
web: electrolux.co.nz



**To add a touch of
professional inspiration
to your home, visit
electrolux.com.au
or electrolux.co.nz**

electrolux.com.au



or electrolux.co.nz



P/No. ANC A06120201-A

© 2016 Electrolux Home Products Pty Ltd.

EMAN_Induction_May16