

MODULAR REFRIGERATOR CONNECTION KIT

WRB5004SA, WRB5004WA,
WFB4204SA, WFB4204WA

CONGRATULATIONS

Congratulations and thank you for choosing our connection kit. Before you install the connection kit, we recommend that you read through the entire installation manual.

To avoid the risks that are always present when you install an electrical appliance, it is important that the kit and appliance is installed correctly. Please read the safety instructions in this installation manual as well as the appliance's user manual to carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

After unpacking the connection kit, please check it is not damaged. If in doubt, do not use the connection kit but contact your local Customer Care Centre.

Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable.

Please read the user manual carefully and store in a handy place for later reference. The symbols you will see in this booklet have these meanings:



WARNING

This symbol indicates information concerning your personal safety



CAUTION

This symbol indicates information on how to avoid damaging the appliance



TIPS AND INFORMATION

This symbol indicates tips and information about use of the appliance



ENVIRONMENT

This symbol indicates tips and information about economical and ecological use of the appliance

CONTENTS

General warnings.....	3
Connection kit items	4
Before you begin	5
Connection kit contents	6
Installation	7
Adjusting door alignment.....	9

Information on disposal for users



ENVIRONMENT

- Remove and discard any packaging material before using this accessory. Most of the packaging materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in the appropriate collection containers.



WARNING

Risk of suffocation, injury or permanent disability.

- This accessory is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- This accessory may contain small parts that are a choking hazard. Not suitable for children under 3 years of age



CAUTION

Safety points before using your appliance.

- Do not use or place the accessory near the edge of the table or counter, near hot gas, stove, electric burner or heated oven.
- This accessory is for indoor use only.
- This accessory is intended for domestic use only. Electrolux will not accept any liability for possible damage caused by improper or incorrect use.
- When cleaning, use only a soft cloth with an unscented mild soap and lukewarm water.
- Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean the accessory, as they may damage it. Many commercially available cleaning products and detergents contain solvents that will damage your accessory.
- Care should be taken to correctly align the handle to the refrigerator. Once assembled to the door the handle can not be removed.

GENERAL WARNINGS

Please read the user manual carefully and store in a handy place for later reference. Pass the user manual on to possible new owners of the appliance.

NOTE: Please refer to your Appliance User Manual for warnings relating to the appliance.

BEFORE YOU BEGIN

- Thoroughly inspect cabinets for any signs of damage before commencing installation.
- If any damage is identified please contact Electrolux Service.
- Check refrigerator recess dimensions and ensure that they provide at least the minimum clearance at the back, side and top as recommended on page 4.
- The floor where the refrigerator is to be placed must be level, otherwise you will not be able to install your refrigerator properly.
- Ensure that the floor and surrounding cupboards are adequately protected from damage during unpacking and throughout the installation process.
- Ensure that two adequate and accessible powerpoints are installed inside the refrigerator recess before installing and connecting your appliances. These powerpoints should also be readily accessible after fridge installation is completed.
- Do not use extension leads or power board or double adapter under any circumstances as it may lead to electric shock and / or fire. Seek assistance of a licensed electrician if required.
- Unpack the connection kit and check for completeness by referring to the "Connection kit package contents" section.

NOTE: Due to size and weight of the cabinets as well as complexity of the task ensure that installation is attempted with at least two able-bodied persons. You are strongly urged to consider hiring Electrolux Service to do the installation.

CONNECTION KIT ITEMS


This connection kit is designed for use on single door refrigerators and freezers whose total body height is 1725 mm.

The model numbers and overall dimensions of individual products are:


MODEL	DESCRIPTION	MAX DOOR HEIGHT (H)	CABINET HEIGHT (H1)	TOTAL HEIGHT (H2)	DOOR WIDTH (W)	CABINET WIDTH (W1)	TOTAL DEPTH (D)	TOTAL DEPTH (D1)	DEPTH DOOR OPEN (D1)
WRB5004SA-X	500L Single Door, Refrigerator	1725	1705	1725	699	693	773	641	1360
WRB5004WA-X	500L Single Door, Refrigerator	1725	1705	1725	699	693	773	641	1360
WFB4204SA-X	420L Single Door, Freezer	1725	1705	1725	699	693	773	641	1360
WFB4204WA-X	420L Single Door, Freezer	1725	1705	1725	699	693	773	641	1360

All measurements are in millimeters.


Single cabinet dimensions

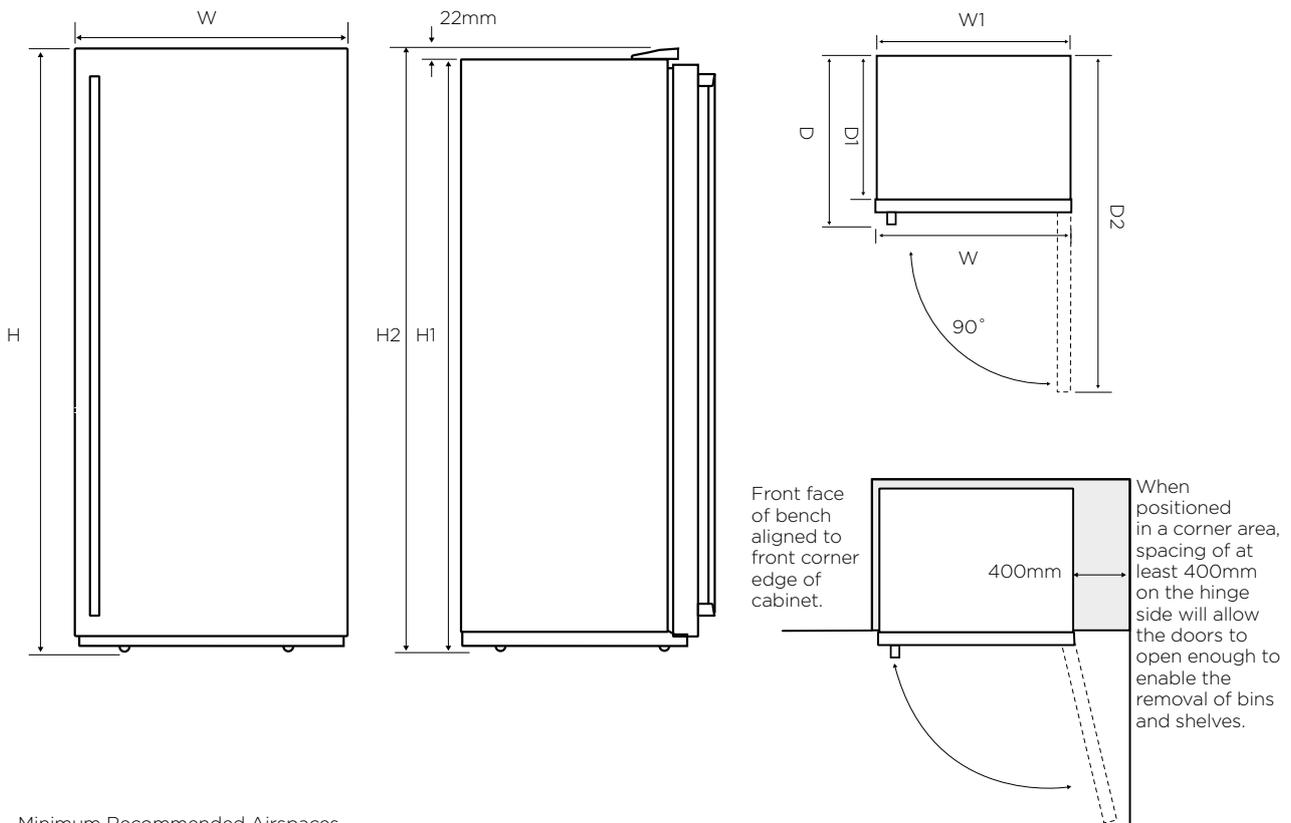

Minimum Recommended Airspaces

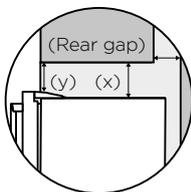


If you do not have a cupboard with a rear gap, the recommended clearance area on top increases from 50mm to 90mm (x) and from 32mm to 72mm (y).

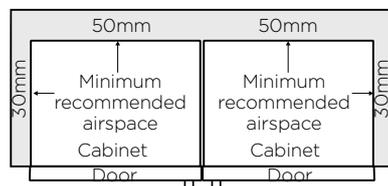

Please note: Doors are designed to sit proud of cabinetry (not flush).

JOINED DIMENSIONS



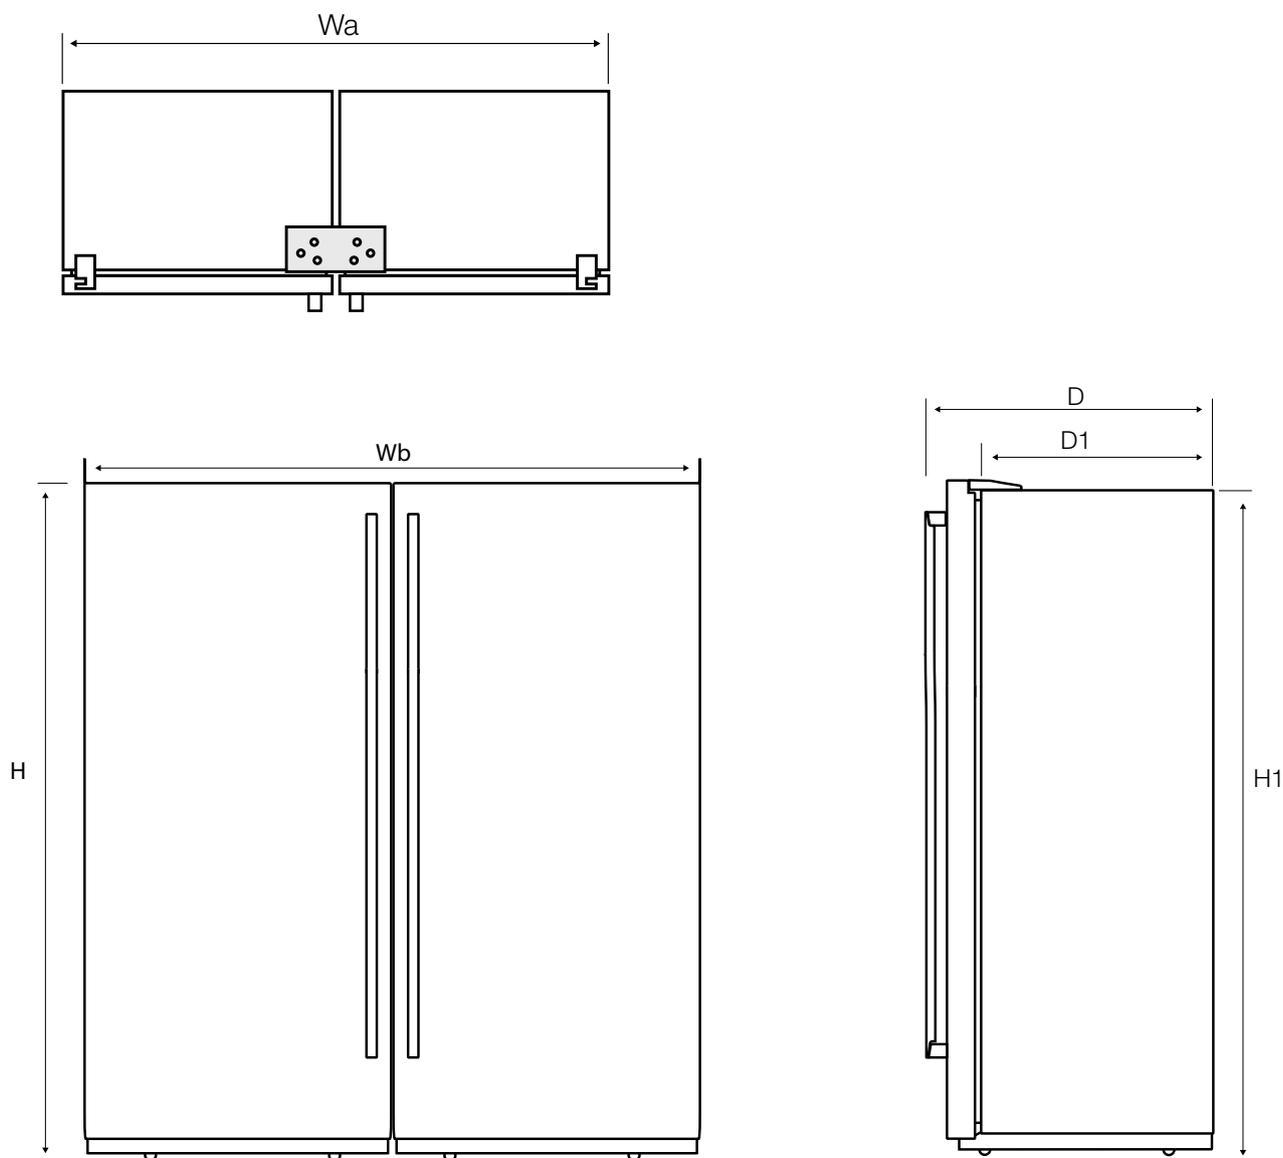


Joined cabinet dimensions:

INDIVIDUAL CABINET WIDTHS (W1)		CABINET HEIGHT	MAX DOOR HEIGHT	JOINED CABINET WIDTH	JOINED DOOR WIDTH	MAX TOTAL DEPTH	MAX CABINET DEPTH
model 1	model 2	(H1)	(H)	(Wa)	(Wb)	(D)	(D1)
693	693	1705	1725	1407	1419	773	641
693	790	1705	1725	1504	1516	773	641

All measurements are in millimeters.

   CONNECTION KIT PACKAGE CONTENTS

ITEM	DESCRIPTION	QTY.	ANC	
1	 Top-front bracket	1	Grey	White
2	 Self tapping screw	1	A03972801 1460583	A03972802 1460583
3	 Bottom rear bracket	1	A03979601	
4	 Replacement screw ST4.2 x 6mm for the bottom rear bracket	2	A04064601	
5	 Replacement foot base with M4 threaded holes	2	A02102702	
6	 Bottom front bracket assembly	1	Grey	White
10	 Centre cover	1	Grey	White
11	 Foot Assembly Left	2	A02816701	
	 Foot Assembly Right	2	A02816702	
12	 Mounting M5 x 12 bolts M5 nuts set	8	A04064701	
		8	A04797101	
13	 Protective foam pads with peelable adhesive tape	4	A04064701	
			A04797101	
14	 Protective cardboard	1	A04064701	
			A04797101	


INSTALLATION

Required Tools

- 3mm Allen key
- Phillips head screwdriver
- 7mm socket wrench screwdriver

Preliminary Operations - General Preparation

- Before starting to bring the appliances together, in order to protect the sides from possible damage during the installation process, attach the four disposable protective foam pads at the facing side corners of one of the appliances (foam should be applied to the handle side of the cabinet as shown with approximately 100mm from the front or back and 300mm from the top or bottom).

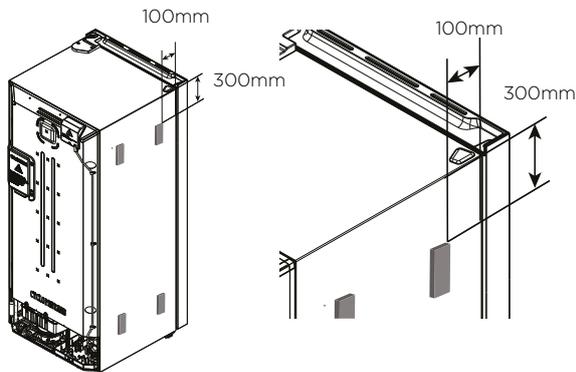


- Pull the appliances together.
- Adjust the front feet of the appliances to the same height and alignment.

Replace Foot Bases

NOTE: Two people may be required for this operation

- Remove the two front feet that will meet in the middle then remove the factory fitted base, discard and replace with the foot base part (item 5) supplied in the kit ensuring that the M4 threaded hole is facing the front and is nearest the outside edge of the cabinet.

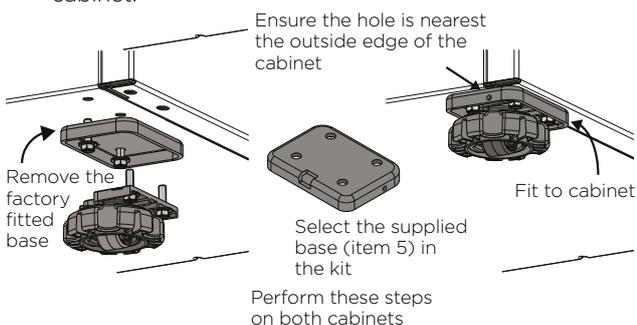


Fitting rear levelling feet

NOTE: Two people may be required for this operation


A set of adjustable back feet is provided with the kit. These parts are usually needed only in the case of a particularly

uneven floor and when height adjustments in phase 1.2.1 proved unsuccessful.


- Temporarily remove the screws holding the evaporator tray.
- Temporarily remove the 2 cabinet screws that will hold the foot.

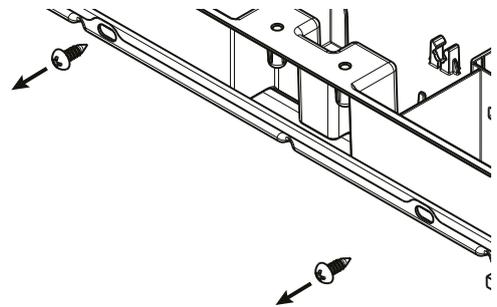

- Pre-assemble the two nuts on the foot.
- While one operator is lifting the appliance the other can assemble the foot.

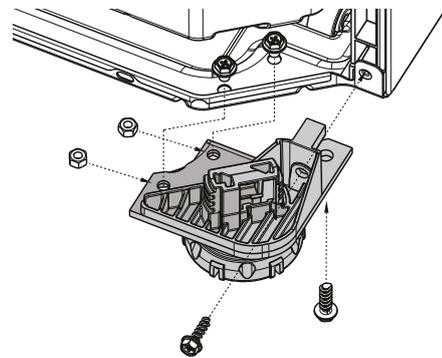

- Assemble right foot using the two cabinet screws that have previously been removed and the two bolts that come with the foot.
- Repeat the process for the other side.

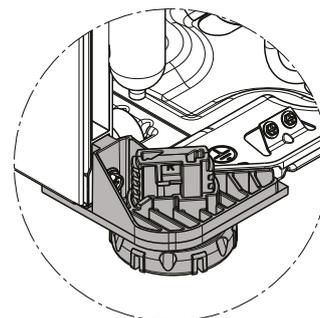


INSTALLATION

Joining the Appliances


Your appliances are delivered with hole covers that cover the screw holes. These holes are located on the top of the cabinet, opposite from the door hinge. Carefully remove these covers, care must be taken to avoid damaging the appliances.

Carefully pull the appliances together adjacent to the final installation location, then adjust the front and rear feet to the same height.

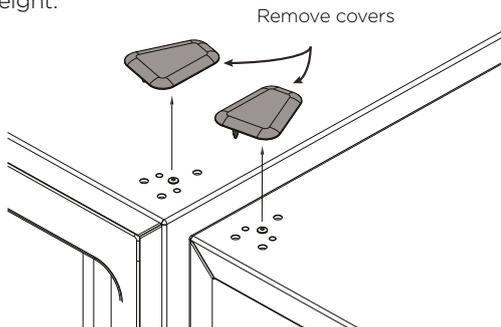


Top-front and bottom-rear bracket installation Install the top-front bracket

- Place the protective cardboard between the bracket and the cabinets.
- Assemble the top-front bracket, fit the screws in place, but do not tighten them yet leave the screws loose.

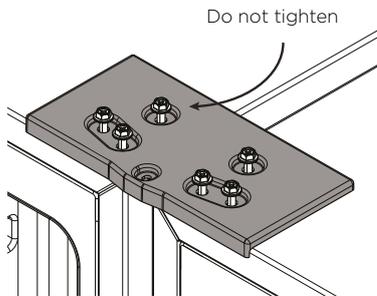


Install the rear-bottom bracket

- Unscrew the 2 central-upper compressor cover fasteners.
- Remove 2 screws.
- Assemble the rear-bottom bracket using the replacement screws provided.

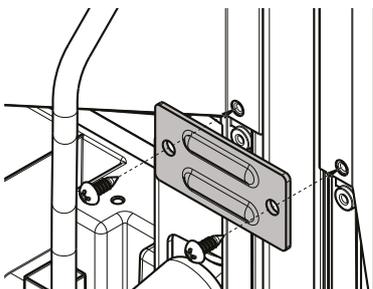



Bottom-front bracket installation - Position the bottom-front bracket

- Position the bottom-front bracket between the two cabinets.
- Fasten with the two M4 screws using a phillips head screwdriver.
- Extract the tensioner.



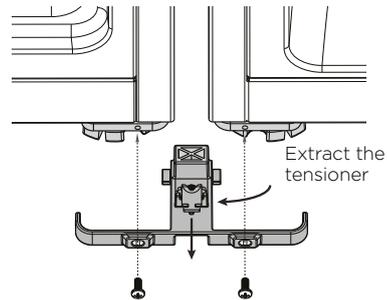


Fit the centre cover

- Push the centre cover between the two cabinets
- Engage the bottom end of the centre cover into the tensioner of the bottom-front bracket.
- Lift the top-front bracket (screws should be loose enough) and slide the centre cover underneath.
- Tighten the screws in the top-front bracket.
- Adjust the tensioner screw as required.
- Fasten the centre cover to the top-front bracket by means of the provided self-tapping screw

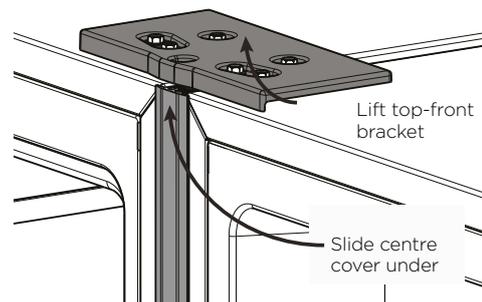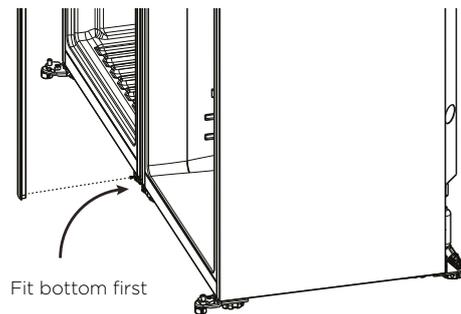


ADJUSTING DOOR ALIGNMENT

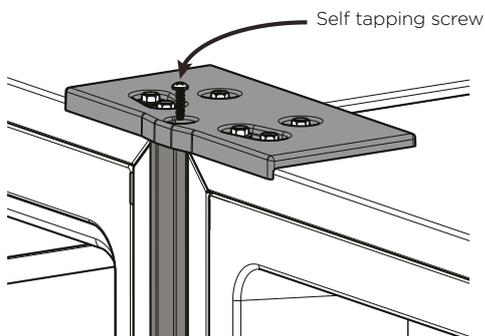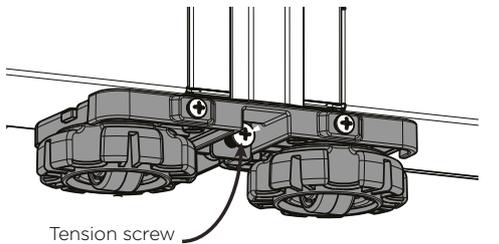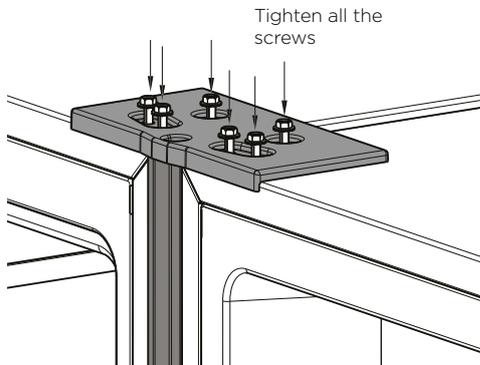


To complete installation of your joined appliances it may be necessary to slightly adjust door alignment on the individual appliance. This process is illustrated in the following section.

1. With the door open, remove the hinge cover by simultaneously pulling the cover away and up from the hinge. This action will release the clip that is retaining the cover to the hinge.

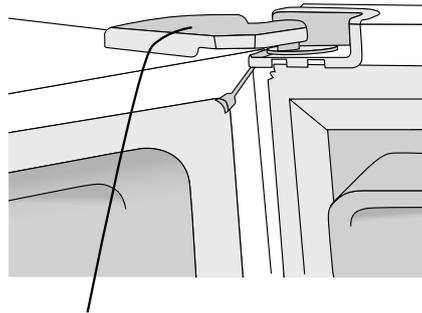

Small plastic clip is located here. With the door open, pull the cover outward while simultaneously pulling up in order to release the hinge cover.

2. Slightly loosen the three screws retaining the hinge to the cabinet. This will allow for slight movement of the cabinet door. Have the assistant hold the door in desired position and fully secure top hinge fasteners, inspect the alignment and if satisfied clip the hinge cover back onto the top hinge.

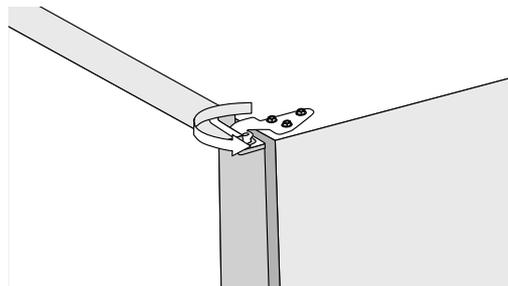

Loosening the top hinge fasteners will allow the top hinge to be slightly rotated thus adjusting the gap between doors.

For more information on all Westinghouse appliances, or for dimension and installation information, call into your retailer, phone or email our customer care team or visit our website:

AUSTRALIA

phone: 1300 363 640
fax: 1800 350 067
email: customercare@electrolux.com.au
web: westinghouse.com.au

NEW ZEALAND

phone: 0800 436 245
fax: 0800 225 088
email: customercare@electrolux.co.nz
web: westinghouse.co.nz

TOP SERVICE

Top Service encompasses the after sales service provided by The Electrolux Group to consumers including delivery, home service and spare parts.

 and WESTINGHOUSE are trademarks of Westinghouse Electric Corporation. Used under license. All Rights Reserved.

P/No. A04767002

© 2016 Electrolux Home Products Pty Ltd.
ABN 51 004 762 341
WMAN_WFRI_CONN_KIT_Sep16