



Spend more quality time with your family and leave the dirty work to us

If the kitchen is the heart of the home, then Westinghouse has been a central part of it for over 60 years. We love helping Australian families with products that are not only simple to use but also make life easier. For us, it's not about fancy features or the latest fads, it's about creating practical yet clever products that the whole family can use and enjoy every day.

Nobody enjoys cleaning up after a big family meal, so you can count on the Westinghouse range of dishwashers to tackle this chore. Our really clever dishwashers ensure that every

plate, dish and utensil comes out perfectly clean and dry. Our spacious FlexRack cutlery trays and adjustable baskets help accommodate up to 15 place settings, so you can relax and leave the dirty work to us. Not to mention our new ClearView control panels with large LED displays make for an easier and more natural view of what you need to do.

Choose a really clever Westinghouse dishwasher today.



Model shown: Freestanding dishwasher WSF67381S.

Dishwasher features



ClearView control panel

The large LED display is angled at an ideal tilt for a clearer and more natural view of controls whilst standing up. (except WSF6608 and WSF6606)



FlexZone Wash

Every load is different. That's why we created upper, lower or both basket zones to give you the flexibility to wash smaller loads when you need to. Plus, you'll also enjoy the added environmental benefits of saving water and energy. (except WSF6606)



A huge 15-place setting capacity

Now you can load more dishes and still get sparkling results. With a super generous capacity that can wash up to 15-place settings, any occasion can be handled with ease.



Hygiene option

Use the Hygiene option to get the perfect hygienic clean on the items that need it most. Ideal for chopping boards, knives and baby products, this clever feature sanitises your wash for pure, fresh results.



Sensor wash

Sensor wash assesses the load size and level of soil on the dishes and adjusts the wash cycle to optimise wash results. The load sensing feature quickly senses the load size optimising the use of water.



Faster wash cycles

Sometimes a quick wash is all you need for a smaller load. Use the quick 18 or 30 minute program for lightly soiled dishes. For regular soiled dishes the TimeSave 50 minute cycle is ideal for a full load. (Jet wash 18 mins is not included in WSF6608 or WSF6606)



FlexRack cutlery tray

Not only does our flexible cutlery tray wash all your utensils effectively, it can also safely fit long knives and other larger items. Created to suit your ever-changing needs, the cutlery tray can also be removed partially or taken out all together to fit taller items. (WSF6608, WSF67381S, WSU67381S)



Convenient fan drying results

When your load is finished, you can put your dishes away immediately without having to worry about opening the door to aid drying. That's because our dishwashers feature a fan, which assists the active drying process. The result is dry dishes every time. (WSF6608, WSF67381S, WSU67381S)



Height adjustable upper basket

For added convenience, the height adjustable upper basket can be easily lifted even when fully loaded. What's more, with the flexibility to adjust the upper basket as you need, you'll always find a place for everything.



Water safety system

Our advanced 3-stage anti-flood device automatically cuts off the water supply to the dishwasher, giving you peace of mind knowing your kitchen is protected.

Need more information?

phone: 1300 363 640
 fax: 1800 350 067
 email: customer care@electrolux.com.au
 web: westinghouse.com.au

Westinghouse. We are part of the Electrolux family.
 Share more of our thinking at electrolux.com.au

© and WESTINGHOUSE are trademarks of Westinghouse Electric Corporation. Used under license by Electrolux Home Products Pty Ltd. All Rights Reserved.

Top service

Electrolux Top Service encompasses the after sales service including Delivery, Home Service and Spare Parts.

Spare Parts and Accessories:

Westinghouse offers an extensive range of genuine spare parts and accessories to purchase across our entire range of products. With purchasing options to suit your shopping style, you can be sure we are always thinking of you. To view and purchase genuine spare parts and accessories online visit shop.westinghouse.com.au

To discuss and purchase genuine spare parts and accessories with one of our friendly staff call 1300 363 640. To find your nearest Electrolux spare parts retailer call 13 13 50.

Dishwasher

Features†



Model	WSU67381S	WSF67381S	WSF67251S	WSF6608X	WSF6606X / WSF6606W
Type	60cm build-under [±]	60cm freestanding [‡]	60cm freestanding [‡]	60cm freestanding [‡]	60cm freestanding [‡]
Available finish	mark-resistant stainless steel	mark-resistant stainless steel	mark-resistant stainless steel	mark-resistant stainless steel	mark-resistant stainless steel/white
Place settings	15	15	15	15	15
WELS* water star rating	4.5	4.5	4.5	4.5	4.5
Energy star rating	3.5	3.5	3.5	3	3
Operating noise level dB(A)	45	45	45	45	45
Push button controls	✓	✓	✓	✓	✓
Display	ClearView, LED	ClearView, LED	ClearView, LED	time remaining, LED	time remaining, LED
Features					
FlexRack cutlery tray	✓	✓		✓	
Upper basket	height adjustable 4 adjustable cup shelves	height adjustable 4 adjustable cup shelves	height adjustable 4 adjustable cup shelves	height adjustable 4 adjustable cup shelves	height adjustable 4 adjustable cup shelves
Lower basket	4 fold down racks	4 fold down racks	4 fold down racks	4 fold down racks	4 fold down racks
Cutlery basket	✓ (small)	✓ (small)	✓ (modular)	✓ (small)	✓ (modular)
Wash programs	8	8	8	8	6
Sensor wash (auto)	✓	✓	✓	✓	
Eco (50°C)	✓	✓	✓	✓	✓
TimeSave 50 mins (65°C)	✓	✓	✓	✓	✓
Fast 30 mins (40°C)	✓	✓	✓	✓	✓
Jet wash 18 mins (35°C)	✓	✓	✓		
Other	rinse	rinse	rinse	rinse, normal	rinse, heavy, intensive
Wash options					
FlexZone wash	✓ (upper/lower/both)	✓ (upper/lower/both)	✓ (upper/lower/both)	✓ (upper/lower/both)	✓ (upper)
Half load	✓	✓	✓	✓	
Hygiene	✓	✓	✓	✓	✓
Dry plus	✓	✓	✓	✓	
Tablet	✓	✓	✓	✓	✓
Delay start	✓ (1 - 24 hrs)	✓ (1 - 24 hrs)	✓ (1 - 24 hrs)	✓ (1 - 24 hrs)	✓ (1 - 24 hrs)
Drying system	fan assist dry	fan assist dry	active dry	fan assist dry	active dry
Sensors	soil level + load	soil level + load	soil level + load	soil level + load	load only
Number of spray arms	2 + top impeller	2 + top impeller	2 + top shower	2 + top impeller	2 + top shower
Safety					
Lower basket safety stopper	✓	✓	✓	✓	✓
Child lock on control	✓	✓	✓	✓	✓
Water safety system	3 stage anti-flood device	3 stage anti-flood device	3 stage anti-flood device	3 stage anti-flood device	3 stage anti-flood device
Specification					
Dimension H x W x D* (mm)	(820-870)x598x598	850x598x598	850x598x598	850x598x598	850x598x598
Height adjustable (mm)	0-50	0-20	0-20	0-20	0-20
Silver kick panel included	80-130mm				
Removable worktop		✓ (for built under installation)	✓ (for built under installation)	✓ (for built under installation)	✓ (for built under installation)
Water inlet	cold or hot#	cold or hot#	cold or hot#	cold or hot#	cold or hot#

± Built-under - Dishwasher needs to be secured under a counter with supplied brackets and screws. Option to integrate the dishwasher behind a cabinetry kick panel if required.

‡ Freestanding - Dishwasher does not need to be secured under a counter. It can remain as a freestanding unit or fit into a cavity. The top panel can be removed if needed to fit under a tight fitting benchtop.

* WELS Standard AS/NZS 6400.2005.

Water up to 60°C can be used.

^ Depth measured to front corner of door, excludes control panel.

Warranty

Electrolux Home Products Pty Ltd and Electrolux (NZ) Ltd warrant that for domestic application, the Westinghouse Dishwashers featured in this brochure are free from defects in materials and workmanship for a period of 24 months from the date of first purchase, subject to the conditions set out in the warranty card accompanying the product when purchased. They are not suitable for applications where special health and industry requirements and regulations apply.

† Product information

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous product development, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes the products that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products Pty Ltd and Electrolux (NZ) Ltd will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours of products illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Competition and Consumer Act 2010, Australian Consumer Law and Regulations (for Australia) and Consumer Guarantees Act (NZ), Sale of Goods Act (NZ) and Fair Trading Act (NZ Consumer Law) for New Zealand.