


ESF6767KXA

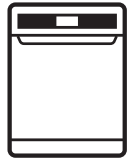

---

Dishwasher

---

User manual



**Electrolux**

## CONGRATULATIONS

Thank you for purchasing an Electrolux dishwasher. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

## REGISTERING YOUR APPLIANCE

Please visit our website [www.electrolux.com.au/register](http://www.electrolux.com.au/register) to quickly and easily register your product.

## BEFORE USING YOUR APPLIANCE

Check for any damage or marks. If you find the appliance damaged or marked you must report it within 7 days to claim for damages under the manufacturers warranty.

Before you use the appliance, we recommend that you read through the whole user manual which provides the description of the product and its functions. It is important that the product is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

For future reference, please store this booklet in a safe place.

This appliance complies with the requirements of Australian Standard AS/NZS 60335.2.5.

## CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments.

## BEFORE YOU CALL

Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable. Record model and serial number here:

Model number: \_\_\_\_\_

Serial number: \_\_\_\_\_

PNC number: \_\_\_\_\_

## CONTENTS

Safety information .....	3
Product description .....	5
Getting familiar with your machine .....	6
Programs .....	7
Options .....	9
Before first use .....	10
Daily use.....	11
Settings.....	12
Hints and tips .....	17
Loading your dishwasher.....	19
Care and cleaning.....	21
Consumption values .....	22
Power half load consumption values.....	23
Care and cleaning.....	24
Troubleshooting .....	24
Technical specifications .....	27
Installation .....	29
Notes .....	38
Warranty.....	31

### **IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY**

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

# SAFETY INFORMATION

## SYMBOLS



### WARNING!

This symbol indicates information concerning your personal safety.



### CAUTION!

This symbol indicates information on how to avoid damaging the appliance.



### IMPORTANT!

This symbol indicates tips and information about use of the appliance.



### ENVIRONMENT!

This symbol indicates tips and information about economical and ecological use of the appliance.

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

### Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

### General Safety

- Do not change the specification of the appliance.
- The operating water pressure (minimum and maximum) must be between 0.3 (0.03) / 10 (1.0) bar (MPa)
- Obey the maximum number of 15 place settings.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Put cutlery in the cutlery basket with the sharp ends pointing down or put them in the cutlery drawer in horizontal position with the sharp edge down.
- Do not leave the appliance with the open door unattended to avoid stepping accidentally onto it.

- Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- If the appliance has ventilation openings in the base, they must not be covered e.g. by carpet.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose-sets must not be used.

### Safety instructions

#### Installation

- Remove the packaging.
- Do not install or use a damaged appliance.
- Do not install or use the appliance where the temperature is less than 0°C.
- Follow installation instructions supplied with appliance.
- Make sure that the appliance is installed below and adjacent to safe structures.

#### Electrical connection



### WARNING!

#### Risk of fire and electrical shock

- The appliance must be earthed.
- Make sure the parameters on the rating plate are compatible with the electrical ratings of the main power supply.
- Always use a correctly installed shock proof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Connect the mains cable to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

#### Water connection

- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters etc.), let the water flow until it is clean and clear.

# SAFETY INFORMATION

## Use

- Do not sit or stand on the open door.
- Dishwasher detergents are dangerous. Follow the safety instructions on the detergent packaging.
- Do not drink and play with the water in the appliance
- Do not remove the dishes from the appliance until the program is complete. Some detergent may remain on the dishes.
- The appliance can release hot steam if you open the door while a program operates.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.



## Disposal




### **WARNING!**

- **Risk of injury or suffocation**
- **Disconnect the appliance from the mains supply.**
- **Cut off the mains cable and discard it.**
- **Remove the door catch to prevent children and pets to get closed in the appliance.**





## Environmental concerns

- Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.
- Ensure that there are no visible water leaks during and after the first use of the appliance.
- If the water inlet hose is damaged immediately close the water tap and disconnect the mains plug from the mains socket. Contact the Authorised Service Centre to replace the water inlet hose.


# PRODUCT DESCRIPTION

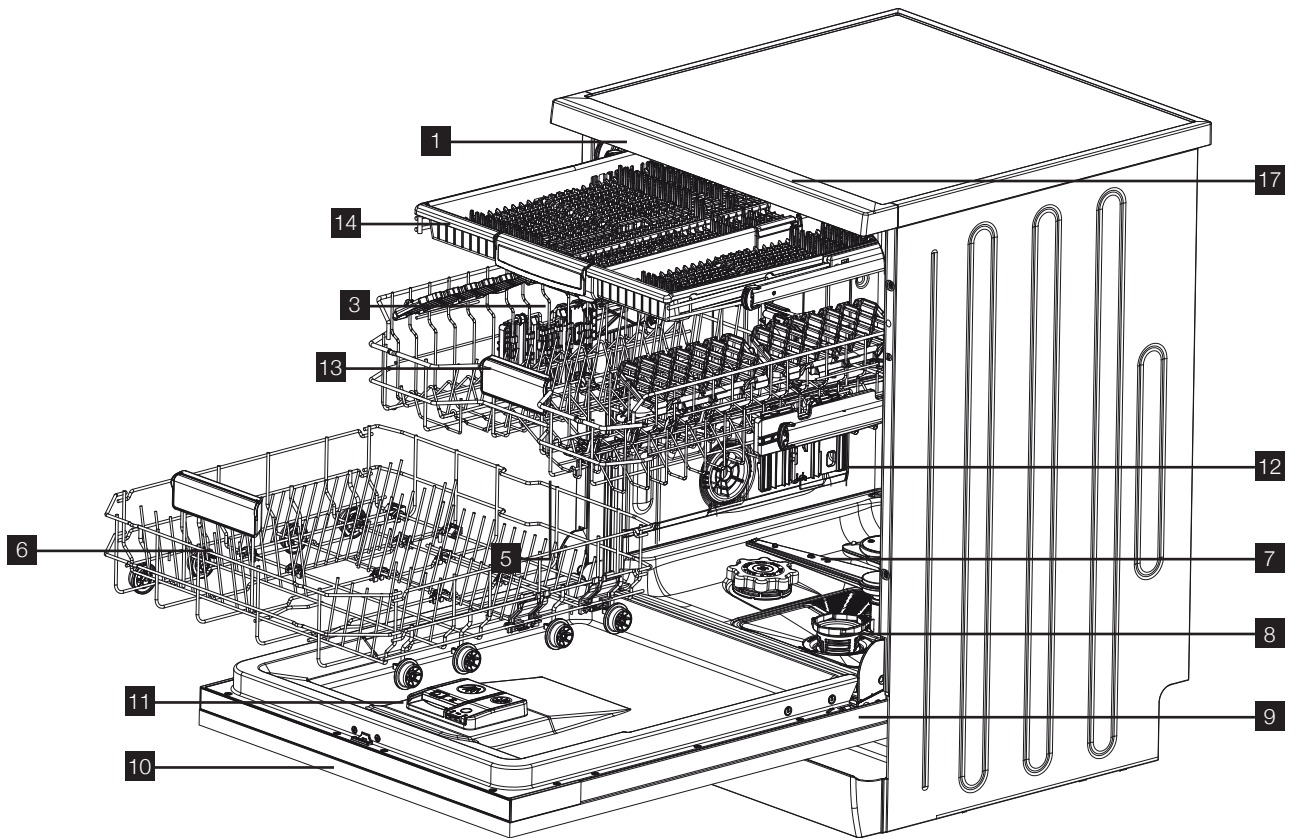

- 1 Worktop
- 2 Glass stem grip on cup racks
- 3 Upper basket with cup racks
- 4 Upper basket direct wash system
- 5 Upper spray arm
- 6 Lower basket with folding supports
- 7 Lower spray arm triple wash system
- 8 Filters
- 9 Rating plate
- 10 Control panel
- 11 Detergent and rinse-aid dispenser
- 12 Upper basket height adjusting mechanism
- 13 Basket handle
- 14 Cutlery tray
- 15 Ceiling spray
- 16 Turbo drying unit
- 17 Door latch

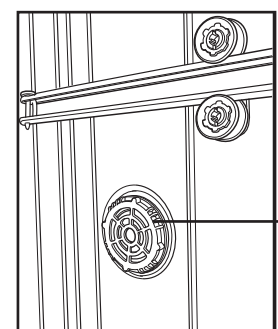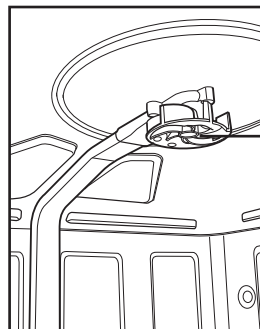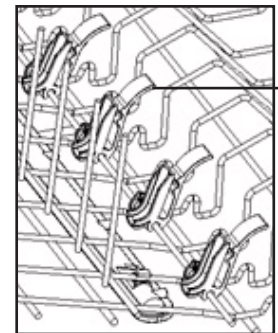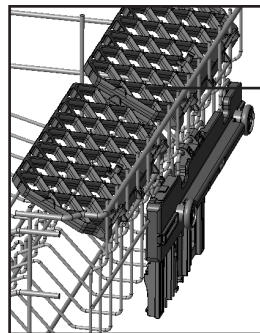


# GETTING FAMILIAR WITH YOUR MACHINE

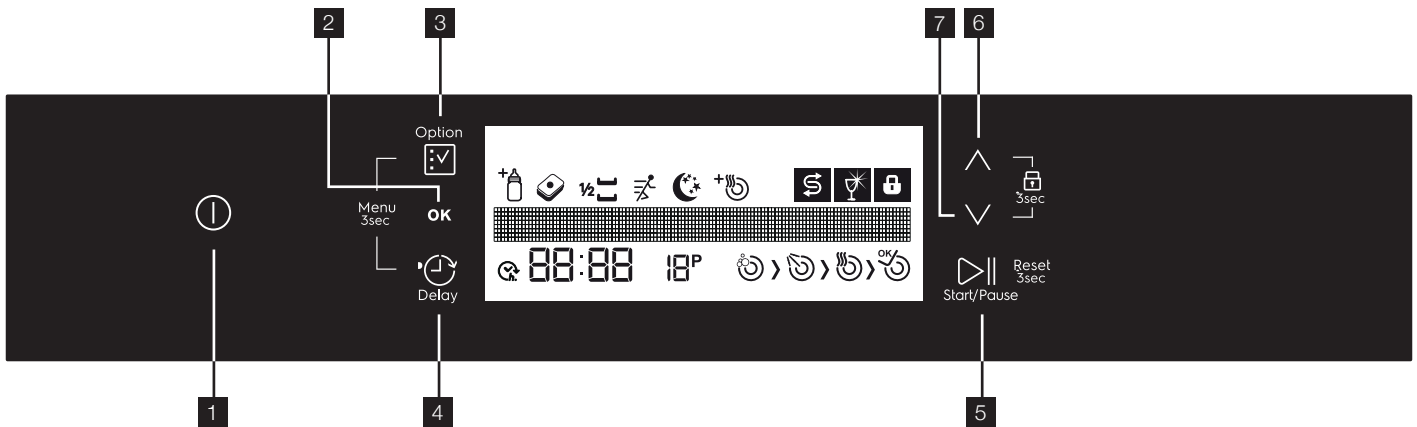

- 1 On/Off
- 2 Confirmation Button
- 3 Option Button
- 4 Delay Start Button
- 5 Start/Pause button
- 6 Up Selection Button
- 7 Down Selection Button
- 8 Extra Hygiene Indicator
- 9 Tablet Indicator
- 10 Half Load Indicator
- 11 Extra Fast Indicator
- 12 Extra Silent Indicator
- 13 Extra Drying Indicator
- 14 Rinse Aid Level Warning Indicator
- 15 Child Lock Indicator
- 16 Delay Start Indicator
- 17 Remaining Time/Delay Time Indicator
- 18 Program Number Indicator
- 19 Display Information Line
- 20 Washing cycle progress indicators

- a Washing Cycle Symbol
- b Rinse Cycle Symbol
- c Drying Cycle Symbol
- d End Cycle Symbol

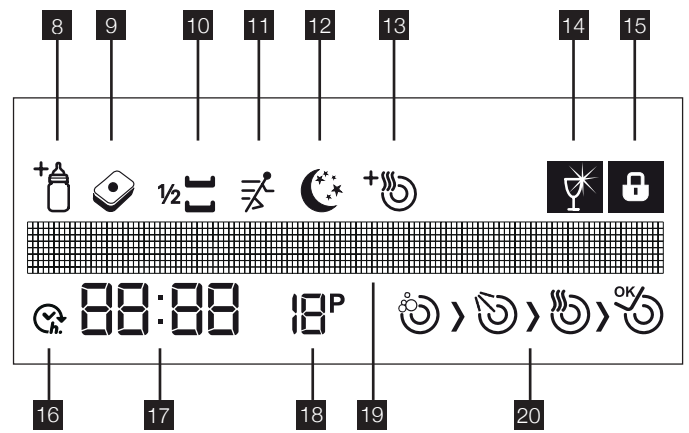

## Buttons



### 1. Power On/Off Button

When you press the on/off button, the machine is energized and the display shows the last used program; in the off position, the LEDs on the display are off.



### 2. Confirmation Button

Confirms (saves) your additional functions and settings.



### 3. Option Button

Allows you to use the functions in the additional functions menu. (8-9-10-11-12-13).



### 4. Delay Button

Delays the starting time of the program you have selected (1-24 hours). You may see the delay time in the Remaining Time/Delay Time Indicator (17). When the delay button is pressed, Delay Indicator (16) is seen on the display.



### 5. Start/Pause Button

When you press the Start/Pause Button, the selected program starts and washing symbol (a) appears on the display. You may follow the washing phases on the display. (20-a-b-c-d).



### 6. Up/Down Buttons

Allows you to browse in Program, Additional functions, delay and settings menus.

# PROGRAMS

Program	Degree of soil type of load	Program phases	Options	Detergent Amount
<b>PreWash</b>	-	Cold rinse	Delay start, Power Half load, Child lock	-
<b>Jetwash 14'</b>	Low soil levels, fresh light soil, coffee, milk, tea	Main wash Hot rinse	Delay start, Power Half load, Child lock	25
<b>Quick 30'</b>	Low soil levels, fresh light contamination, coffee, tea, milk, cold meat, vegetables	Main wash 40°C Cold rinse Hot rinse	Delay start, Power Half load, Child lock, Extra drying	15
<b>Eco</b>	Normal soil levels, old soups, sauces, pastries, egg, rice, potato and oven foods, fried foods	Cold rinse Main wash 50°C Warm rinse Hot rinse	Delay start, Power Half load, tablet, child lock, extra fast, extra hygiene, extra drying, extra silent	40
<b>Super 50'</b>	Medium soil levels, old soups, sauces, pastries, egg, rice, potato and oven foods, fried foods	Main wash 65°C Warm rinse Hot rinse	Delay start, Power Half load, tablet, child lock, extra hygiene, extra drying	40
<b>Daily 60°C</b>	Heavy soil levels, old soups, sauces, pastries, egg, rice, potato and oven foods, fried foods	Cold rinse Main wash 60°C Cold rinse Hot rinse Dry	Delay start, Power Half load, Tablet, Child lock, Extra fast, Extra hygiene, Extra silent, Extra drying	40
<b>FlexiWash 60°C</b>	For both delicate glassware and heavily soiled crockery at the same time	Prewash 40°C Main wash 60°C Inter rinse 45°C Hot rinse Dry	Delay start, Power Half load, Tablet, Child lock, Extra fast, Extra hygiene, Extra silent, Extra drying	40
<b>AutoFlex 30°C - 50°C</b>	Automatically adjusts the washing time, temperature and amount of water by determining the soil level of dishes	Washing steps are determined automatically according to the level of soil.	Delay start, Power Half load, Tablet, Child lock, Extra hygiene, Extra drying	15
<b>AutoFlex 50°C - 60°C</b>			Delay start, Power Half load, Tablet, Child lock, Extra hygiene, Extra drying	40
<b>AutoFlex 60°C - 70°C</b>			Delay start, Power Half load, Tablet, Child lock, Extra hygiene, Extra drying	40

## Dual Wash

This program is to wash both delicate/less soiled dishes and heavily soiled dishes at the same time. The delicate dishes on the upper basket are washed at a lower pressure and the heavily soiled dishes on the lower basket are washed at a higher pressure.

**Jetwash 14'** program can be used for low levels of fresh soil, It is suitable for dishes of four persons. Only powder detergent should be used.

**Warning:** In Jetwash 14' min, Quick 30 min and Super 50 min programs, there is no drying step.

# PROGRAMS (CONTINUED)

## Additional Options



### 8. Extra Hygiene option

You may select this option in order to obtain extra hygiene and a cleaner washing process by altering the water temperature and washing time of the program you have selected.



### 9. Tablet Detergent option

Please use the Tablet Detergent option while using salt, rinse agent and combined detergents with extra properties.



### 10. Power Half Load option

Using the extra lower/upper basket function, three sorts of washing up can be done those being lower basket, upper basket and both baskets.

If you have only a few dishes in your machine and you would like to wash them, you can also activate the semi-filling function for some programs. If you have dishes in both baskets, press the key and select the position in which both lamps (10) are highlighted.

If you have dishes in the upper basket only, press the extra lower/upper basket key and select the icon where the figure above is lit. Thus your machine will perform washing in the upper basket, and a detailed washing cycle will be carried out by the extra water jet in the upper basket.

If you have dishes in the lower basket only, press extra lower/upper basket key and select the icon where the figure above is lit. Thus, your machine will perform washing in the lower basket, and a 360° washing cycle will be carried out by the two extra water jets on the base. Make sure that there are no dishes in the upper basket while using this feature.



### 11. Extra Fast option

Washes the dishes with more pressure, thus shortens the time of the selected program and provides economical water usage.



### 12. Extra Silent option

Washes the dishes with less pressure, thus provides more sensitive and silent washing.



### 13. Extra Drying option

With extra drying function, you may add extra drying steps to your program and thus obtain drier dishes.

## Warning Indicators



### 14. Rinse Agent Level Warning Indicator

In order to understand whether the rinse agent in your machine is sufficient or not, please check the rinse agent level warning display. If this display is illuminated, fill the rinse agent compartment.



### 15. Child lock indicator

When this indicator is displayed the Child lock function is on and control panel button operations are disabled.



### 16. Delay start indicator

When a delay start has been selected, this indicator is illuminated and the selected delay time is shown in the digital display (17).

### 17. Time indicator

The digit display indicates the program time, remaining time or the delay start time when selected.

### 18. Program number display


This display indicates the program number selected.

### 19. Information display

Program information, function selections and warnings are displayed in this section of the panel.

### 20. Washing progress indicators

These indicators progressively illuminate to show the program phases - Washing (a), Rinsing (b), Drying (c) and End (d).

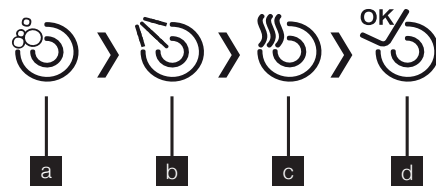



# SETTINGS

## Turning on the Machine

Press Power On/Off switch ①. (1)


Note: Select your washing program appropriate for your dishes with the help of the program list on page 7.

Select the washing program by using up/down (6,7) selection buttons. Note: The program time is indicated in the display.


If required select additional options by using the option button [✓].

You can start the program by pressing the Start/Pause button ▷||. (5)

“Program Activated” will appear on the display and the selected program will start.

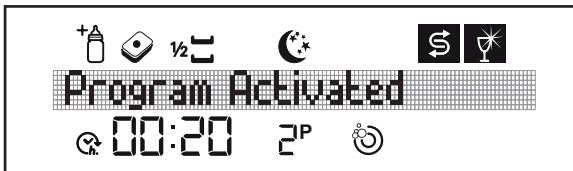

When the program starts, you will see the name of the selected program in the Display information line (19), remaining washing time in the remaining time indicator (17) and the program number of the selected program in the program number indicator (18).

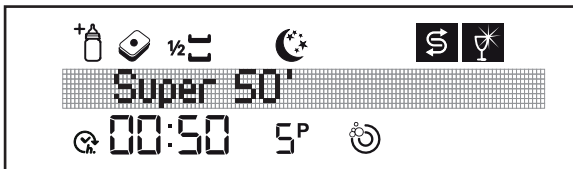


### Note

Try not to open the door of the machine while it is operating; if you absolutely need to, stop the program by pressing Start/Pause button.

“Program Paused” will appear on the display. Once you see this text, you may open the door. Steam might come out when you open the door – be careful.


You may resume the program after closing the door and pressing the Start/Pause button again. When you press the Start/Pause button, “Program Activated” will appear on the display.

## Program progress indicator

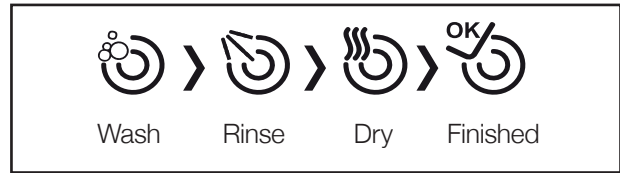

You can follow the progress with the help of the program progress symbols on the display.

When the program you have selected starts, you may see the estimated remaining time in the time indicator.

**Note:** A few minutes after the program finishes and the Finished Symbol  is illuminated, you may open the door slightly and leave it ajar in order for the drying process to be faster.

**Note:** If the machine door is opened or a power failure occurs during washing, the machine will proceed from where it stopped after the door is closed or power is restored.

**Note:** If a power cut occurs or if the door is opened during drying, the program ends. The machine will be ready for selecting a new program.

# SETTINGS (CONTINUED)

Options	Delay Start	Power Half Load (3 modes)	Tablet	Child Lock	Extra Fast	Extra Hygiene	Extra Silent	Extra Drying
Delay Start		✓	✓	✓	✓	✓	✓	✓
Half Load (3 modes)	✓		✓	✓	✓	✓	✓	✓
Tablet	✓	✓		✓	✓	✓	✓	✓
Child Lock	✓	✓	✓		✓	✓	✓	✓
Extra Fast	✓	✓	✓	✓		x	x	✓
Extra Hygiene	✓	✓	✓	✓	x		x	x
Extra Silent	✓	✓	✓	✓	x	x		✓
Extra Drying	✓	✓	✓	✓	✓	x	✓	

### In order to add additional options to the program;

Select the appropriate washing program for your dishes using the up/down buttons  $\updownarrow$  after pressing the option button  $\square$ .

Enter the additional options menu by pressing the option button  $\square$ . After selecting the additional option using up/down buttons  $\updownarrow$ , illuminate the additional option indicators by pressing the confirmation button **OK**.

Some options cannot be selected at the same time; refer to the chart for allowable combinations.

Start the program by pressing the Start/Pause button  $\triangleright||$ .

“Program activated” will appear on the display.

### Changing the Program

If you want to change a washing program after it has been started;

1. Pause the program by pressing the Start/Pause  $\triangleright||$  button. “Program paused” will appear on the display.
2. Select the desired program by pressing the selection buttons  $\updownarrow$ .
3. Start the program by pressing the Start/Pause button  $\triangleright||$  again.

“Program activated” will appear on the display.

### Note

 
The new program starts from the step where the previous program was left. If you want the new program to start from the beginning, you must first cancel the previous program and then select a new one.


### Cancelling the Program


1. Hold the Start/Pause button  $\triangleright||$  for 3 seconds to cancel a program.
2. The display will show (“Program Cancelling ..X”) to let you know how many more seconds you have to hold the button. 1 minute after you do this, “Program Finished” will appear.
3. After this warning, you may select an additional function or time setting.

### Note

Depending on the step where the cancelled program was left, there may be detergent leftovers within the machine or on the dishes.

You may change the program according to your preferences by selecting additional options to the washing program. The washing programs have been designed so as to obtain the best cleaning considering the type and amount of food soil properties of the washing materials. The additional options were developed in order to save time, water and electricity and thus allow you to wash your dishes more conveniently. For example, if you think your dishes are slightly dirty, you may select the Fast option  and make your washing process more economical in terms of time and water.

If you are going to use a multipurpose detergent, you obtain better performance by selecting tablet detergent  option.

If you live in a place where electricity is cheaper to use at night, you might select the silent option  and wash your dishes more economically and silently; this function was developed also for a more sensitive washing process.






Additional options are not suitable for every program; you might find below the functions suitable for the programs. For the programs not suitable for additional options, you will see that the option indicator is not illuminated.

Programs	Options							
	Delay Start	Power Half Load (3 modes)	Tablet	Child Lock	Extra Fast	Extra Hygiene	Extra Silent	Extra Silent
PreWash	✓	✓	✗	✓	✗	✗	✗	✗
Jetwash 14'	✓	✓	✗	✓	✗	✗	✗	✗
Quick 30'	✓	✓	✗	✓	✗	✗	✗	✓
Eco	✓	✓	✓	✓	✓	✓	✗	✓
FlexiWash 60°C	✓	✓	✓	✓	✓	✓	✓	✓
Super 50'	✓	✓	✓	✓	✗	✓	✗	✓
Daily 60°C	✓	✓	✓	✓	✓	✓	✓	✓
AutoFlex 60°C - 70°C	✓	✓	✓	✓	✗	✓	✗	✓
AutoFlex 50°C - 60°C	✓	✓	✓	✓	✗	✓	✗	✓
AutoFlex 30°C - 50°C	✓	✓	✓	✓	✗	✓	✗	✓

“✗” Function cannot be selected “✓” Function can be selected.

# SETTINGS (CONTINUED)


## Settings Menu

In order to enter the Settings Menu, hold the option  and delay  buttons for 3 seconds. The display will show ("Keep Pressing ..X") to let you know how many more seconds you have to hold the button. When this number is zero, you will see the Menu settings on the display. You may navigate within the menu by using the selection buttons . In order to exit the menu, hold the option  and delay start  buttons for 3 seconds or you may select the seventh row in the menu with the confirmation button **OK**.

The menu content is as follows:

1. Language
2. Rinse-aid
3. Volume
4. Brightness
5. Eco mode
6. Factory Settings
7. Exit Menu

## Language settings

After you enter the menu settings, use up/down selection buttons  to select the language. The display will show (1.Language: X) in which "X" is the current language.

Press the confirmation button to activate the language selection and after selecting the new language, save it by pressing the confirmation button **OK** again.


Available languages that you can select:

English	Greek	Nederlands	Polish
Turkish	Croatian	Swedish	Czech
French	Russian	Dansk	Slovene
Deutsch	Finnish	Spanish	Hungarian
Italian	Norwegian	Portuguese	

## Rinse-aid settings


In order to understand whether the rinse agent in your machine is sufficient or not, please check the rinse agent level warning display. If this display is illuminated, fill the rinse agent compartment.

## Volume level


After entering the menu, select the "3- Volume" by using the selection buttons . Here you will see "Volume:X"

(X:L1,L2,L3). L1 is the lowest, L3 is the highest volume level. After pressing the confirmation button **OK**, activate "X", select the desired noise level and save the selection by pressing the confirmation button **OK** once more.


## Brightness level

After entering the menu, select the "4- Brightness" by using the selection buttons . Here you will see "brightness :X" (X:L1,L2,L3). L1 is the lowest, L3 is the highest brightness level. select the desired brightness level and save the selection by pressing the confirmation button **OK**, activate "X" and save by pressing the confirmation button **OK** once more.

## Eco mode



This mode saves energy by minimizing the display brightness level after 15 minutes of non-operation. After entering the menu, select the "5- Eco mode" by using the selection buttons . Here you will see "Ecomode: X" (X:YES or NO). After pressing the confirmation button **OK**, activate "X".


## Factory Settings



In order to discard all the settings you made and restore the factory settings, select the "6- Factory settings" by using the selection buttons . Here you will see "6.Factory settings: "X" (X:yes or no). After pressing the confirmation button **OK**, activate " X "; you might save your selection by selecting "Yes" or "No" and pressing the confirmation button **OK** again. When you restore the factory settings, the machine will return to the following settings:


Language	English
Rinse-aid	L4
Volume	L2
Brightness	L3
Eco Mode	Yes

## Child Lock

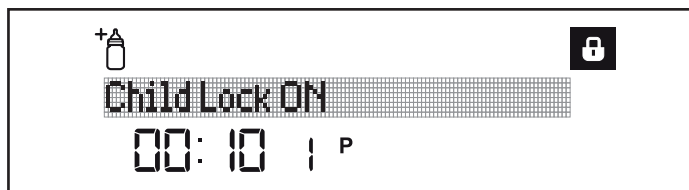Child lock prevents others from modifying your settings while the machine is in operation. After starting the program, press the up selection button and down selection button  at the same time for 3 seconds. This screen will inform you as to how many seconds you need to hold the buttons by "Keep Pressing..X". When this time is over, the child lock is activated, "Child Lock ON" appears on the screen and the indicator  is illuminated. When the child lock is active, all the buttons are deactivated.





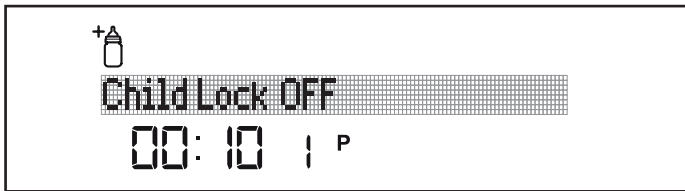

In order to cancel the child lock, press the up selection button and down selection button  at the same time for 3 seconds. This screen will inform you as to how many seconds you need to hold the buttons by "Keep Pressing..X". When this time is over, the child lock is cancelled, "Child Lock OFF" appears on the screen and the indicator  is off.




### Delayed Start



The starting time of the selected program can be delayed up to 24 hours. You can not make a delay setting after the program starts. In order for you to be able to make a delay setting, the selected program must not to be in operation.

- 1 Press the delay start button 
- 2 Hour "00:00" is displayed on the display information line (20) and the delay symbol  starts flashing.
- 3 Set the delay time with the selection buttons  to the desired time. The "▲" button increases the time by 1 hour while "▼" button decreases by 1 hour.




By pressing the Start/Pause button , you may start the countdown until the delay time.

The delay symbol  will continuously be illuminated during this period. Remaining Time/Delay Time indicators display the delay time. After the countdown is over, the selected program will start. The indicator screen will begin to show the time remaining until the end of the selected program.

### Changing the program or function on Delayed Start:

Pause the machine by pressing the Start/Pause button ; the countdown will stop and the "program paused" and "Delay timer active" appear on screen. If you press the buttons without pausing the machine, you will receive warnings such as "Delay timer active" or "invalid". After pausing the Delayed Start, you may select program and add functions to the program. By pressing the Start/Pause button  once more, starts the countdown for the delay time.

### If you want to cancel or make a new time setting when the machine is on Delayed Start;

If you want to reschedule the delay time, stop the countdown by pressing the Start/Pause button . Press the delay start button  to enter the delay menu; set the new Delay time by pressing the selection buttons. Start the countdown by pressing the Start/Pause button .

**If you want to cancel the delay setting**, hold the Start/Pause button  for 3 seconds.

The display will inform you how many seconds you need to hold the button by "Program Cancelling .. X". This way, the delay countdown is cancelled.

# BEFORE FIRST USE




1. Fill the rinse aid dispenser.
2. Turn on the water tap.
3. Start a program ('Super 50' is recommended) to remove any processing residuals that can still be inside the appliance. Do not use detergent and do not load the baskets.

## Filling the rinse-aid and setting

To fill the rinse aid compartment, open the rinse-aid compartment cap. Fill the compartment with rinse aid until MAX level and then close the cap. Be careful not to overfill the rinse aid compartment and wipe up any spills.

Rinse aid level is changed by using Rinse aid menu.

Be careful not to overfill the rinse aid compartment and wipe up any spills.

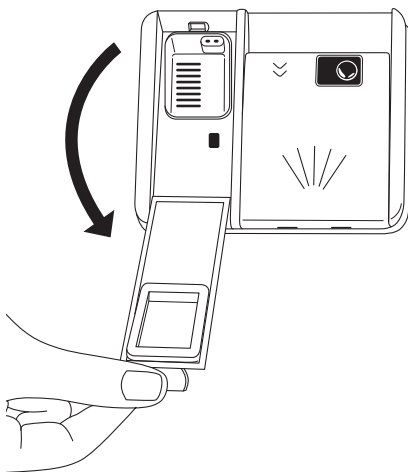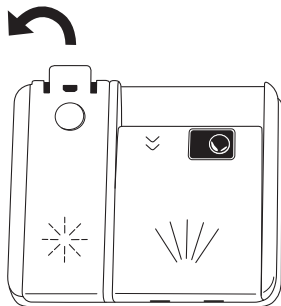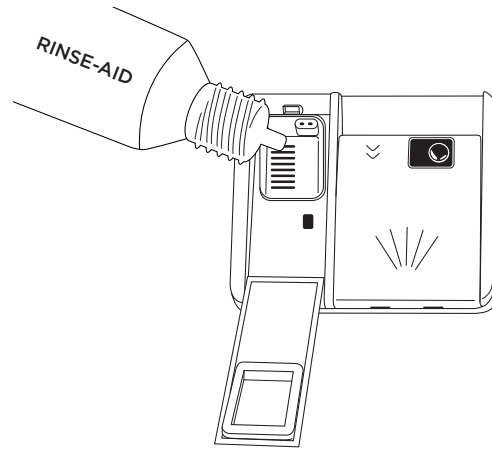





## **i** IMPORTANT!

**Fill the rinse aid dispenser when the indicator on the display illuminates.**

**If you use multi-tablets we recommend to always use rinse aid for better drying performance, also in combination with multi tablets containing rinsing agent.**

## DAILY USE


1. Turn on the water tap.
2. Press the on/off button  to activate the appliance. Make sure that the appliance is in program selection mode. If the rinse aid indicator  is on, fill the rinse aid dispenser.
3. Load the basket.
4. Add the detergent.
5. Set the start, the correct program  and options  for the type of load and the degree of soil. See Settings section for more detail.

### Adding the detergent



**CAUTION**  
Only use detergent specifically designed for dishwashers

Press the latch to open the detergent container as shown in the image.

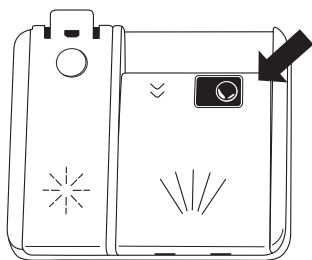


Detergent container has level lines inside. It is possible to measure the right detergent amount using these lines.


The detergent container can take a maximum of 40cm<sup>3</sup> detergent.

Open the dishwasher detergent container and pour 25cm<sup>3</sup> if your dishes are heavily soiled or 15cm<sup>3</sup> if they are less soiled.

You may have to add more detergent into your machine, depending on the degree of soil and the water hardness in your area.

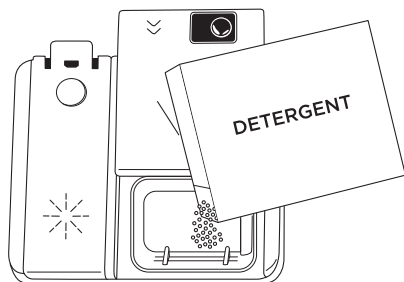

If your dishes are from the previous day and there is dried food waste on them, or if you have fully loaded the dishwasher, pour 5cm<sup>3</sup> detergent onto the base of the door and start your machine.

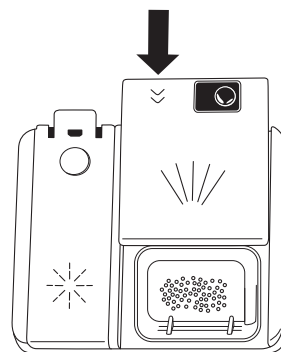

To close the detergent container, push the cover as shown until it locks.



**CAUTION**  
Solubility of the tablet detergents produced by different companies can vary depending on the temperature and time. Therefore, it is not recommended to use tablet detergents in short programs. It is more suitable to use powder detergents for these programs.



**IMPORTANT!**  
If your dishes have been dirty for a long period, if there is dried food waste on them and if you have fully loaded the dishwasher, pour 5cm<sup>3</sup> detergent into the pre-wash compartment and start your machine.

You may have to add more detergent into your machine, depending on the degree of soil and on the water hardness level.

### Opening the door while the appliance operates

If you open the door while a program is running, the appliance stops. It may affect the energy consumption and the program duration. When you close the door, the appliance continues from the point of interruption.



**CAUTION**  
When opening the door of the machine while a program is in progress, open the door slightly in order to avoid spillage of hot water with detergent, or excessive steam.



**IMPORTANT!**  
Make sure that there is detergent in the detergent dispenser before you start a new program.

### End of program.

When the program is completed, open the door and press the power button to turn off the appliance.

Turn off the water tap.

# HINTS AND TIPS

## General

The following hints will ensure optimal cleaning and drying results in daily use and also help to protect the environment.

- Remove larger residues of food from the dishes into the waste bin.
- Do not pre-rinse dishes by hand.
- When needed, use the prewash program (if available) or select a program with a prewash phase.
- Always use the whole space of the baskets.
- When loading the appliance, make sure that the dishes can be completely reached and washed by the water released from the spray arm nozzles. Make sure that items do not touch or cover each other.
- You can use dishwasher detergent, rinse aid and salt separately or you can use the multi-tablets (e.g. "3-in-1", "4-in-1", "All-in-1"). Follow the instructions written on the packaging.
- Select the program according to the type of load and degree of soil.

With the ECO program you have the most efficient use of water and energy consumption for crockery and cutlery with normal soil.



## ENVIRONMENT!

**Operate the machine after it is completely full.**

**Use pre-washing program only when necessary.**

If the appliance is in a location where the risk of freezing exists, you must completely drain the water that has remained in the machine. Turn off the tap and drain the water from the inlet hose.

## Using rinse aid and detergent

- Only use rinse aid and detergent for dishwashers. Other products can cause damage to the appliance.
- At least once a month run the appliance with the use of appliance cleaner which is particularly suitable for this purpose.
- Detergent tablets do not fully dissolve with short programs. To prevent detergent residues on the tableware, we recommend that you use the tablets with long programs.
- Do not use more than the correct quantity of detergent. Refer to the instructions on the detergent packaging.

## What to do if you want to stop using multi-tablets

Before you start to use detergent and rinse aid separately, follow this procedure.

1. Make sure that the rinse aid container is full.
2. Start the shortest program with a rinsing phase. Do not add detergent and do not load the baskets.
3. Adjust the released quantity of rinse aid.

## Before starting a program

Make sure that:

- The filters are clean and correctly installed.
- The spray arms are not clogged.
- There is dishwasher rinse aid (unless you use multi-tablets).
- The position of the items in the baskets is correct.
- The program is applicable for the type of load and for the degree of soil.
- The correct quantity of detergent is used.



## CAUTION!


**Ensure that the dishes loaded in the baskets will not block the upper and lower spray arms and prevent them from spinning.**

## Loading the baskets

- Only use the appliance to wash items that are dishwasher-safe.
- Do not put in the appliance items made of wood, horn, aluminium, pewter and copper.
- Do not put in the appliance items that can absorb water (sponges, household cloths).
- Remove larger residues of food from the dishes into the waste bin.
- Soak (soften) and remove any burnt food from your crockery before placing in the dishwasher.
- Put hollow items (cups, glasses and pans) with the opening down.
- Make sure that glasses do not touch other glasses.
- Put cutlery and small items in the cutlery drawer.
- Put light items in the upper basket. Make sure that the items do not move.
- Make sure that the spray arms can move freely before you start a program.




## Upper basket

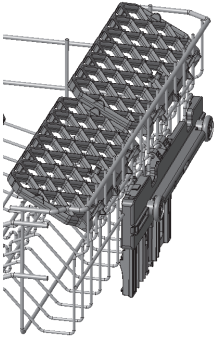

### Height adjustable cup rack

These racks are designed to increase the capacity of the top basket. You can place your glasses and cups on the racks. You can adjust the height of these racks. Thanks to this feature, you can place different sizes of glasses under these racks.

If you have delicate stemmed glasses, the soft supports will support and protect the glasses.

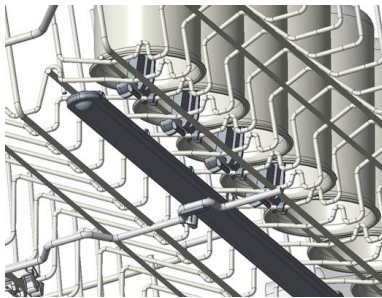


Due to the height adjustment mechanism mounted on the basket, you can use your cup racks at two different heights.

In addition, you can place long forks, knives and spoons on these racks horizontally, so that they do not block the rotation of the spray arm.

### Upper basket folding racks

Folding tines (prongs) on the upper basket are designed to allow you to place larger items such as pots, pans, etc., easily. Each rack can be folded separately or together, depending on the space required.

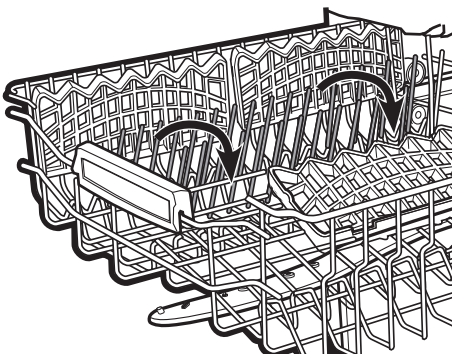



### Upper basket height adjustment while it is full

Basket height adjustment mechanism on the upper basket of your machine is designed to let you adjust the height of your upper basket (refer to diagram 1) upwards or (refer to diagram 2) downwards, without removing it from your machine when it is full, to create large spaces at the upper or bottom area of your machine as needed.

The basket of your machine is set to the upper position from the factory.

In order to raise your basket, hold it from both sides and pull it upwards. In order to lower it, hold it from both sides again, pull upwards and then lower carefully.

Make sure that both sides are in the same position (up or down).

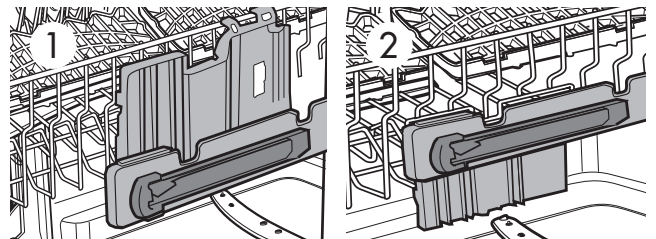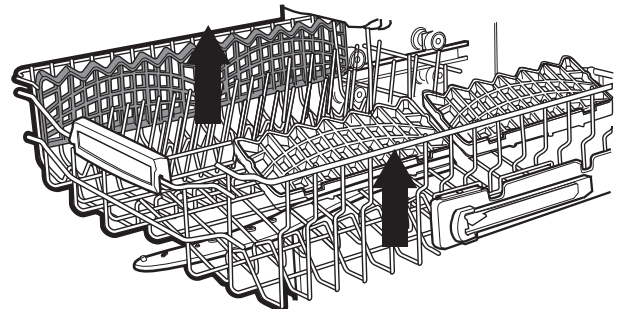


# LOADING YOUR DISHWASHER

## Upper Cutlery Tray


The upper cutlery tray is designed for you to place forks, spoons and knives, long and small items.



If desired, when the program has completed, the tray can be taken out with your cutlery.

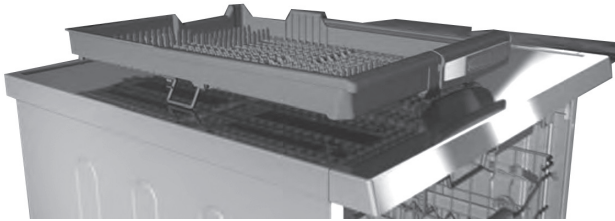

The upper cutlery basket is composed of two pieces; if you need to make space for the dishes in the upper basket, you can take out the left or right part of the upper cutlery basket in order to create more space.

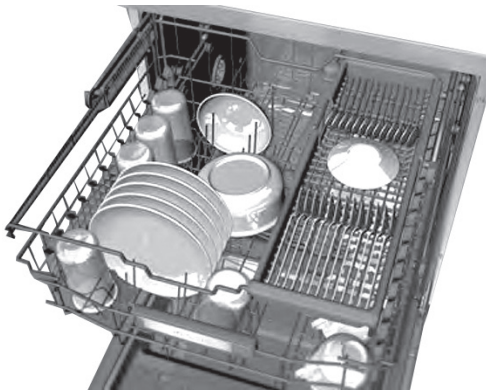


## WARNING!

**Knives and other sharp objects must be placed horizontally in the cutlery basket.**

## Alternate cutlery basket

An alternate cutlery basket is available as an accessory for your convenience.

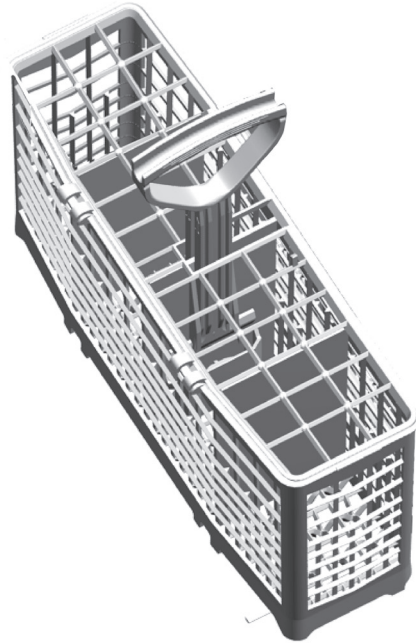


### Lower Basket Folding Racks

Folding tines (prongs) consisting of four parts that are located on the lower basket of your machine are designed in order to let you place big items easier such as pots, pans, etc.

If required, each rack can be folded separately, or all of them can be folded and larger spaces created. You can use folding tines (prongs) in the upright position, or by folding.

1

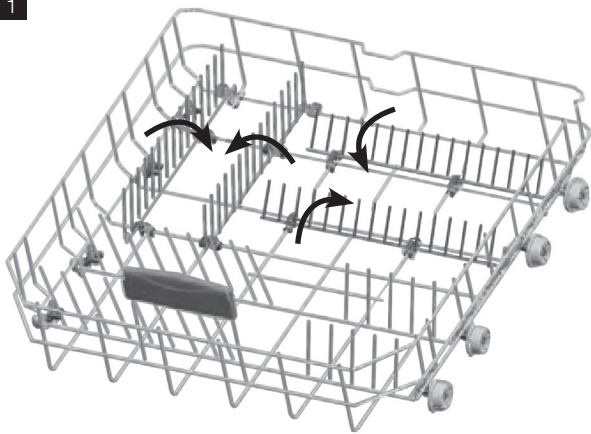


2




### Alternative basket loads



#### Lower Basket

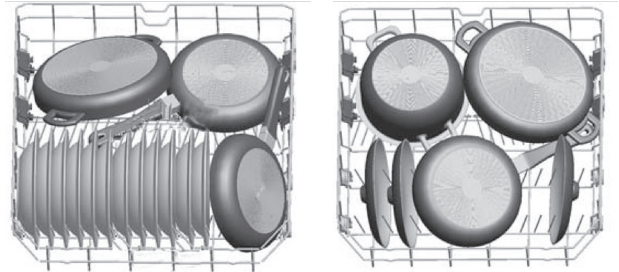

#### Upper Basket

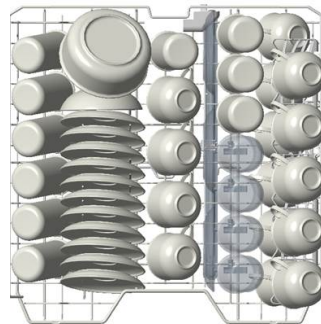

**! WARNING!**  
Examples of incorrect loading

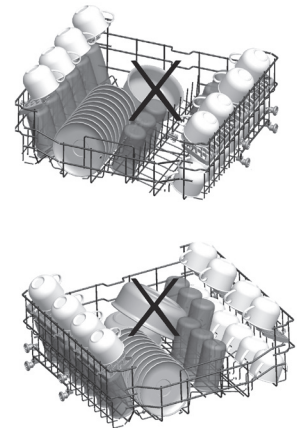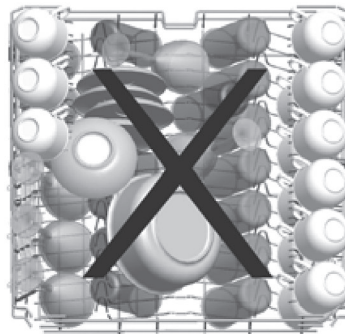

\*Illustration only

## LOADING YOUR DISHWASHER (CONTINUED)

### Unloading the baskets

The upper cutlery tray is designed for you to place forks, spoons and knives, long and small items.

1. Let the tableware cool down before you remove it from the appliance. Hot items can be easily damaged.
2. First remove items from the lower basket, then from the upper basket.



### **IMPORTANT!**

**At the end of the program water can still remain on the sides and on the door of the appliance.**

**For better drying results set the auto door function, or open the door 5–10cm and allow tableware to cool down for 30–40 min.**

### **Whenever you will not be operating your machine**

- Unplug the machine and then turn the water off.
- Leave the door slightly ajar in order to prevent the formation of unpleasant smells.
- Keep the machine interior clean.

# CARE AND CLEANING

## CAUTION!

**Cleaning the machine in regular intervals prolongs the machine's service life.**

### Whenever you will not be operating your machine

- Fill the detergent compartment without loading any dishes into the machine, select a program that runs at high temperature, and start the machine. If this is ineffective, use a specialty dishwasher cleaner available from most supermarkets.

### Cleaning the seals in the machine door

- To clean any accumulated residues in the door seals, wipe the seals regularly by using a dampened cloth.


### Cleaning the machine

- Clean the filters and spray arms at least once a week.
- Unplug your machine and turn off its tap before starting the cleaning.
- Do not use hard materials when cleaning your machine. Wipe with a fine cleaning material and a dampened cloth.

### Filters

- Check if any food wastes have remained on the coarse and fine filters.
  - If any food wastes are left, remove the filters and clean them thoroughly under the water tap.
    - Micro Filter
    - Coarse Filter
    - Metal/Plastic Filter
1. To remove and clean the filter combination, turn it counter clockwise and take it out by lifting upwards. **1**
  2. Pull and remove the metal/plastic filter. **3**
  3. Then pull the coarse filter out of the micro filter. **2**
  4. Rinse it with lots of water under the tap. Refit the metal/plastic filter. Insert the coarse filter into the micro filter in a way that the marks will correspond to one another. Attach micro filter into the metal/plastic filter and turn to the direction of arrow and it is locked when the arrow on micro filter can be seen from across. **4**

- Never use your dishwasher without any filter.
- Incorrect fitting of the filter will reduce the washing effectiveness.
- Clean filters are very important in terms of the proper running of the machine.

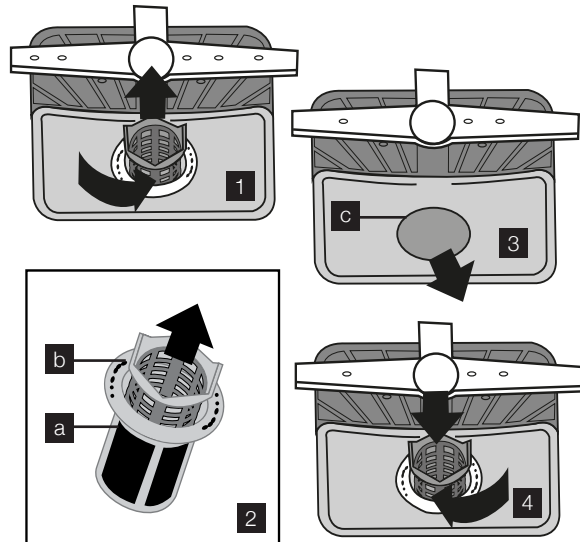


### Spray arms

Check whether or not the holes for the upper and lower spray arms are clogged. If there is any clogging, remove the spray arms and clean them under water.

You can remove the lower spray arm by pulling it upwards, while the upper spray arm nut can be removed by turning the nut to the left.

Be sure that the nut is perfectly tightened when refitting the upper spray arm.

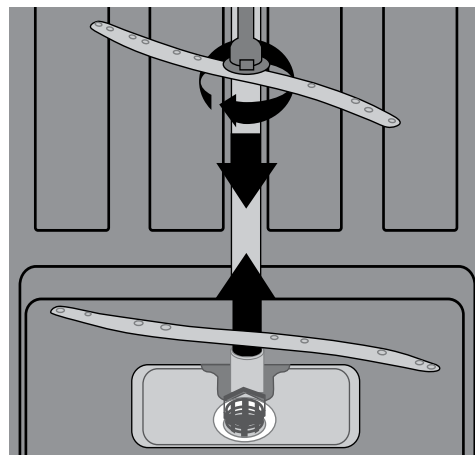

# CONSUMPTION VALUES

Program	Water (l)	Energy (kWh)	Duration (min)
PreWash	4.2	0.02	15
Jetwash 14'	6.6	0.34	14
Quick 30'	10.9	0.74	30
*Eco	12.2	0.65	138
Super 50'	10.7	1.29	50
Daily 60°C	14.9	1.38	99
FlexiWash 60°C	15.4	1.43	113
AutoFlex 30°C - 50°C	10.6 - 17.7	0.82	79 - 91
AutoFlex 50°C - 60°C	10.9 - 18.5	1.18	102 - 122
AutoFlex 60°C - 70°C	12.3 - 24.6	1.3	107 - 179

**Caution:** Values above have been tested according to related Standards in laboratory conditions, these values may vary due to environment conditions (mains voltage, water pressure, water inlet temperature and ambient temperatures).

\*With this program you have the most efficient use of water and energy consumption for crockery and cutlery for normal soil (This is the standard program for Test Institutes).

Off mode and end of cycle mode tests in accordance with AS/NZS Standards must be carried out with Ecomode brightness level.



## CAUTION

**The Jetwash 14 minute, Quick 30' minute and Super 50' Minute programs do not have a drying step.**

**The values stated above are values that are obtained in laboratory environment relative to related standards.**

**These values can change according to the product's usage and environment (mains voltage, water pressure, water inlet temperature and ambient temperatures).**

## CONSUMPTION VALUES WHEN HALF LOAD OPTION IS USED

Program	Water (l)	Energy (kWh)	Duration (min)
PreWash	4.2	0.02	15
Jetwash 14'	6.6	0.34	14
Quick 30'	10.9	0.74	30
*Eco	11.6	0.65	127
Super 50'	10.7	1.23	48
Daily 60°C	11.1	1.34	93
FlexiWash 60°C	11.1	1.33	103
AutoFlex 30°C - 50°C	9.9 - 13.7	0.83	62 - 85
AutoFlex 50°C - 60°C	10.5 - 14.3	1.7	82 - 110
AutoFlex 60°C - 70°C	11.9 - 19.9	1.52	123 - 168

### Information for Test institutes

For all the necessary information for test performance; send an email to [dishwasher@standardtest.info](mailto:dishwasher@standardtest.info) and provide the model and PNC number on the rating plate.

# CARE AND CLEANING

## **Hose filter**

The inlet hose filter reduces contamination (sand, clay, rust etc.) that might be occasionally carried in through the mains water supply or the indoor plumbing, and avoids damage to the dishwasher components.

Check the filter and the hose from time to time and clean them if necessary. To clean the filter, first turn off your tap and then remove the hose.

After removing the filter from the hose, clean it under the tap. Insert the cleaned filter back into its place inside the hose. Refit the hose, turn on the tap and check for leaks.



# TROUBLESHOOTING

## Warning Messages:

Your machine provides feedback while in operation;

**Turn on the Tap**

When above warning is seen;

- 1 Make sure that the water is not cut
- 2 Make sure that the tap is turned on.
- 3 If both are true, call a qualified technician.

Whenever an error which you cannot fix occurs, the following warning will be displayed. When you see it, call a qualified technician.

**Call Service**

When your machine shows these warnings, the error codes are specified after the definition. You might find related information in the "FAILURE CODES AND WHAT TO DO IN CASE OF FAILURE" section in your user guide.

If the appliance does not start or it stops during operation, first check if you can solve the problem yourself with the help of the information in the table or contact an Authorised Service Centre.



**Repairs not properly done may result in serious risk to the safety of the user. Any repairs must be performed by qualified personnel.**

**With some problems, the display shows an alarm code. The majority of problems that can occur can be solved without the need to contact an Authorised Service Centre.**

Problem and alarm code	Possible cause and solution
You cannot activate the appliance.	<ul style="list-style-type: none"> <li>• Make sure that the mains plug is connected to the mains socket.</li> <li>• Make sure that there is no damaged fuse in the fuse box.</li> </ul>
The program does not start	<ul style="list-style-type: none"> <li>• Make sure that the appliance door is closed.</li> <li>• If the delay start is set, cancel the setting or wait for the end of the countdown.</li> </ul>
The appliance does not fill with water. The display shows <b>F5</b>	<ul style="list-style-type: none"> <li>• Make sure that the water tap is turned on.</li> <li>• Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.</li> <li>• Make sure that the water tap is not clogged.</li> <li>• Make sure that the filter in the inlet hose is not clogged.</li> <li>• Make sure that the inlet hose has no kinks or bends.</li> </ul>
The appliance does not drain the water The display shows <b>F2</b>	<ul style="list-style-type: none"> <li>• Make sure that the sink spigot is not clogged.</li> <li>• Make sure that the filter in the outlet hose is not clogged.</li> <li>• Make sure that the interior filter system is not clogged.</li> <li>• Make sure that the drain hose has no kinks or bends.</li> </ul>
The anti-flood device is on. The display shows <b>F1</b>	<ul style="list-style-type: none"> <li>• Close the water tap and contact an Authorised Service Centre</li> </ul>
The appliance stops and starts more times during operation.	<ul style="list-style-type: none"> <li>• It is normal. It provides optimal cleaning results and energy savings.</li> </ul>
The program lasts too long.	<ul style="list-style-type: none"> <li>• Select the Extra Fast option to shorten the program time.</li> <li>• If the delayed start option is set, cancel the delay setting or wait for the end of the countdown.</li> </ul>
The remaining time in the display increases and skips nearly to the end of program time.	<ul style="list-style-type: none"> <li>• This is not a defect. The appliance is working correctly</li> </ul>

# TROUBLESHOOTING (CONTINUED)

## If the program won't start

- Check if the plug is connected.
- Check your indoor fuses.
- Be sure that the water inlet tap is turned on.
- Be sure that you have closed the machine door.
- Be sure that you switched off the machine by pressing the Power On / Off button.
- Be sure that the water inlet filter and the machine filters are not clogged.

## If detergent residues are left in the detergent compartment

- Detergent has been added when the detergent compartment was wet.

## If water is left inside the machine at the end of the program

- The water drain hose is clogged or twisted.
- The filters are clogged.
- The program is not finished yet.

## If the machine stops during a wash operation

- Power failure.
- Water inlet failure.
- Program can be on standby mode.

## If shaking and hitting noises are heard during a wash operation

- Dishes placed incorrectly.
- Spray arm hitting the dishes.

## If there are partial food wastes left on the dishes

- Dishes placed incorrectly into the machine, sprayed water did not reach related places.
- Basket overly loaded.
- Dishes leaning against one another.
- Very small amount of detergent added.
- An unsuitable, rather weak wash program selected.
- Spray arm clogged with food wastes.
- Filters clogged.
- Filters incorrectly fitted.
- Water drain pump clogged.

## If there are whitish stains on the dishes

- A very small amount of detergent is being used.
- Rinse aid dosage setting at a very low level.
- A detergent without phosphate used; try one that contains phosphate.

## If the dishes are not dry

- A program without a dry operation selected.
- Rinse aid dosage set too low
- Dishes unloaded too soon

## If there are rust stains on the dishes

- Stainless-steel quality of the dishes washed is not dishwasher grade.
- High level of salt in the wash water.
- Poor mains grounding.

Call an Authorised Service Centre if the problem still persists after the controls or in case of any malfunction not described above.

**Error codes, cause and solution**

<b>Error code</b>	<b>Possible cause and solution</b>	<b>Control</b>
<b>F1</b>	Overfill	<ul style="list-style-type: none"> <li>• Power off your machine and close the tap.</li> <li>• Contact the customers services centre.</li> </ul>
<b>F2</b>	Not draining	<ul style="list-style-type: none"> <li>• Water discharge hose is clogged.</li> <li>• Water drainage hose kinked, check installation.</li> <li>• The filters of your machine might be clogged.</li> <li>• Power off–on your machine and activate the program cancellation command.</li> <li>• If the error continues, contact the Customer Care Centre.</li> </ul>
<b>F3</b>	Inlet valve faulty	<ul style="list-style-type: none"> <li>• Close the tap.</li> <li>• Contact the Customer Care Centre.</li> </ul>
<b>F5</b>	Inadequate water supply	<ul style="list-style-type: none"> <li>• Make sure the water tap is fully open and that there is mains water available.</li> <li>• Water inlet hose kinked, check installation.</li> <li>• Close the water tap, disconnect the hose from the tap and clean the filter at the connection.</li> <li>• Restart your machine, contact the service if the error resumes.</li> </ul>
<b>F6</b>	Faulty heater sensor	<ul style="list-style-type: none"> <li>• Contact the Customer Care Centre.</li> </ul>
<b>F7</b>	Over temperature	<ul style="list-style-type: none"> <li>• Contact the Customer Care Centre.</li> </ul>
<b>F8</b>	Heating error	<ul style="list-style-type: none"> <li>• Contact the Customer Care Centre.</li> </ul>
<b>F9</b>	Diverter valve faulty	<ul style="list-style-type: none"> <li>• Contact the Customer Care Centre.</li> </ul>
<b>FE</b>	Power supply problem	<ul style="list-style-type: none"> <li>• Contact the Customer Care Centre.</li> </ul>

# TECHNICAL SPECIFICATIONS

<b>Technical specifications</b>	<b>ESF6767KXA</b>
Capacity	15 place settings
Height with worktop	850mm
Height (without worktop)	820mm
Width	598mm
Depth	598mm
Net weight	55kg
Electricity input	220–240V, 50Hz
Total power	1900W
Current	10A
Water supply pressure	0.03 MPa (0,3 bar) – 1 MPa (10 bar)
Water supply	Hot or Cold water, max 60°C, 10L/min


# INSTALLATION

## General

- When determining where to put your machine, choose a place where you can easily load and unload your dishes.
- Do not put your machine in any location where there is a probability for the room temperature to fall below 0°C.
- Before positioning, take the machine out of its packaging by following the warnings located on the package.
- Position the machine close to a water tap or drain. You need to site your machine, taking into consideration that its connections will not be altered once they are made.
- Do not grip the machine by the door in order to move it.
- Leave a clearance on all sides of the machine so that you can comfortably move it back and forth during cleaning.
- Make sure that the water inlet and outlet hoses aren't squeezed while positioning the machine. Also, make sure that the machine does not stand on the electrical cable.
- Adjust the machine's adjustable feet so that it can stand level and balanced. Proper positioning of the machine ensures problem-free opening and closing of the door.
- If the door of your machine does not close properly, check if the machine is stable on the floor it stands; if not, adjust the feet and ensure its stable position.

## Location of services


All dishwasher services should be located in the cabinet next to the dishwasher opening.

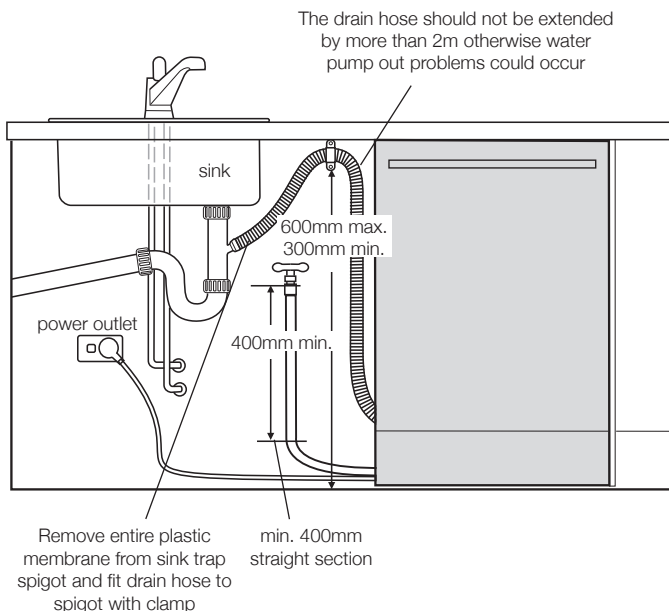

## Water connection

Connect the inlet hose to a water tap with an external BSP thread spout of 3/4".

For best washing performance it is recommended to connect the appliance to a cold water supply. Energy savings can be made by connecting the appliance to a solar water system and using economy options, however the water temperature must not exceed 60°C.

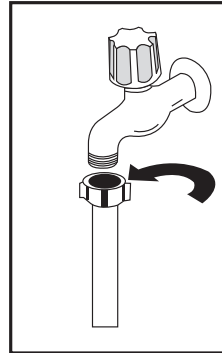

### ! CAUTION!

**Only turn the locking nut to secure the hose. Do not turn the hose.**

## Inlet water supply

- Water pressure: 800kPa max – 50 kPa min.
- Water flow rate 10 L/minute.
- If water pressure is in excess of 800 k Pa, a pressure reducing valve should be used. Check for leaks.
- If water temperature is in excess of 60°C, a tempering valve should be used. Check for leaks.

### ! CAUTION!

**Always use new hoses when you connect the appliance to the water mains. Old hoses must not be used. The water inlet hose must be examined at an interval of twelve months for deterioration and replaced if necessary.**



# INSTALLATION (CONTINUED)


## Positioning the machine

When considering the location for the dishwasher, ensure that there is adequate space to enable loading and unloading of the dishes.

- Do not put your machine in any location where the ambient temperature can fall below 5°C.
- Before positioning, take the machine out of its packaging by following the warnings located on the package.
- Position the machine close to a water tap and drain. You need to position your machine, taking into consideration that its connections will not be altered once they are made.
- Do not grip the machine by its door or panel in order to move it.
- Take care to leave a certain clearance from all sides of the machine so that you can comfortably move it back and forth during cleaning.
- Make sure that the water inlet and outlet hoses do not get squeezed while positioning the machine. Also, make sure that the machine does not stand on the electrical cable. Adjust the machine's feet so that it is level and stable. Proper positioning of the machine ensures problem-free opening and closing of its door.
- If the door of your machine does not close properly, check if the machine is stable on the floor; if not, adjust the feet and ensure it is level and stable.

## Water connection

Ensure that the indoor plumbing is suitable for installing a dishwasher and complies with AS/NZS 3500.1. Also, we recommend that you fit a filter at the entrance of your place or apartment so as to avoid any damage to your machine because of any contamination

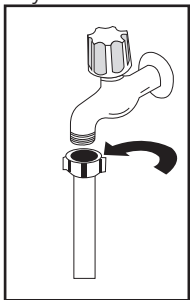

(sand, clay, rust etc) that might be occasionally carried in through the main's water supply or the indoor plumbing, and to avoid problems of staining and formation of deposits after washing.

### Water inlet hose


Do not use the water inlet hose of your old machine, you must use the new water inlet hose supplied with your machine. Before connecting the water inlet hose to the water tap, ensure clean water is flowing from the tap before making the connection. Connect the water inlet hose directly to the water inlet tap. The pressure supplied by the tap should be at a minimum of 0.03 MPa and at a maximum of 1 MPa. If the water pressure is above 1 MPa, a pressure-relief valve should be installed.



## WARNING

**Only turn the locking nut to secure hose – do not turn the hose.**

- The first time you use the appliance, make sure that there is no leakage.
- The water inlet hose has a safety valve and a sheath with an inner mains cable.
- After the connections are made, the tap should be turned on fully and checked for water tightness. For the safety of your machine, make sure to always turn off the water inlet tap after each wash program is finished.

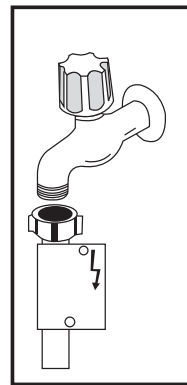

## WARNING

*NOTE: Aquastop inlet hose has components using 240V. Do not cut Aquastop inlet hose. Do not let it get folded, twisted, kinked or crushed.*



## WARNING


*NOTE: A water tempering valve is required if the water temperature is over 60°C.*




## CAUTION

**Always use new hoses when you connect the appliance to the water supply. Old hoses must not be used. The water inlet hose must be examined at an interval of twelve months for deterioration and replaced if necessary.**

**In order to pass the safety valve through the kitchen cabinets, an opening of at least 45mm x 90mm is needed.**

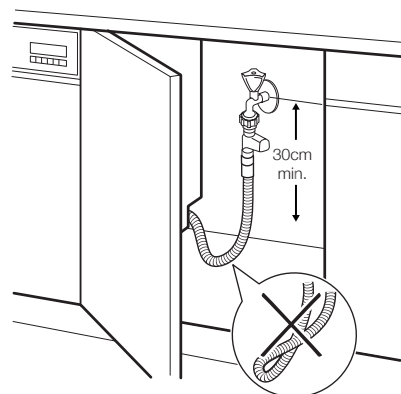

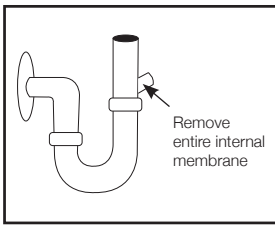


### Water drain hose

If you connect the water drain hose to a trap spigot under the sink, remove the plastic membrane. If you do not remove the entire membrane, remaining food can cause blockage in

the drain hose spigot. Ensure a hose clamp is used to secure the hose to the spigot.

### Water drain hose

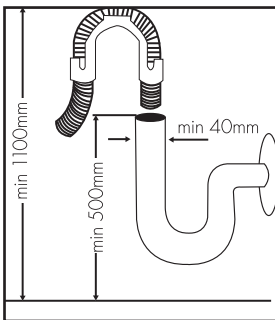


The water drain hose can be connected either directly to the water drain hole or to the sink outlet spigot. Using a hose hook (if available), the water can be drained directly into the sink by positioning the hose hook over the edge of the sink.

This connection should be at a minimum of 50cm and at a maximum of 110cm above the base of the dishwasher.



### WARNING

**Maximum drain hose length is 4m. Longer hose length will prevent correct draining, and result in poor wash performance.**

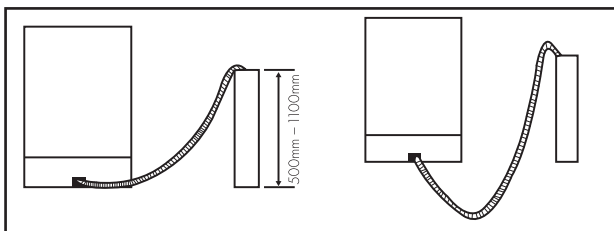

✓  
(correct)

✗  
(incorrect)



### WARNING

#### Electrical Connection

The plug of your machine should be connected to an earthed outlet that supplies suitable voltage and current. If there is no earthing installation, have a competent electrician carry out an earthing installation. In case of usage without earthing installed, our company will not be responsible for any loss of usage that might occur.

The indoor fuse current value should be 10-16 A.

Your machine is designed for 220-240 V. The machine should not be plugged in during installation.





- Always use the molded plug supplied with your machine.
- Running in low voltage will cause a decline in washing quality.
- The machine's electrical cable should be replaced by an authorised service or an authorised electrician only. Failure to do so may lead to accidents.
- For safety purposes, always make sure to disconnect the plug when a wash program is finished.
- In order not to cause an electric shock, do not unplug when your hands are wet.
- When disconnecting your machine from the mains supply, always pull from the plug. Never pull the cord itself.

#### Fitting the machine undercounter

If you wish to fit your machine undercounter, check whether you have sufficient space under your countertop and whether the wiring-plumbing is suitable to do so.

1. To ensure the stability of the dishwasher for an underbench installation, if the underbench dimension is greater than 820mm, any gap between the dishwasher and the underside of the benchtop should be bridged with a packing piece. This may be achieved by wedging a piece of timber between the dishwasher and the benchtop as shown
2. If required, remove the worktop as shown in the illustration.
3. To remove the worktop, remove the screws that hold the worktop which are located at the rear of the machine; then push the front panel 1cm from the front

# INSTALLATION (CONTINUED)

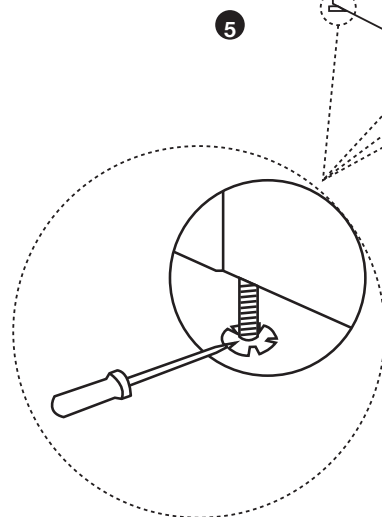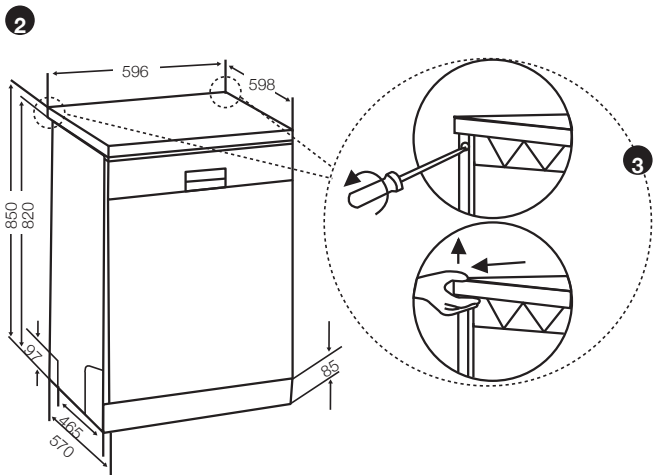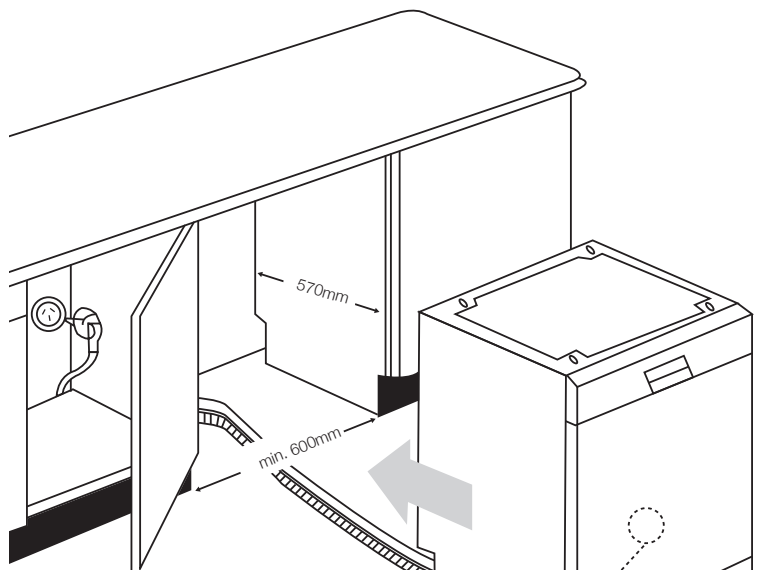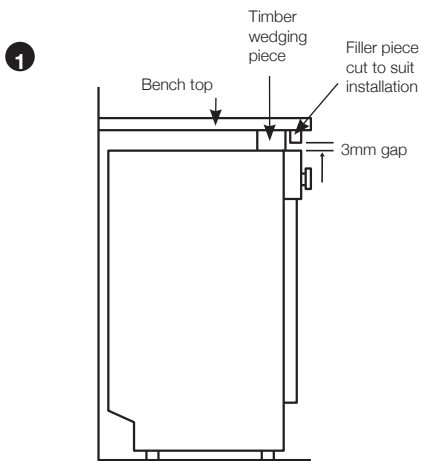

1. towards the rear and lift it.
2. Adjust the machine feet according to the slope of the floor.
3. Fit your machine by pushing it undercounter without letting the hoses get crushed or bent.



## WARNING

After removal of worktop, ensure the opening for the dishwasher is according to the following dimensions.








**Electrolux Warranty**

FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: ELECTROLUX DISHWASHERS

**This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.**

**1. In this warranty:**

- (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
  - (b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
  - (c) 'ASC' means Electrolux's authorised serviced centres;
  - (d) 'Electrolux' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
  - (e) 'Warranty Period' means the period specified in clause 3 of this warranty;
  - (f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
- 2. Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.
- 3. Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance.
- 4. Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.
- 5. Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.
- 6. Proof of purchase** is required before you can make a claim under this warranty.
- 7. Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:
- (a) light globes, batteries, filters or similar perishable parts;
  - (b) parts and Appliances not supplied by Electrolux;
  - (c) cosmetic damage which does not affect the operation of the Appliance;
  - (d) damage to the Appliance caused by:

- (i) negligence or accident;
- (ii) misuse or abuse, including failure to properly maintain or service;
- (iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
- (iv) normal wear and tear;
- (v) power surges, electrical storm damage or incorrect power supply;
- (vi) incomplete or improper installation;
- (vii) incorrect, improper or inappropriate operation;
- (viii) insect or vermin infestation;
- (ix) failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- (a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
- (b) the Appliance is modified without authority from Electrolux in writing;
- (c) the Appliance's serial number or warranty seal has been removed or defaced

**8. How to claim under this warranty:** To enquire about claiming under this warranty, please follow these steps:

- (a) carefully check the operating instructions, user manual and the terms of this warranty;
- (b) have the model and serial number of the Appliance available;
- (c) have the proof of purchase (e.g. an invoice) available;
- (d) telephone the numbers shown below.

**9. Australia:** For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

**10. New Zealand:** For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

**11. Confidentiality:** You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

**Important Notice**

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

<p><b>FOR SERVICE</b> or to find the address of your nearest authorised service centre in Australia <b>PLEASE CALL 13 13 49</b> For the cost of a local call (Australia only)</p>	<p><b>AUSTRALIA</b> ELECTROLUX HOME PRODUCTS 163 O'Riordan Street, Mascot NSW 2020 electrolux.com.au</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest spare parts centre in Australia <b>PLEASE CALL 13 13 50</b> For the cost of a local call (Australia only)</p>
<p><b>FOR SERVICE</b> or to find the address of your nearest authorised service centre in New Zealand <b>PLEASE CALL 0800 10 66 10</b> (New Zealand only)</p>	<p><b>NEW ZEALAND</b> ELECTROLUX (NZ) Limited 3-5 Niall Burgess Road, Mount Wellington electrolux.co.nz</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest spare parts centre in New Zealand <b>PLEASE CALL 0800 10 66 20</b> (New Zealand only)</p>

**Electrolux Home Products Australia**

telephone: 1300 363 640  
fax: 1800 350 067  
email: [customercare@electrolux.com.au](mailto:customercare@electrolux.com.au)  
web: [electrolux.com.au](http://electrolux.com.au)



**Electrolux Home Products New Zealand**

telephone: 0800 436 245  
fax: 0800 225 088  
email: [customercare@electrolux.co.nz](mailto:customercare@electrolux.co.nz)  
web: [electrolux.co.nz](http://electrolux.co.nz)



To add a touch of professional inspiration to your home, visit [electrolux.com.au](http://electrolux.com.au) or [electrolux.co.nz](http://electrolux.co.nz)

[electrolux.com.au](http://electrolux.com.au)



or [electrolux.co.nz](http://electrolux.co.nz)



**P/No. 52217762-A.**

© 2019 Electrolux Home Products Pty Ltd.

EMAN\_ESF6767XA\_11Apr19