


Dimension Guide


French door with convertible drawer

Models:

EHE6899SA, EHE6899BA

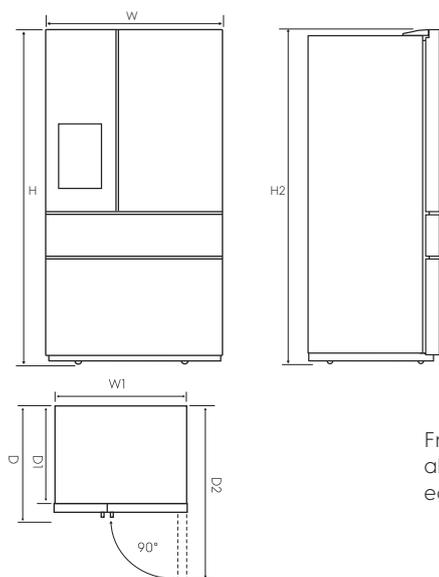


Minimum Recommended Airspaces

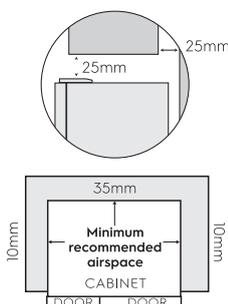

Please note: Doors are designed to sit proud of cabinetry (not flush)

Front face of bench aligned to front corner edge of cabinet.

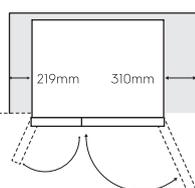


When positioned in a corner area, spacing of at least 310mm on the right hinge side and 219mm on the left hinge side will allow the doors to open enough to enable the removal of bins and shelves.

Installation options:


Install the fridge proud of the cabinetry by the thickness of the fridge doors

Side clearance must be 55mm either side of the fridge, to have the fridge doors siting proud of the kitchen cabinetry

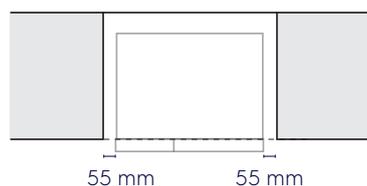

Install the fridge proud of the cabinetry by the thickness of the fridge doors and partial fridge body


Fridge must sit 25mm proud of kitchen cabinetry

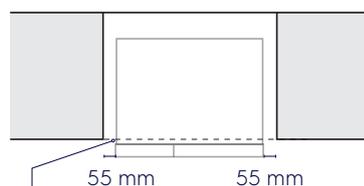

Fridge must sit 25mm proud of kitchen cabinetry

Install the fridge flush with the cabinetry

Side clearance must be 130mm either side of the fridge, to have the fridge doors siting flush with the kitchen cabinetry

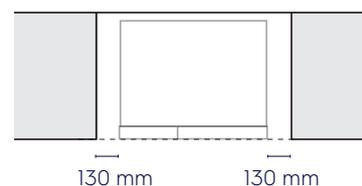




French door with convertible drawer models:	Door width (W)	Total depth (D)	Maximum height (H)	Cabinet width (W1)	Cabinet depth (D1)	Depth door open (D2)
EHE6899SA, EHE6899BA	913	746	1782	908	625	1189

For connection kit installation instructions go to electrolux.com.au



Important! Please ensure that the access to your kitchen (including doorways, corridors, island benches, etc) allows sufficient clearance to move your fridge into position.

Please note! Dimensions to be used as a guide only. All customers MUST refer to the user manual supplied with the product for detailed installation instructions.


© 2019 Electrolux Home Products Pty Ltd. EDIM_FrenchDoorSingleDrawer_Oct19

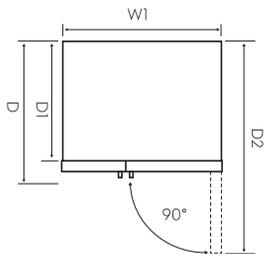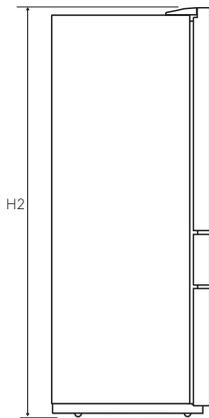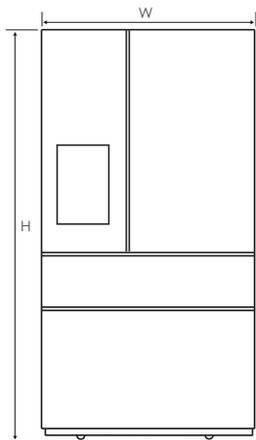

Minimum Recommended Airspaces

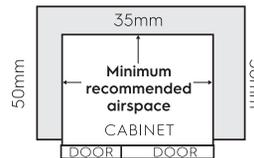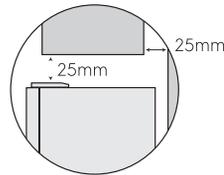

Please note: Doors are designed to sit proud of cabinetry (not flush)

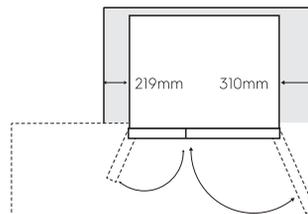

When positioned in a corner area, spacing of at least 310mm on the right hinge side and 219mm on the left hinge side will allow the doors to open enough to enable the removal of bins and shelves.

Front face of bench aligned to front corner edge of cabinet.

French door with convertible drawer models:

Door width (W)

Total depth (D)

Maximum height (H)

Cabinet width (W1)

Cabinet depth (D1)

Depth door open (D2)

EHE6899SA, EHE6899BA

913

746

1782

908

625

1189

For connection kit installation instructions go to electrolux.com.au

Important! Please ensure that the access to your kitchen (including doorways, corridors, island benches, etc) allows sufficient clearance to move your fridge into position.

Please note! Dimensions to be used as a guide only. All customers MUST refer to the user manual supplied with the product for detailed installation instructions.