



 
Assembly and Operating Instructions

SIGNATURE SERIES

2000ES MOBILE

MOBILE MODELS BSM2040SA, BSM2041SA,
BSM2050SA, BSM2051SA

TROLLEY MODELS BSTR2040SA,
BSTR2041SA, BSTR2050SA & BSTR2051SA

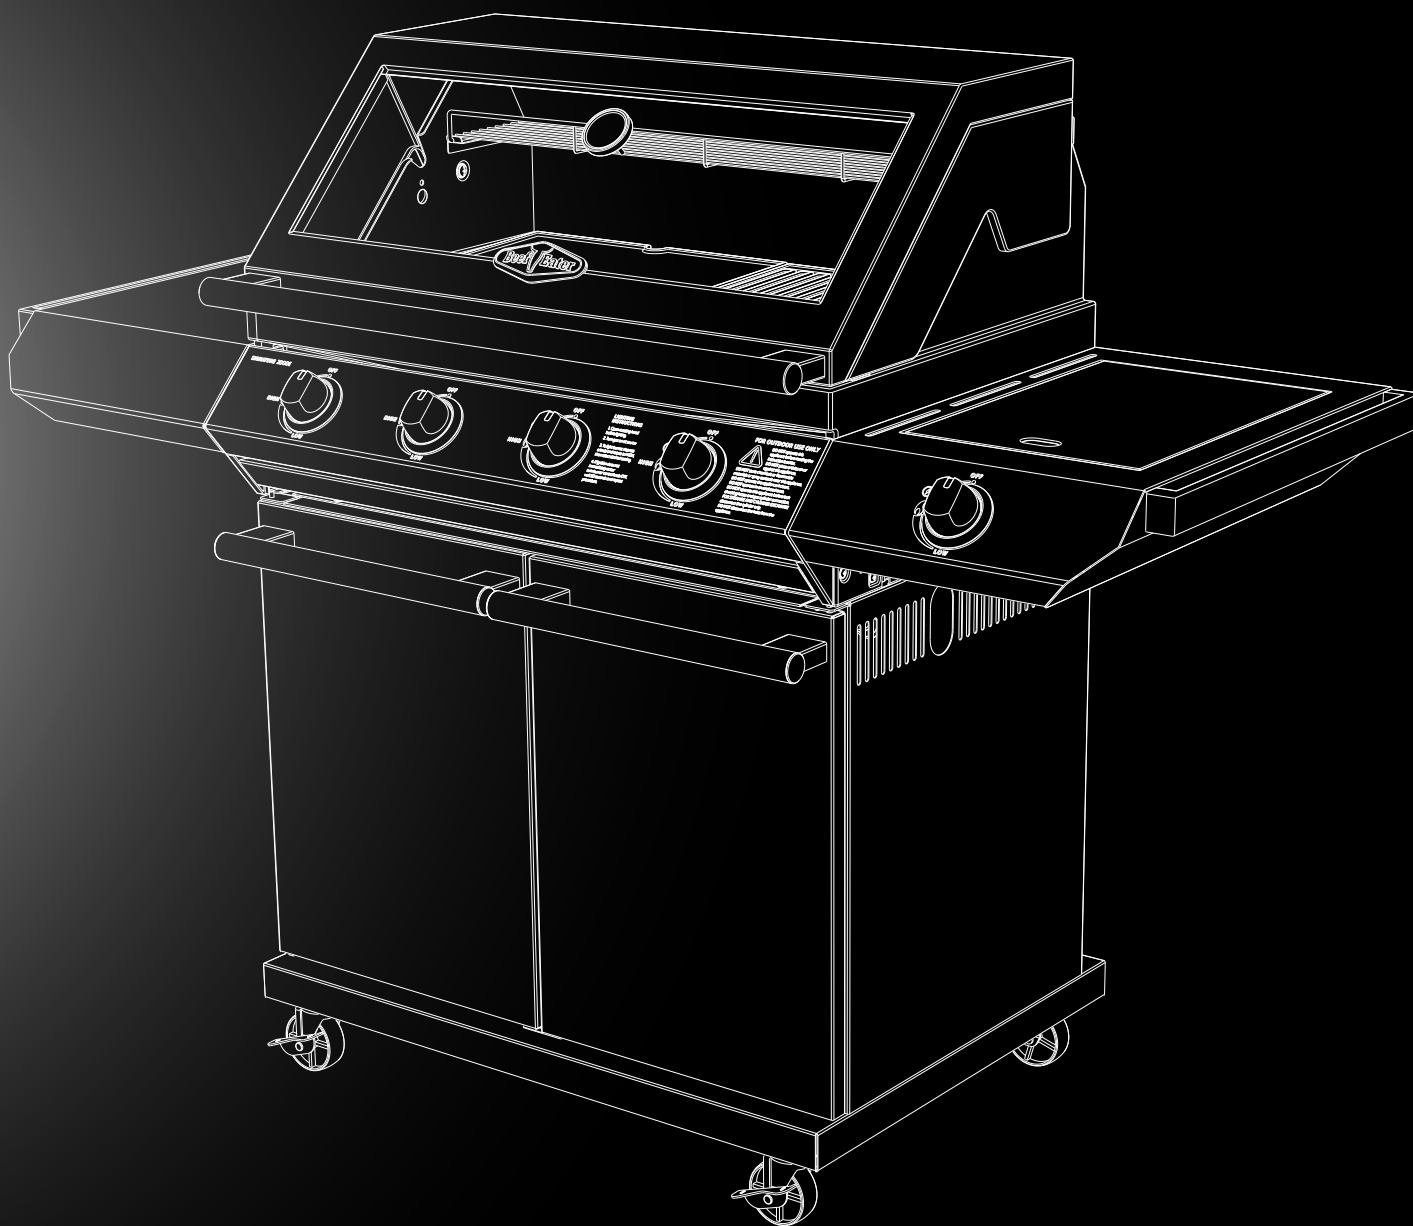

FOR OUTDOOR USE ONLY

AUSTRALIA / NEW ZEALAND



Dear Customer,

Congratulations and thank you for choosing our barbecue. We are sure you will find it a pleasure to use. Before you use the barbecue, we recommend that you read through the relevant sections of this manual, as well as the built-in manual to get a full understanding of your appliance and its functions.

To avoid the risks that are always present when you use an appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep both instruction booklets for future reference and pass it on to any future owners.

After unpacking the appliance, please check it is not damaged. If in doubt, do not use the appliance but contact your local customer care centre.

This appliance complies with requirements of Australian Standards AS5263.

Conditions of use

These important notes apply to your appliance, failure to adhere to these conditions of use may affect your ability to make a claim under the manufacture’s warranty.

- This appliance must be serviced only by a qualified licenced person.
- This product is intended for personal, domestic or household use only, not commercial use.
- This product is intended for outdoor use only.
- This product must be installed, operated and maintained as per the instructions.

Please ensure you read both instruction manuals fully before you call for service, or a full service fee could be applicable.

Record model and serial number here:

Model number:

Serial number:.....

PNC:.....

Important safety instructions.....3

Product description4

Product dimensions6

Assembling the barbecue 7

Connecting the side burner (selected models only)15

Leak test procedure18

Side burner operating instructions (selected models only)19


Gas specifications and mobile restraint 20


Notes.....21


Warranty23


Please read the user manual carefully and store in a handy place for later reference.

The symbols you will see in this booklet have these meanings:

 **WARNING**
This symbol indicates information concerning your personal safety.

 **CAUTION**
This symbol indicates information on how to avoid damaging the appliance.


 **IMPORTANT**
This symbol indicates tips and information about use of the appliance.

 **ENVIRONMENT**
This symbol indicates tips and information about economical and ecological use of the appliance.


IMPORTANT INFORMATION THAT MAY
IMPACT YOUR MANUFACTURER’S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the BeefEater manufacturer’s warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the BeefEater manufacturer’s warranty in the event that your product fault is due to failure to adhere this manual.


Please read the user manuals carefully and store in a handy place for later reference.

 **IMPORTANT**
Important – check for any damages or marks

If you find the barbecue is damaged or marked, you must report it within 7 days if you wish to claim for damage/marks under the manufacturer’s warranty. This does not affect your statutory rights.

 **ENVIRONMENT**
Information on disposal for users


- Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

 **WARNING**
This appliance must be serviced only by a qualified licensed person.


Improper installation, adjustment, alteration or maintenance can cause injury or property damage and may affect your ability to claim under the manufacturer’s warranty.


Please contact your nearest BeefEater Service Department for additional information or assistance for an approved installer.

Note to the installer
This manual must remain with the owner for future reference.


-  **WARNING**
- Do not lean over barbecue when lighting.
 - Do not leave the barbecue unattended when alight.
 - Do not delay lighting once the gas has been turned on.
 - Do not store or use aerosol cans in the vicinity of the barbecue.
 - Do not store or use flammable liquids or flammable materials in the vicinity of this barbecue.
 - Do not use caustic or abrasive based cleaners on the barbecue.
 - Do not attempt to dismantle or adjust the control valves.
 - Do not attempt to dismantle or adjust the regulator.
 - Do not test for leaks with a naked flame.
 - Do not modify the construction of this appliance or modify the injector orifice size.
 - Do not place articles on or against this appliance

- Do not obstruct any ventilation of the barbecue.
 - Do not allow children to operate or play near the barbecue.
- Failure to adhere to the above warnings may cause injury or property damage and affect your ability to make a claim under the manufacturer’s warranty.

 **CAUTION**
This appliance is set up for LPG gas and is labelled accordingly. A natural gas conversion kit is available as an accessory if required. Conversion of this unit to natural gas must be carried out by a qualified licensed person and a Certificate of Compliance must be issued to the owner at the completion of the installation and conversion.

 **IMPORTANT**
BeefEater Barbecues are approved for OUTDOOR USE ONLY and must not be used in a building, garage or any other enclosed area.

- BeefEater Barbecues must not be used inside recreational vehicles or boats.
- Read instructions thoroughly before operating this Barbecue.
- Save this manual for future reference.
- Always use the Barbecue on a flat, level surface.
- Some foods produce flammable fats and juices. Regular cleaning is essential.
- Attend an operating barbecue at all times. Damage caused by fat & grease fires is not covered by warranty.
- When not in use keep Barbecue dry and covered.

 **WARNING**
If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. Open hood.
4. If odour continues, immediately call your gas supplier or your fire department.

For your safety

1. Do not store or use gasoline or other flammable vapours or liquids in the vicinity of this or any other appliance.
2. An LPG cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

4 burner mobile barbecue

- 1

BSB2040SA built in barbecue x 1
- 2

Left hand side table x 1
- 3

Left hand side panel x 1
- 4

Brace x 1
- 5

Left hand door x 1
- 6

Right hand door x 1
- 7 a

Right hand side table (selected models) x 1
- 7 b

Right hand side burner assembly (selected models) x 1
- 8

Separation panel x 1
- 9

Rear panel x 1
- 10

Right hand side panel x 1
- 11

Base assembly x 1
- 12

Castors (2 x locking and 2 x non-locking)
- 13

 
Large head M6x12mm screws x 45
- 14

M6x20mm screws x 4
- 15

M3x10mm screws x 2
- 16

M5x60mm screws x 4
- 17

Fibre washer x 8

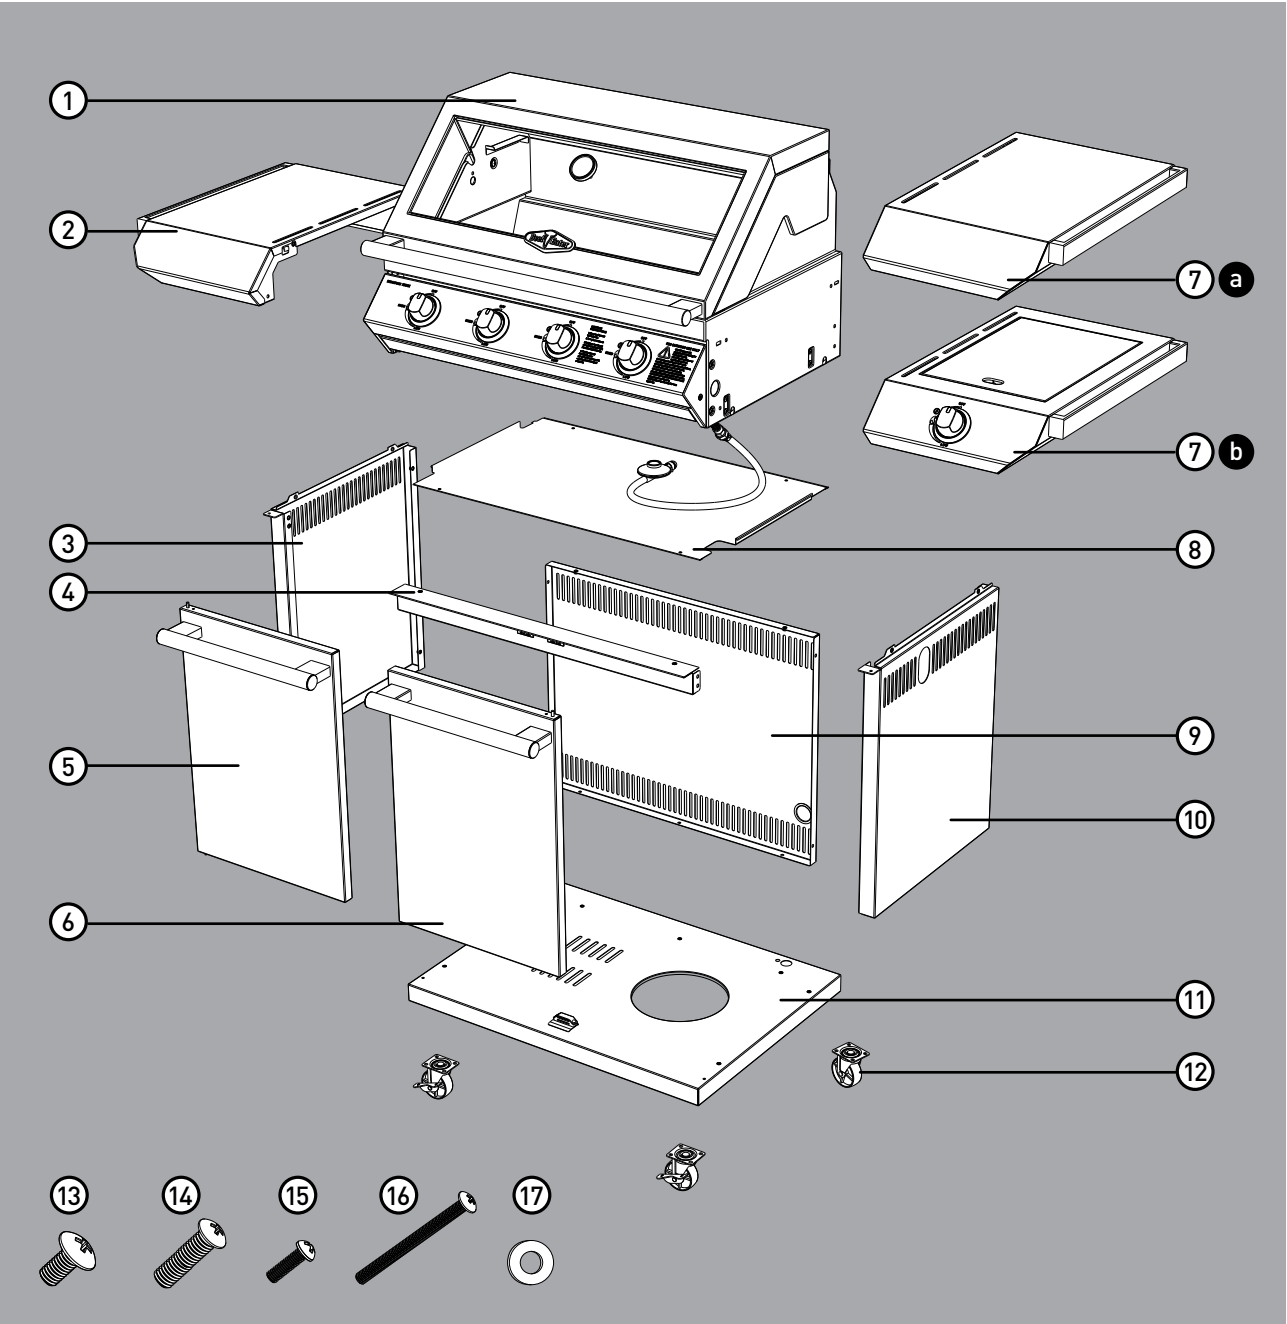

5 burner mobile barbecue

- 1

BSB2050SA built in barbecue x 1
- 2

Left hand side table x 1
- 3

Left hand side panel x 1
- 4

Brace x 1
- 5

Left hand door x 1
- 6

Right hand door x 1
- 7 a

Right hand side table (selected models) x 1
- 7 b

Right hand side burner assembly (selected models) x 1
- 8

Separation panel x 1
- 9

Rear panel x 1
- 10

Right hand side panel x 1
- 11

Base assembly x 1
- 12

Castors (2 x locking and 2 x non-locking)
- 13

 
Large head M6x12mm screws x 45
- 14

M6x20mm screws x 4
- 15

M3x10mm screws x 2
- 16


M5x60mm screws x 4
- 17

Fibre washer x 8

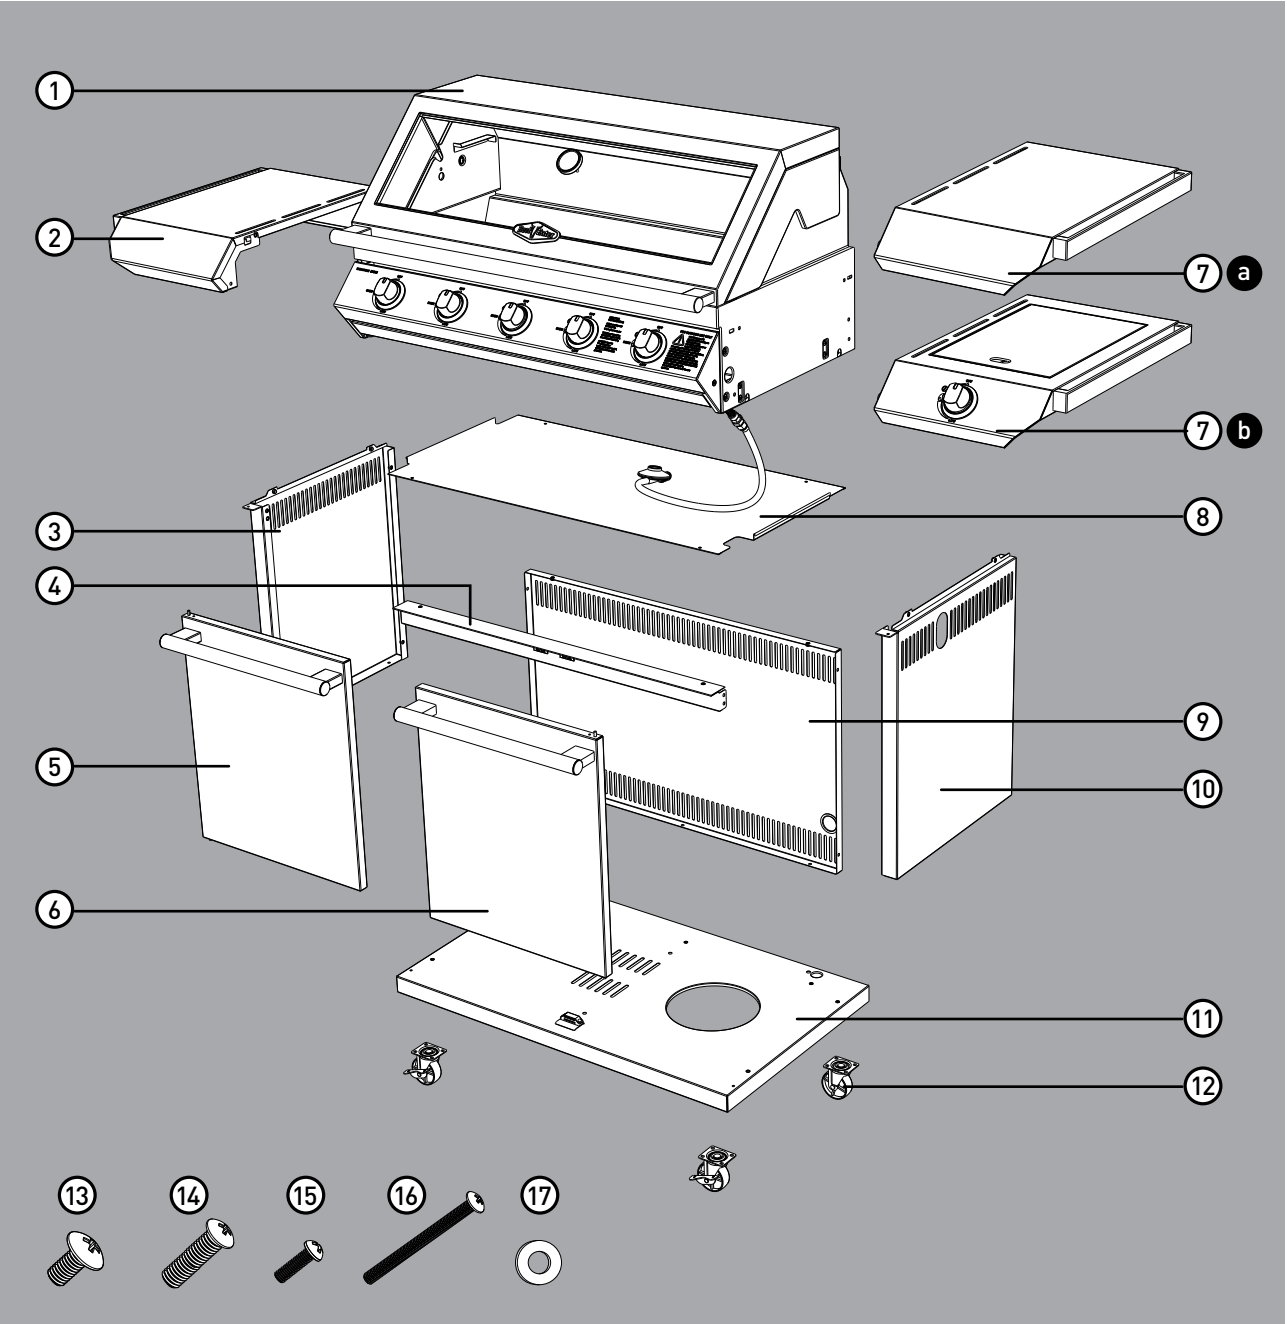





4 burner mobile barbecue

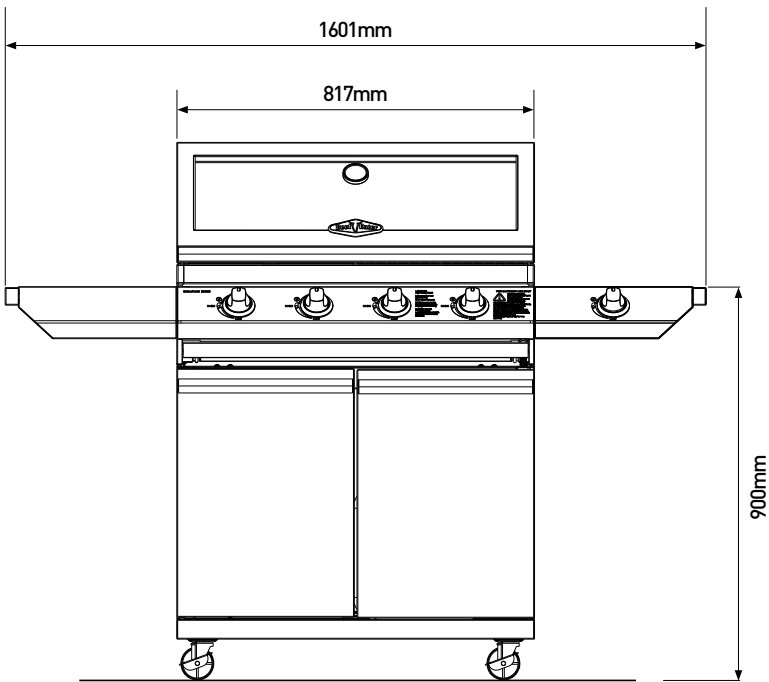 


Hood open

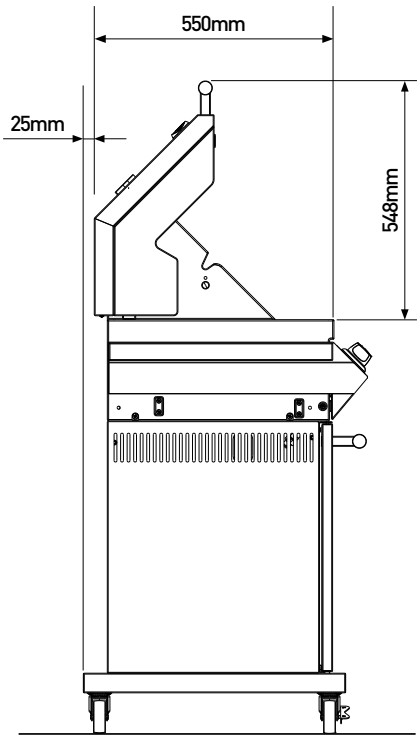 


5 burner mobile barbecue

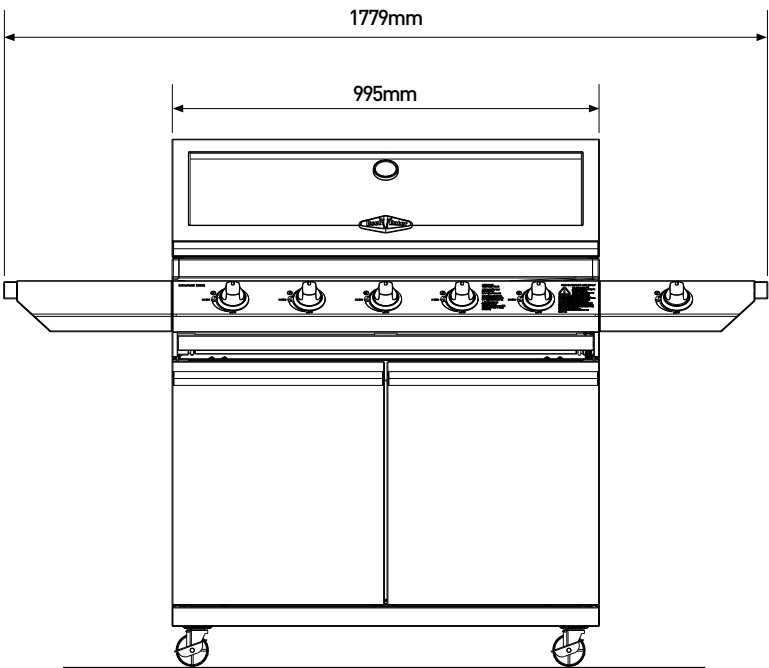 


Hood closed

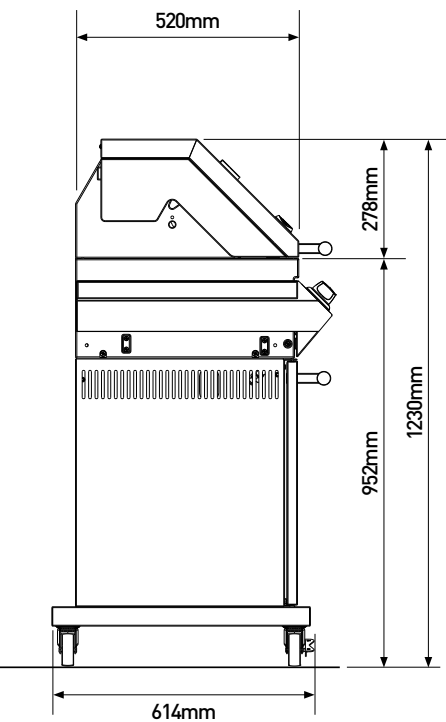 

Tools required:

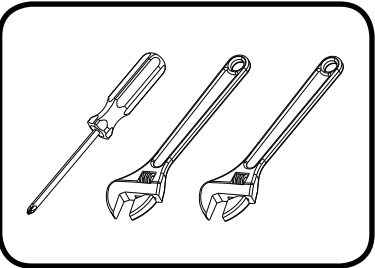 


Fasteners supplied:

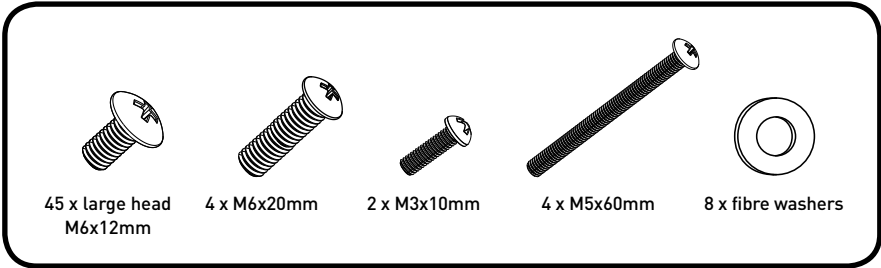 

1

i IMPORTANT


 
Ensure the locking type castors are fitted to the front of the trolley, with locks facing outward




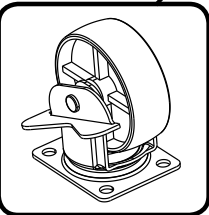






2

i IMPORTANT

          
Install with magnets facing the front (i.e. toward the direction of the locking castors)

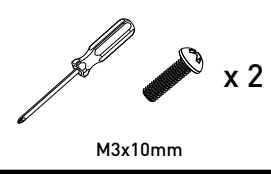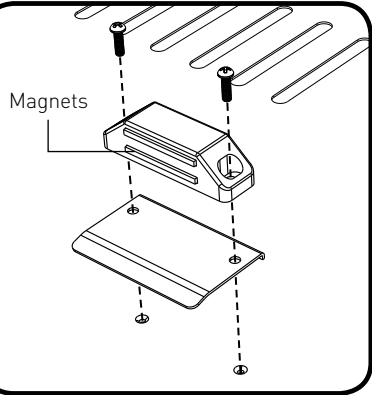

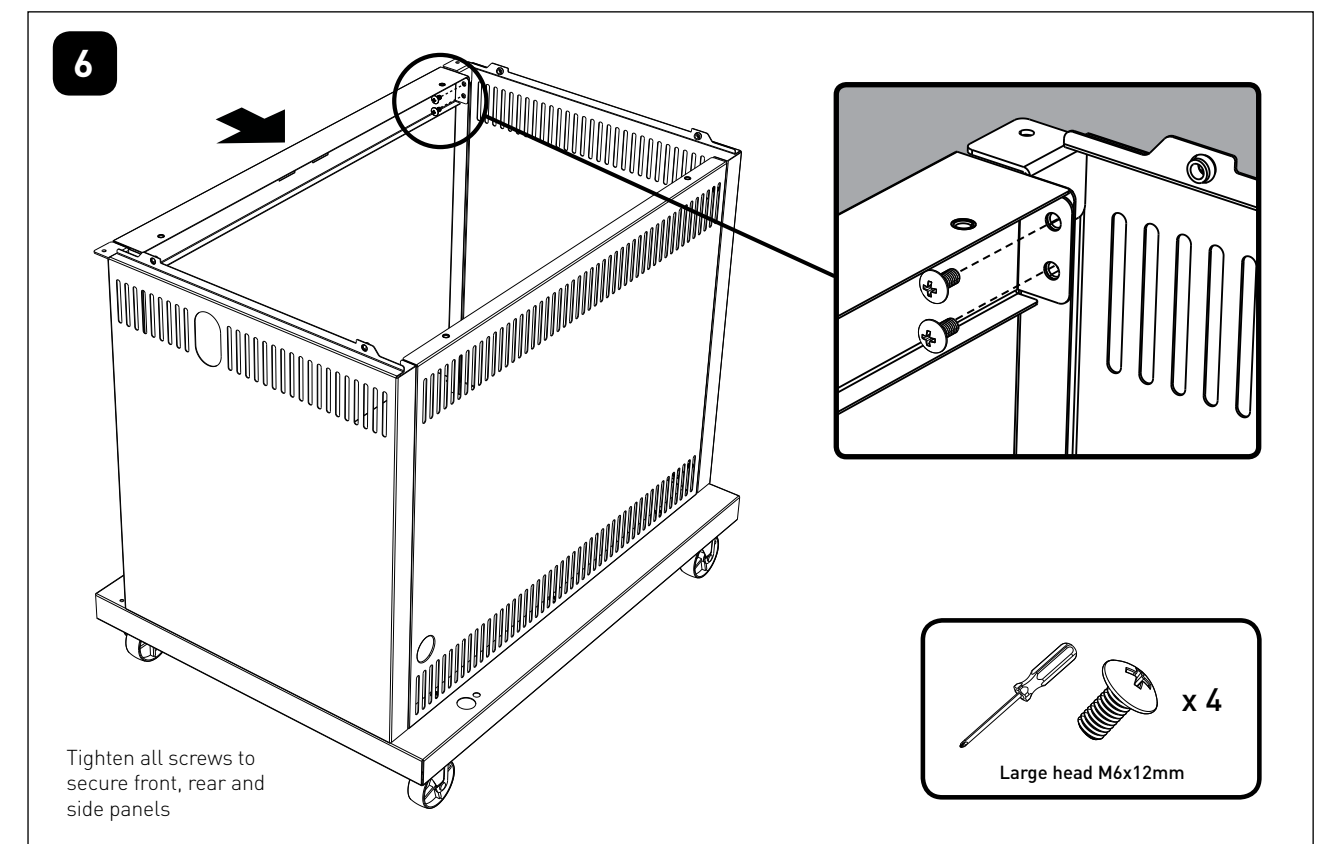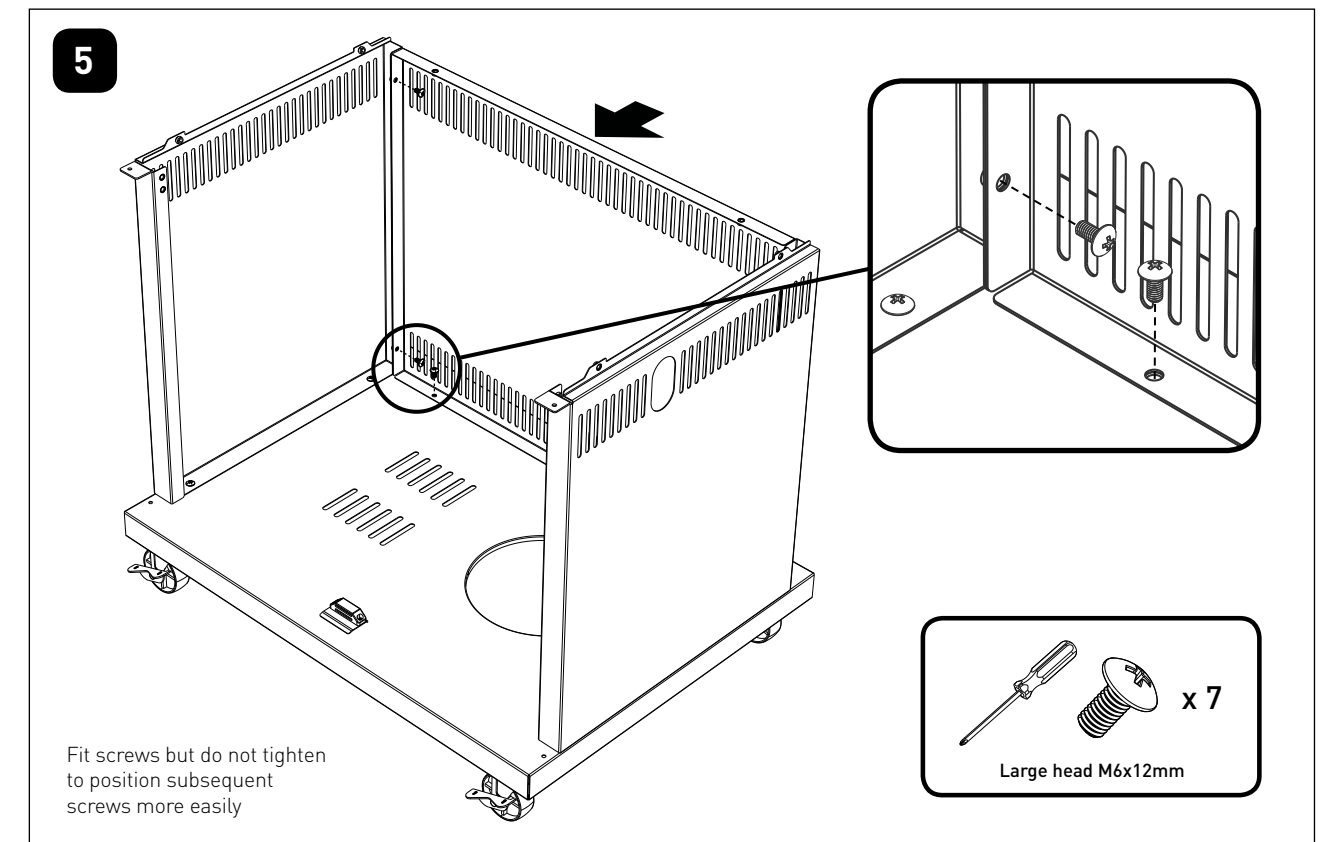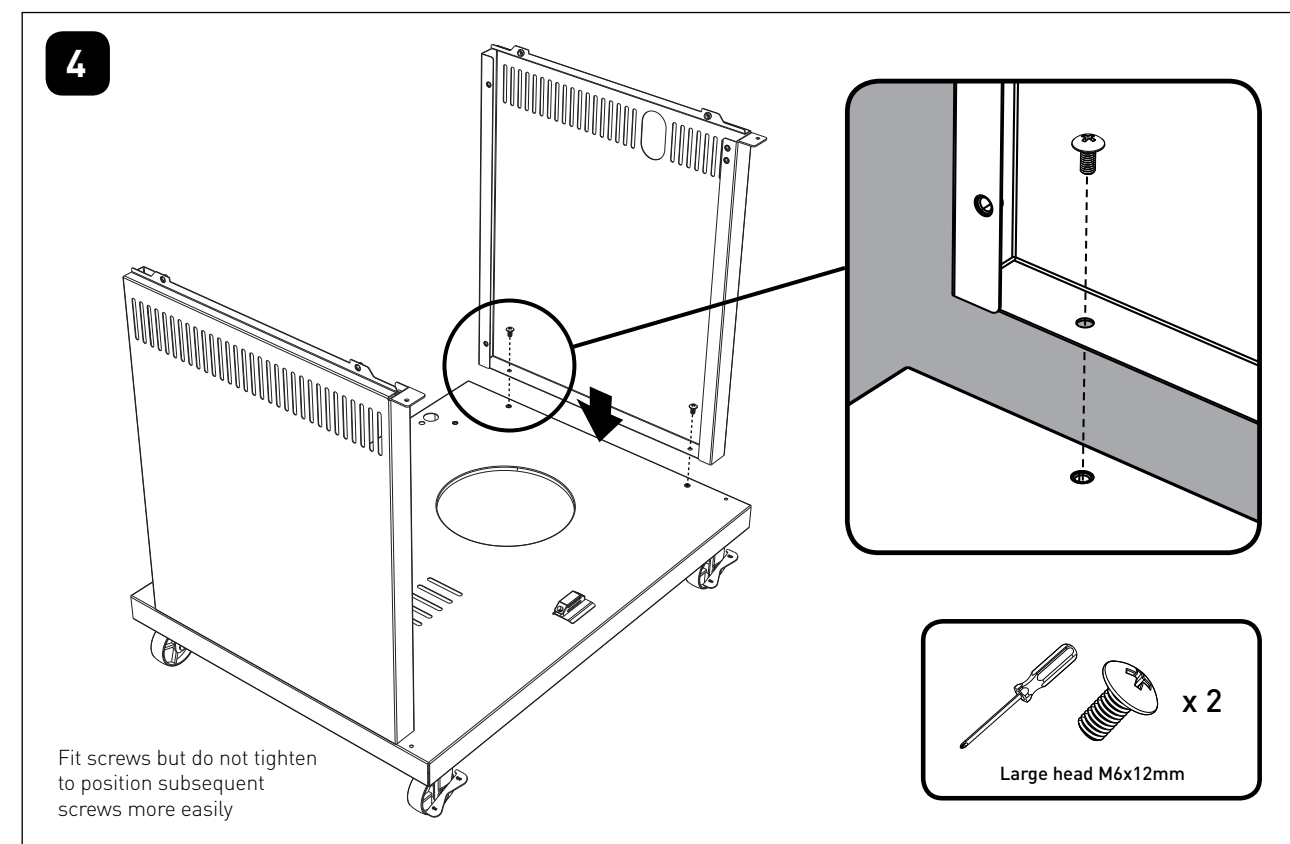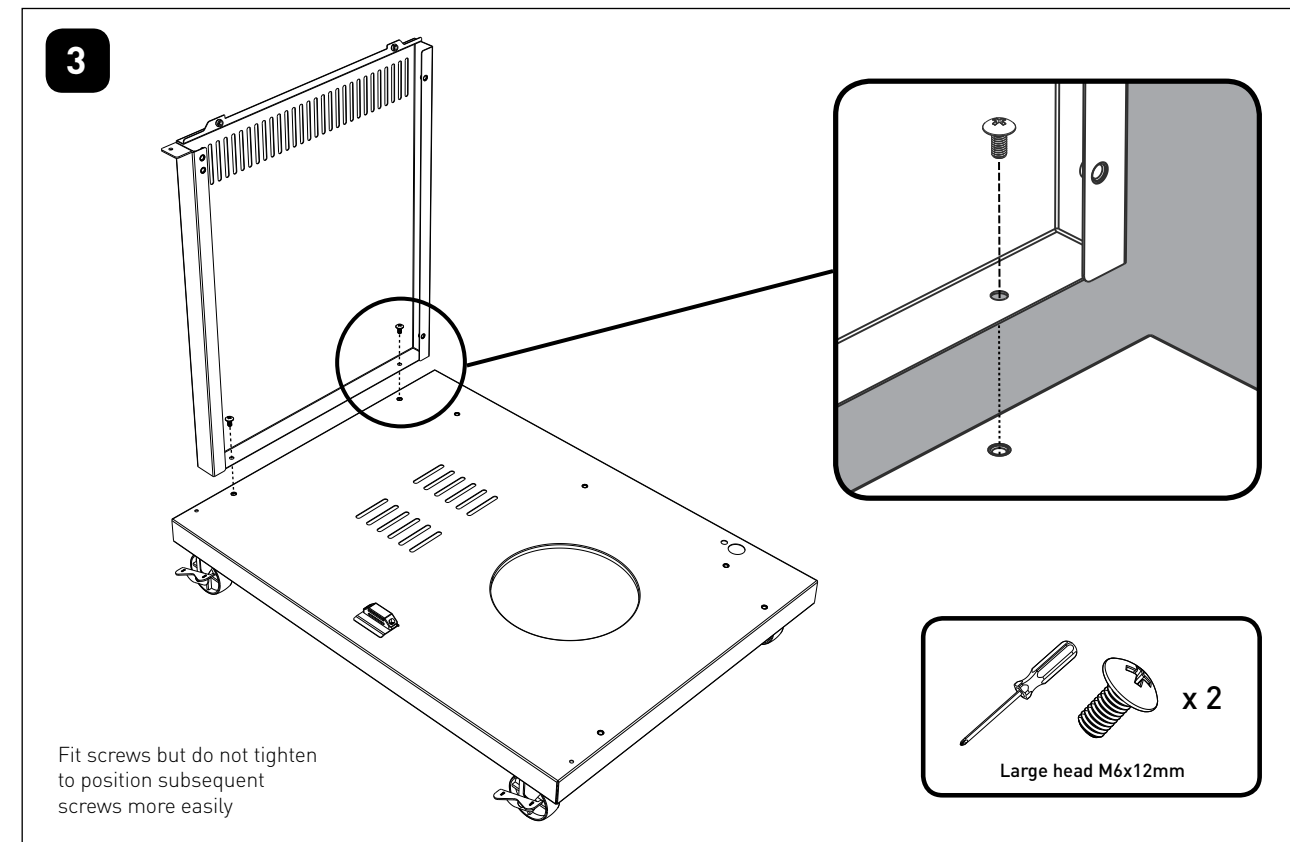

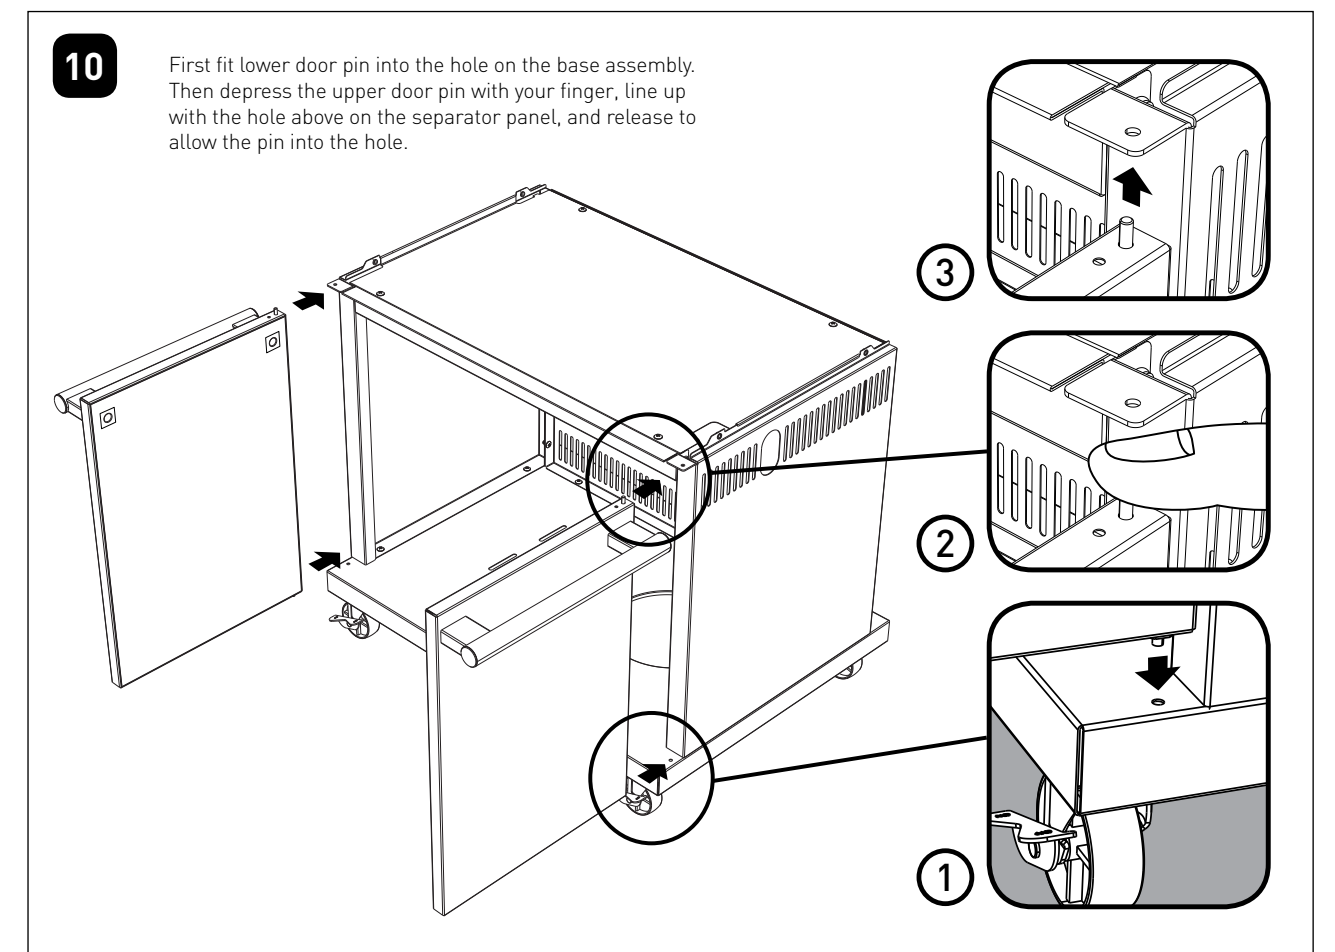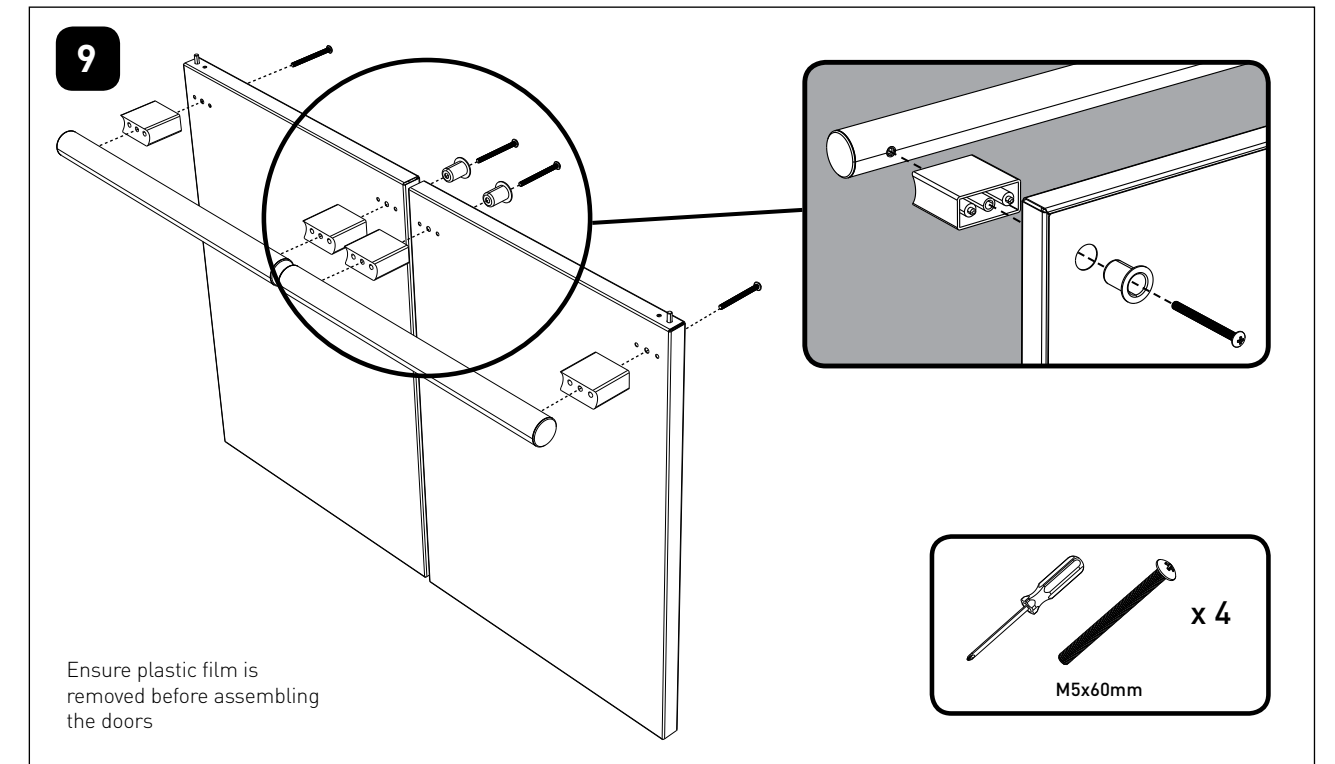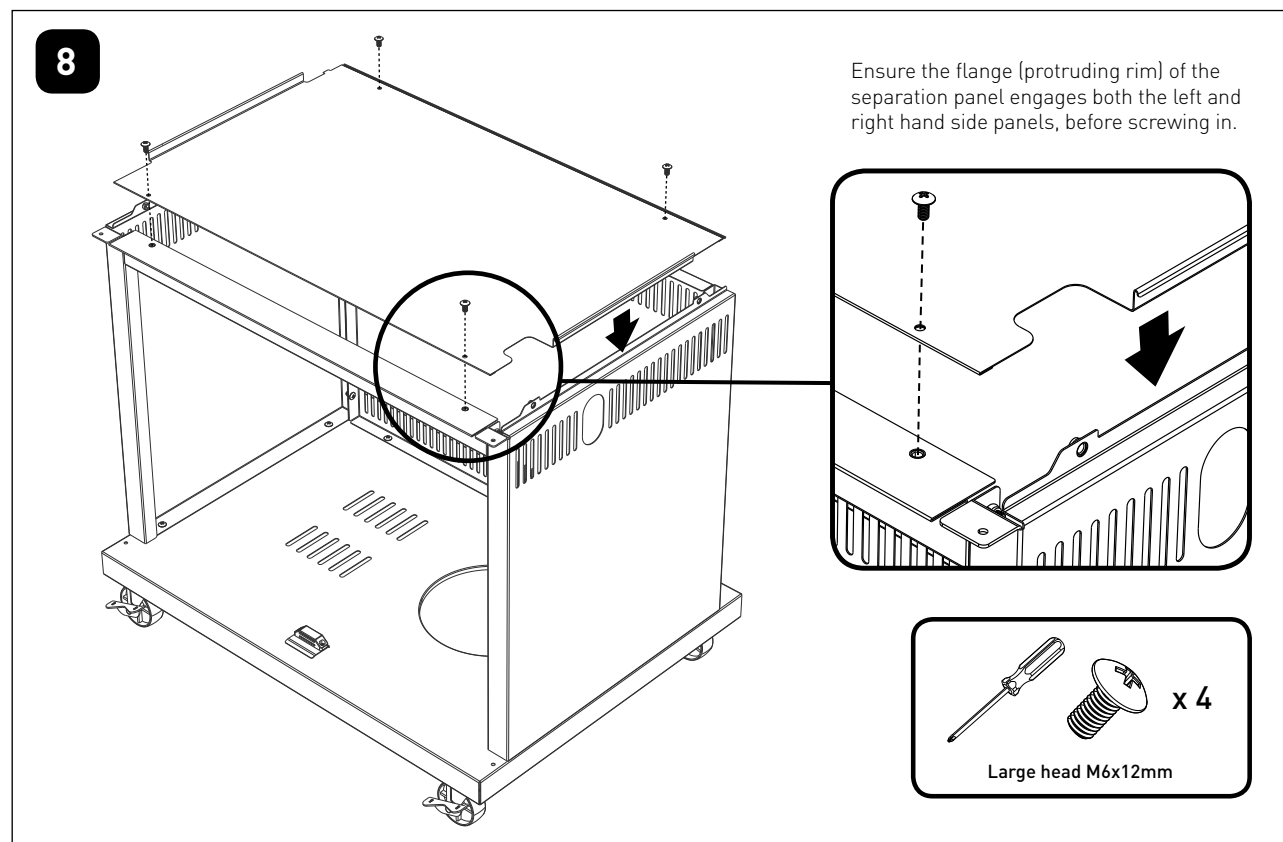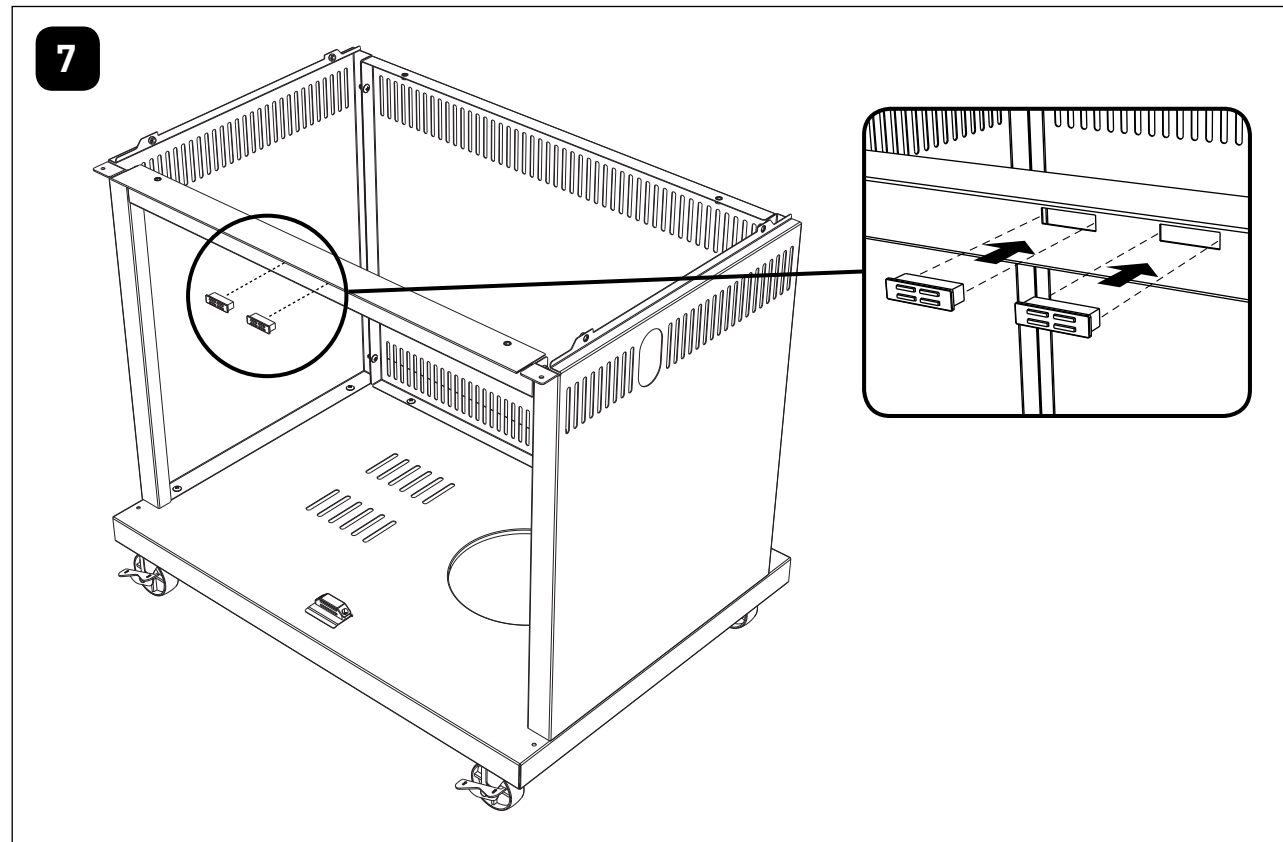


11

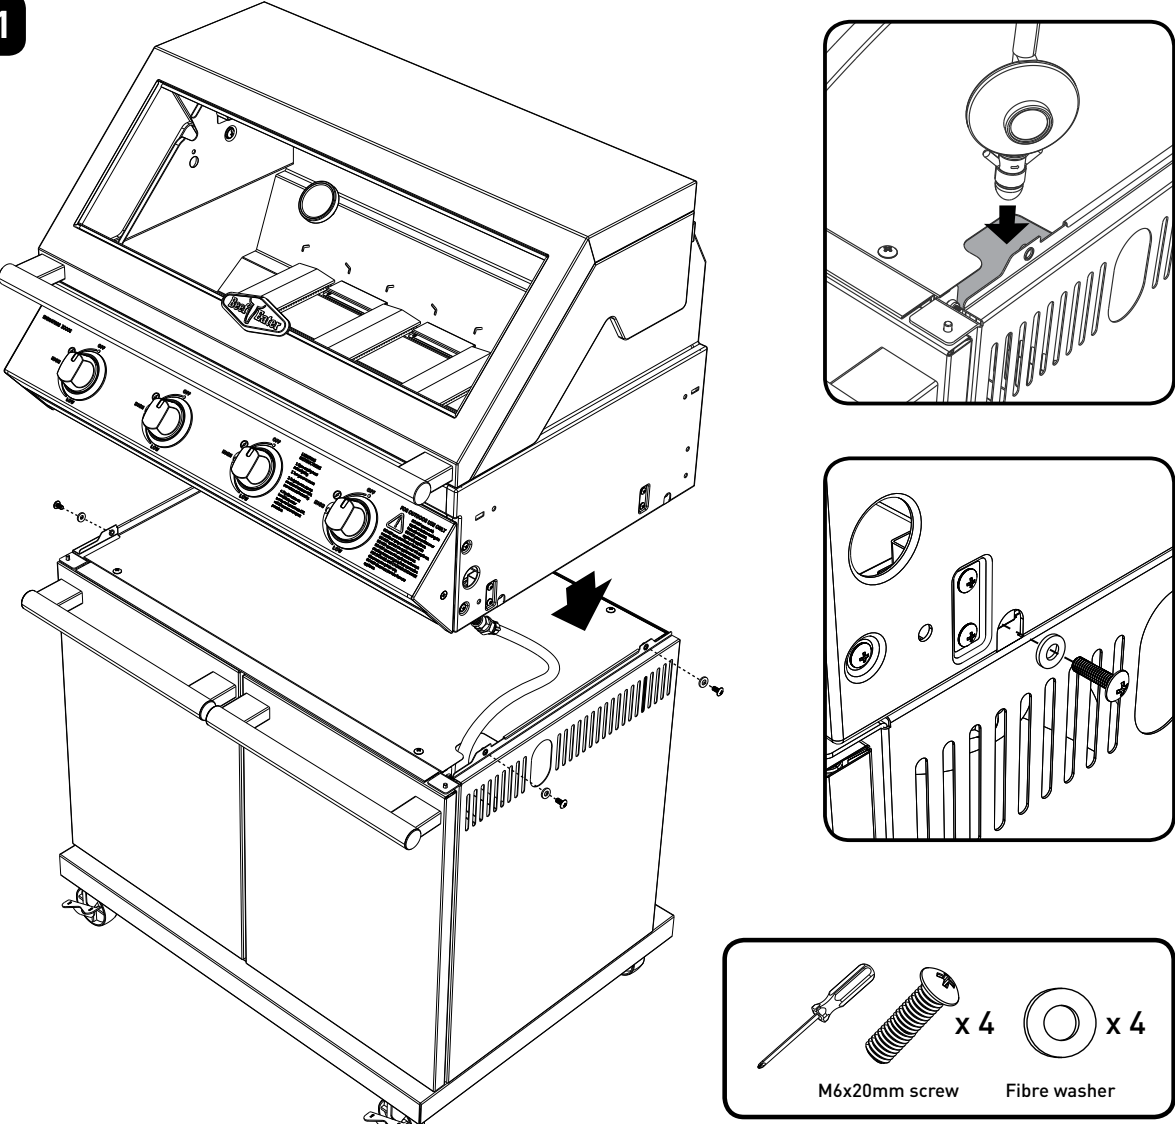 


M6x20mm screw x 4
Fibre washer x 4

 12

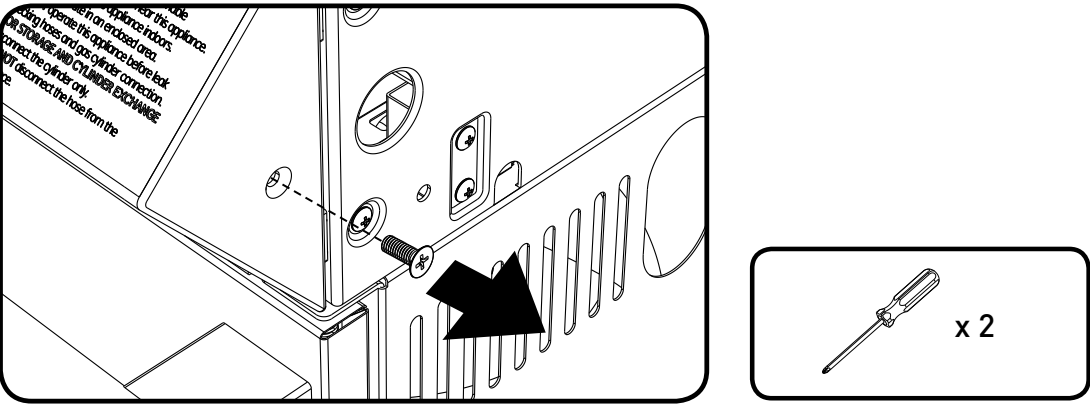

x 2

 
13

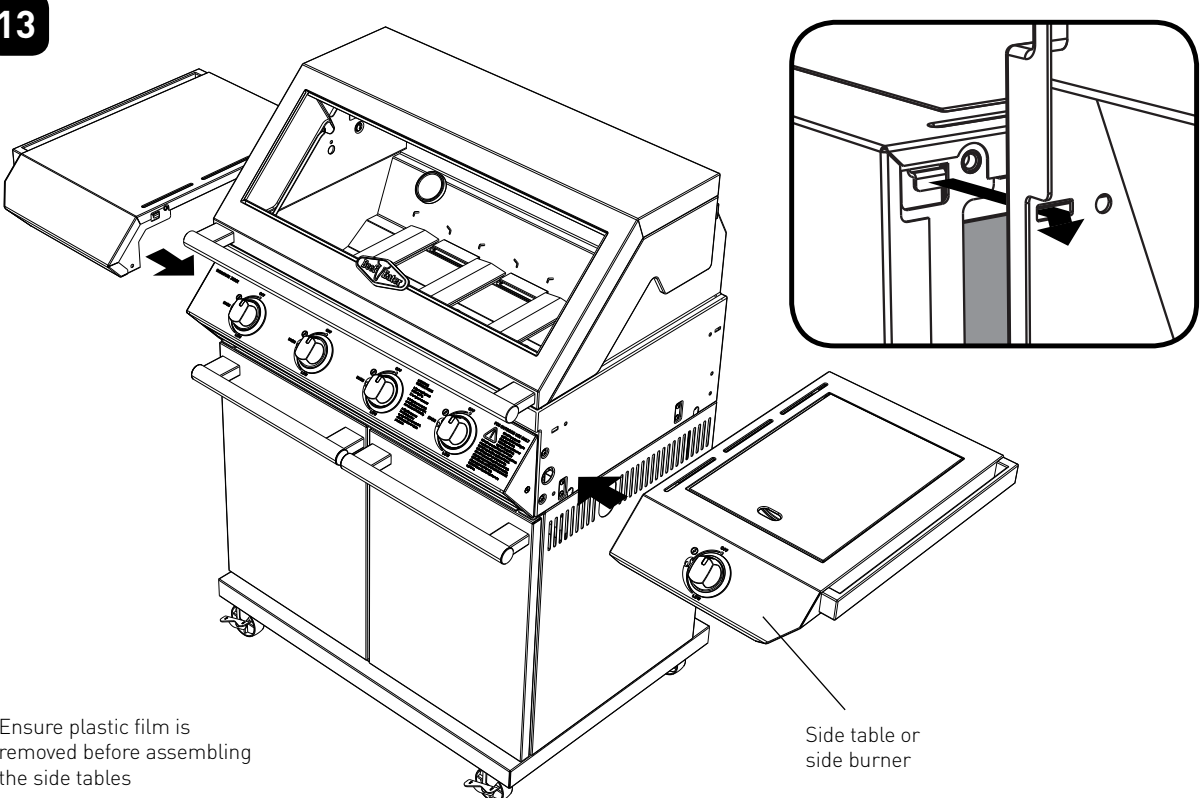

Ensure plastic film is removed before assembling the side tables


Side table or side burner

 14

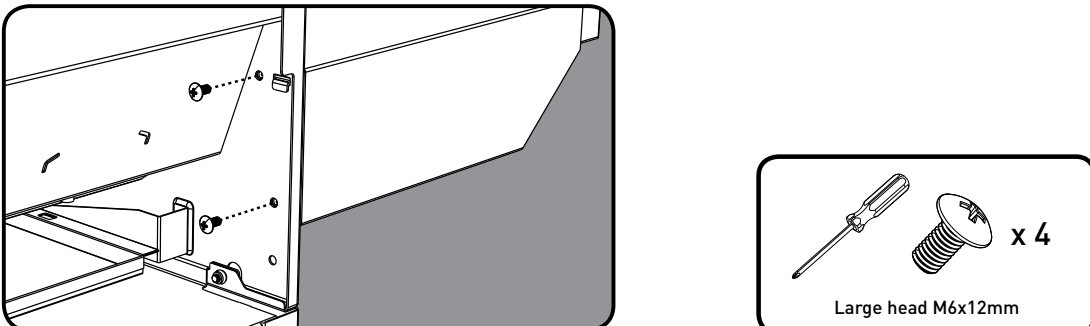

Large head M6x12mm x 4

  
15

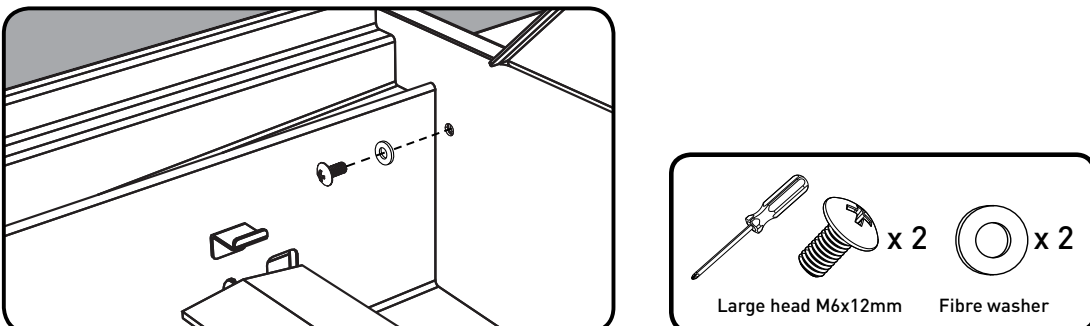
 



Large head M6x12mm x 2
Fibre washer x 2



16

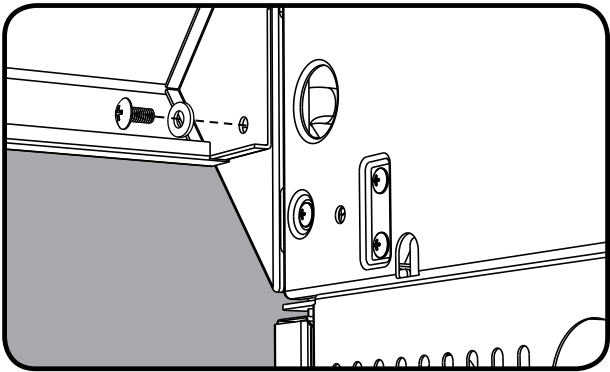 


 x 2

 x 2


Large head M6x12mm Fibre washer


17

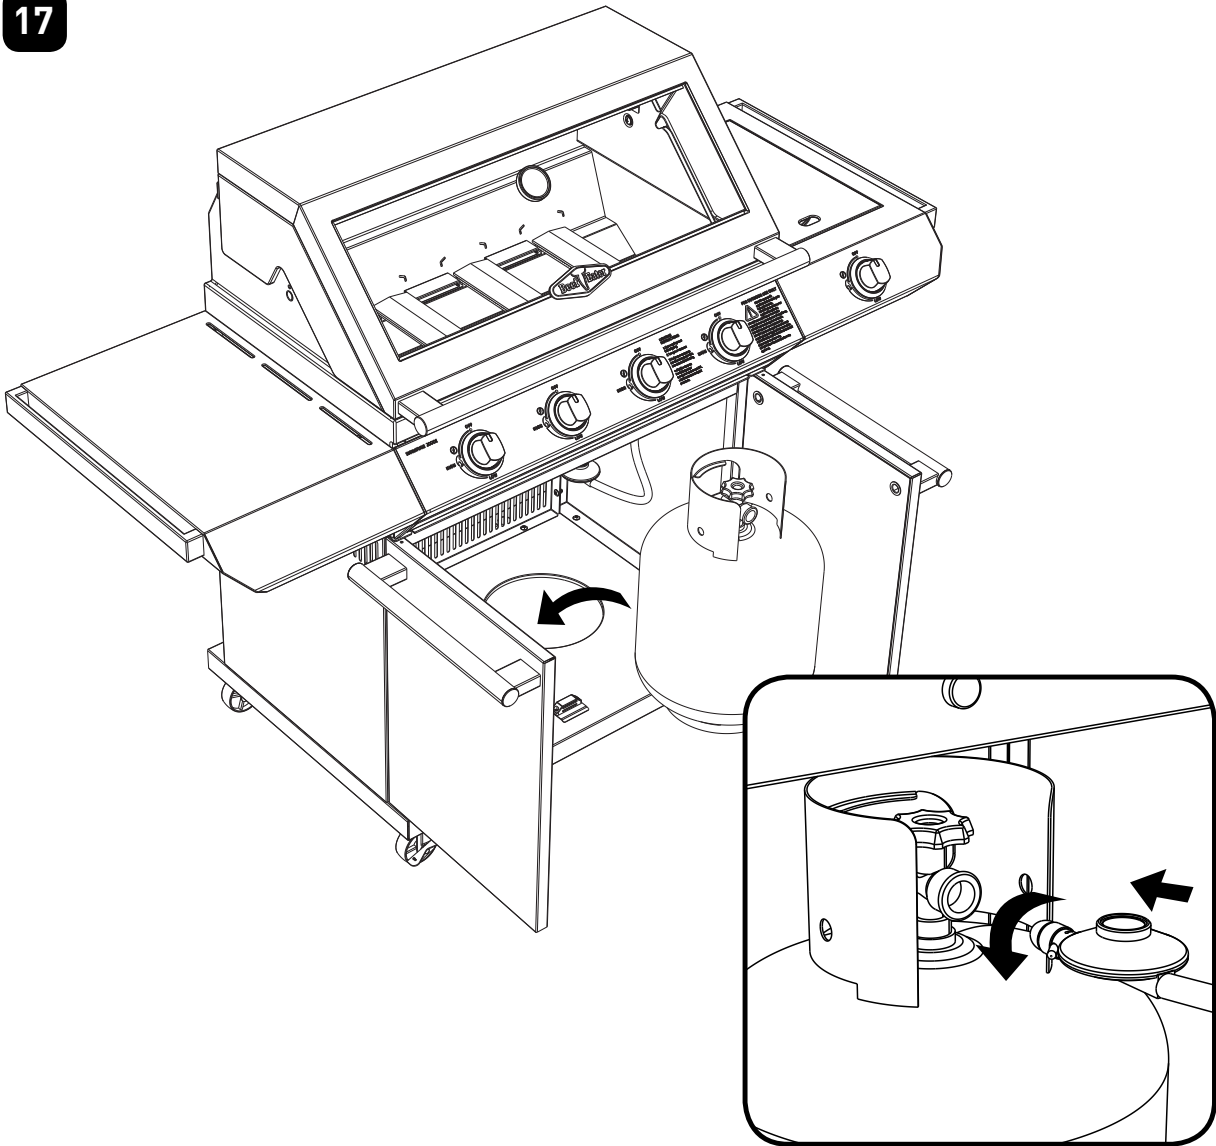

Please note: the right hand side burner assembly is relevant to selected models only. If your barbecue comes with a right hand side table instead, please disregard the below instructions.

 
1

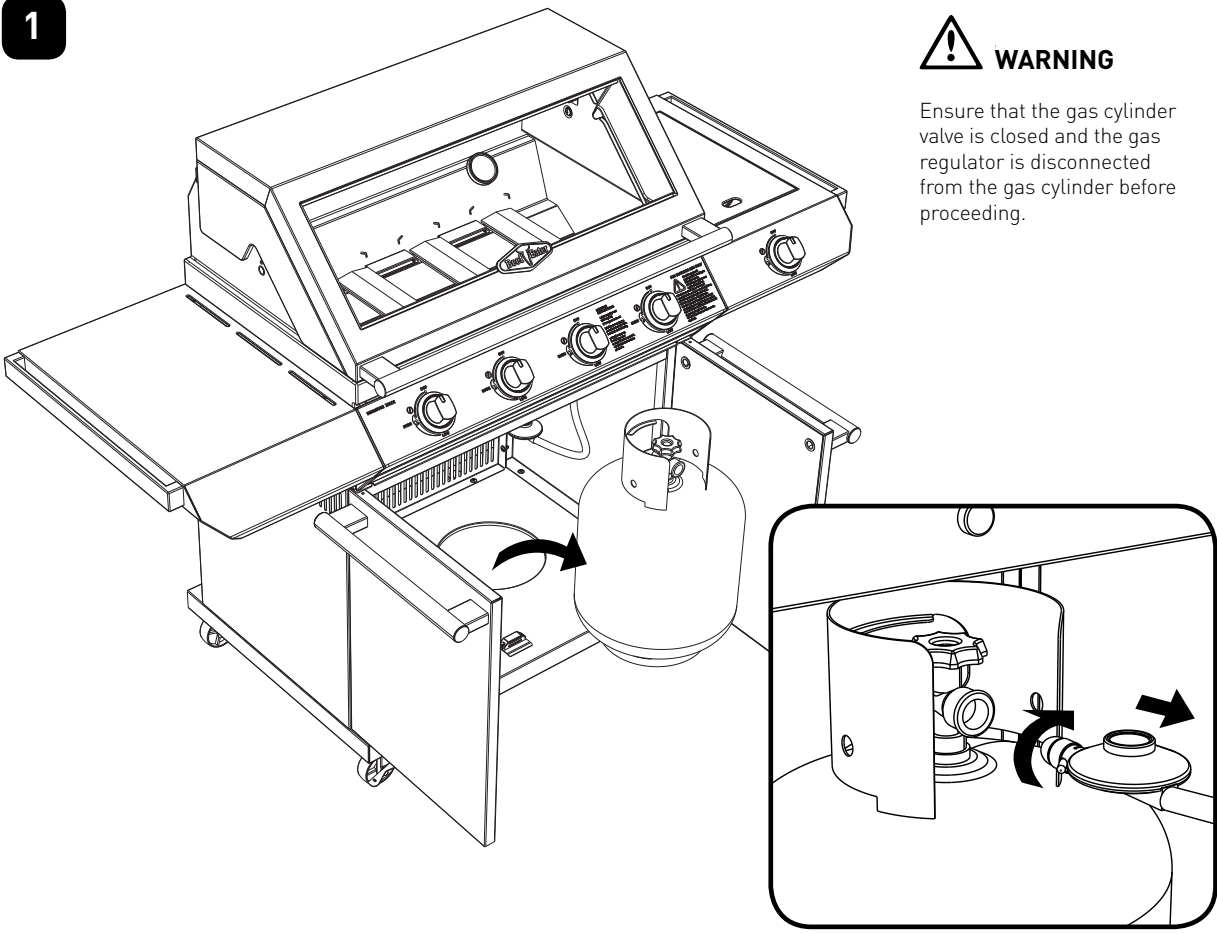



 **WARNING**

 Ensure that the gas cylinder valve is closed and the gas regulator is disconnected from the gas cylinder before proceeding.

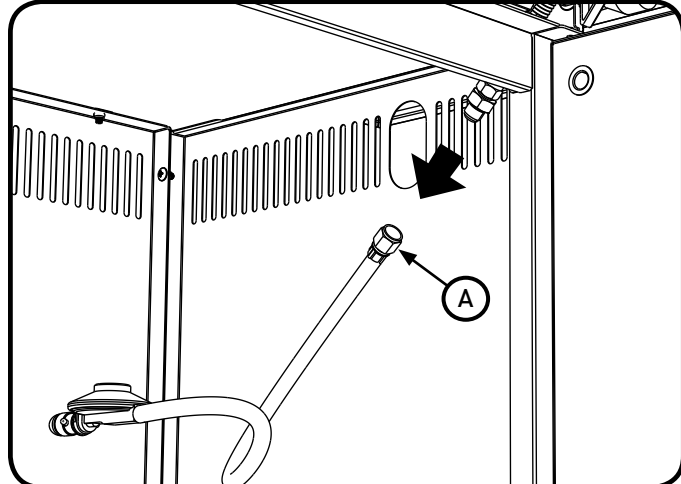
2




Disconnect the gas hose and regulator assembly (A) from the barbecue using 2 spanners.



 
3

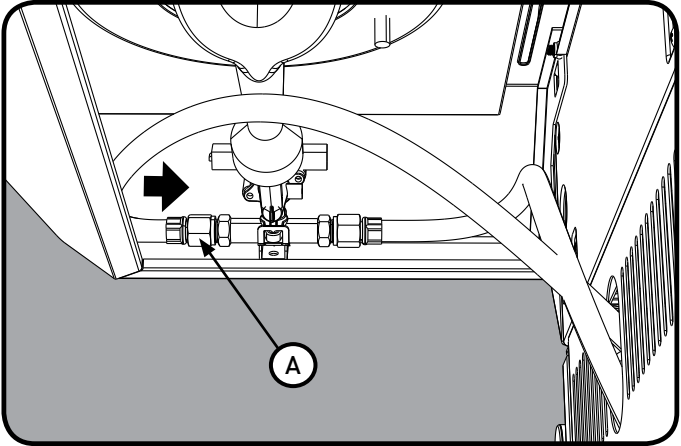

 
Connect the gas hose and regulator assembly (A) to the side burner connection using 2 spanners.

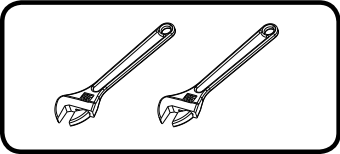


4

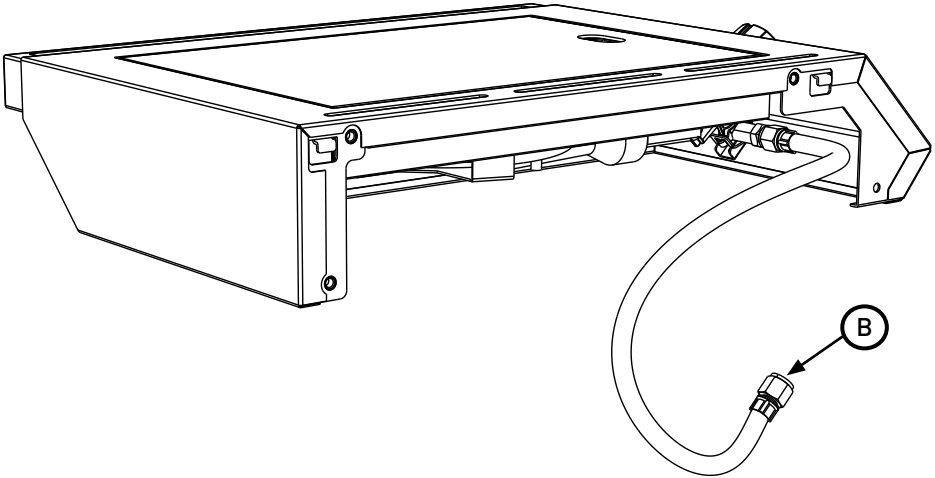 


5

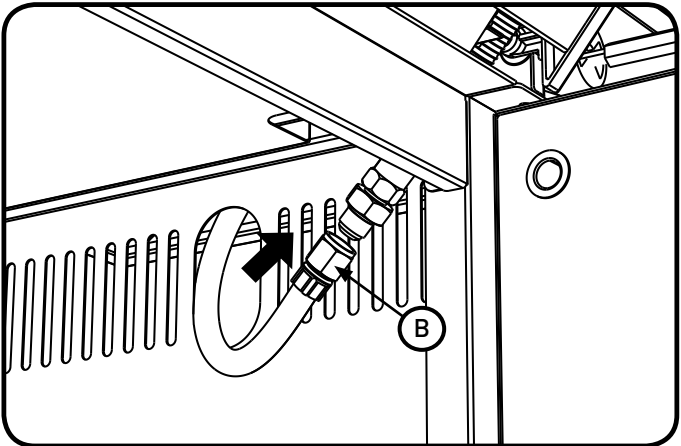 

 Connect gas hose (B) to the barbecue connection using 2 spanners.

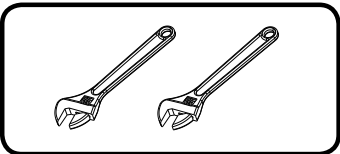


6

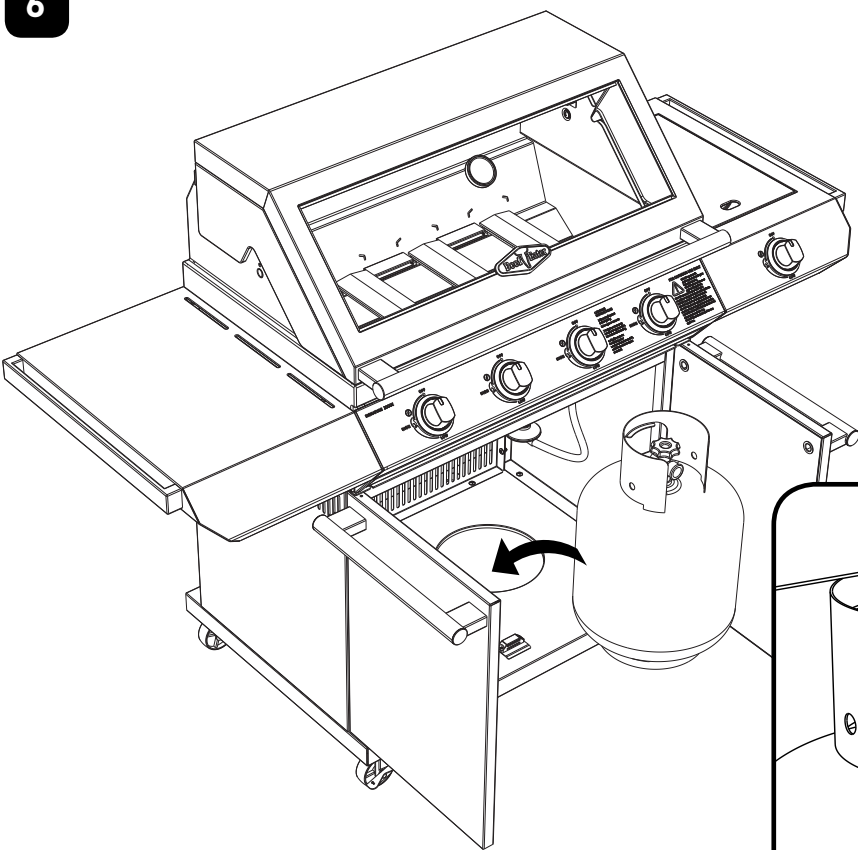 

i IMPORTANT
After completing the gas hose connection, conduct a leak test by following the instructions on page 18, before using the appliance.

 ! WARNING
Failure to ensure gas tight connections and conduct leak test after every reconnection of the gas cylinder may result in a fire or explosion.

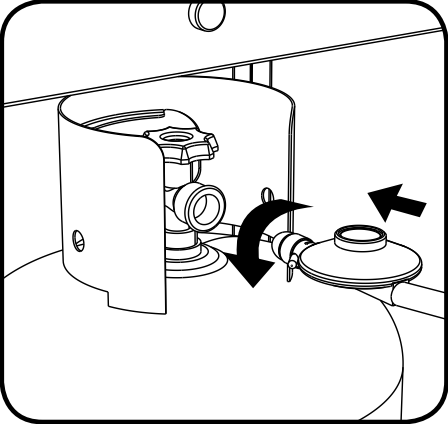



Leak test procedure

 
- Ensure all gas valves are in the 'OFF' position.
- In a small container, mix a solution of water and detergent or soap.
- After connection of the hose, turn on the gas supply at the gas bottle or mains as appropriate.
- Using a brush apply the solution to the gas connection points and look for bubbles forming.
- Bubbling will indicate a leak.
- Turn off the gas supply and re-tighten the joint. Repeat the leak test.
- If the leak persists, turn off the gas at the isolation valves and contact a licensed gas fitter to correct.




WARNING

Failure to ensure gas tight connections and complete the gas leak test procedure before use and after every reconnection to a gas cylinder may result in a fire or explosion.

BARBECUE TO GAS BOTTLE CONNECTION

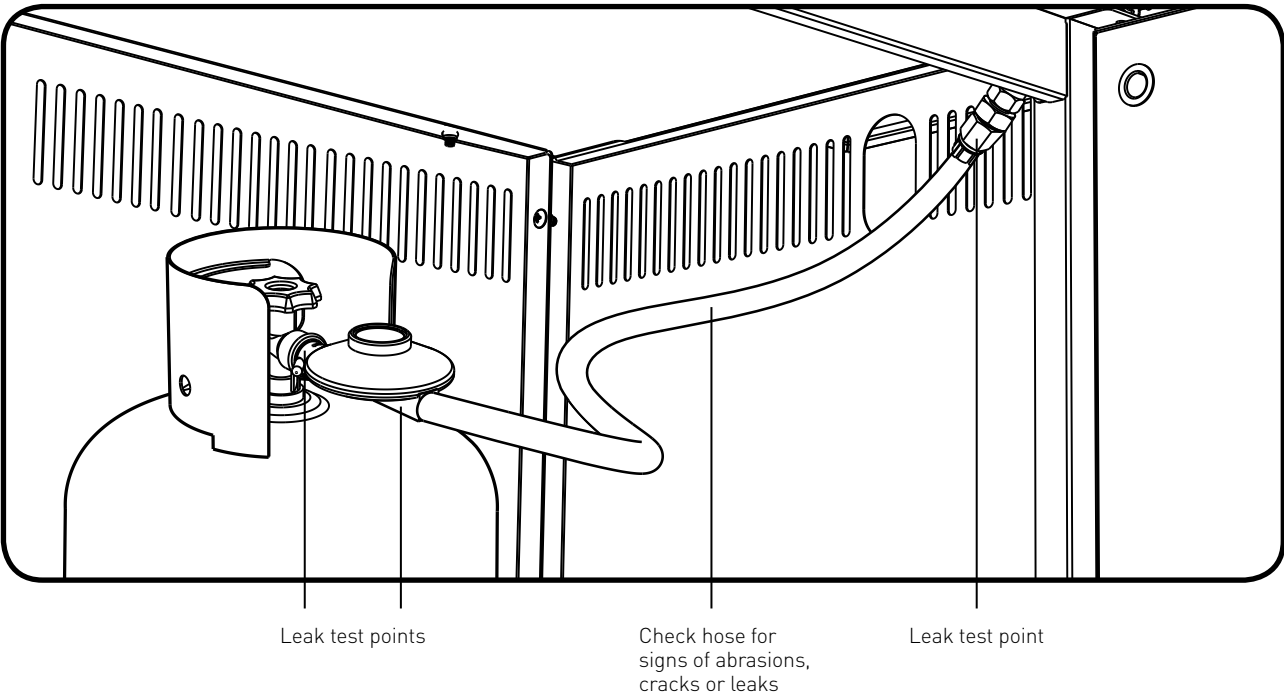

SIDE BURNER CONNECTION

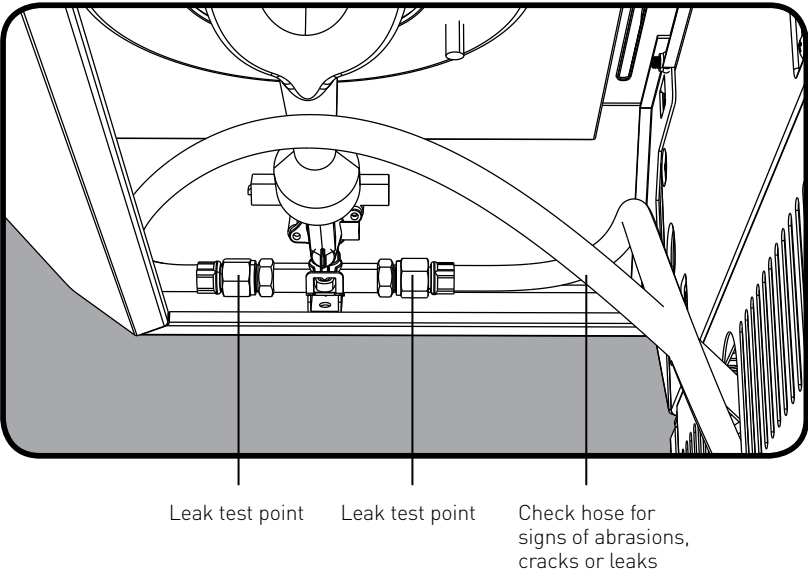 

Please note: the right hand side burner assembly is relevant to selected models only. If your barbecue is fitted with a right hand side table instead, please disregard the below information.

Before lighting the side burner

- Read instructions before lighting
- Check that all hoses and gas fittings are tight
- Open the side burner lid
- Check the control knob is in the 'OFF' position
- Turn the gas isolation valve 'ON'

Lighting instructions



WARNING

 
- Do not attempt to light the burner with the lid closed
- Do not close the lid when the burner is lit
- To light the burner, depress the knob and rotate to ⚡. The starter mechanism will click and the burner will light
- If the burner did not light, depress the knob and turn back to the 'OFF' position
- Allow several minutes for gas to disperse then repeat lighting procedure
- Once ignited, the knob can then be turned to the desired heat setting. The knob does not need to be pushed in while selecting the heat setting

Manual lighting

- In the event of the automatic ignition system not working, the barbecue can be lit manually
- Position the manual igniter next to the burner. Depress the knob and rotate to 'HIGH'
- The burner should light
- Do not attempt to manually light the burner for more than 5 seconds
- If the burner did not light, depress the knob and turn back to the 'OFF' position
- Allow several minutes for gas to disperse then repeat lighting procedure

Using cookware on the side burner


Do not use oversized cookware or place cookware off-centre over the burner as this can cause high temperatures in control knob and surrounding panels. Cookware should not exceed 200mm in diameter, the use of larger cookware may cause damage to the appliance and is not covered under warranty.

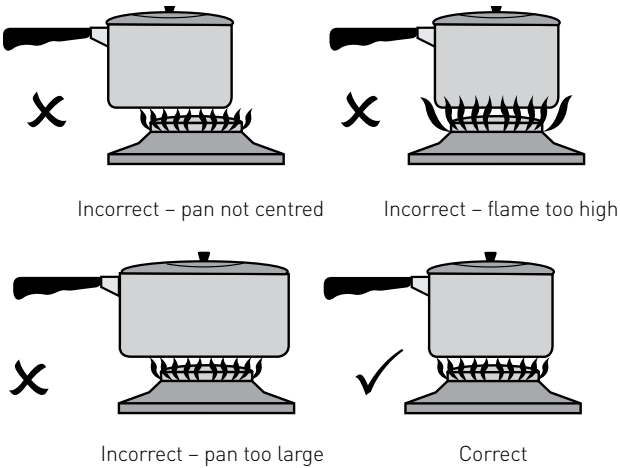

	4 BURNER	5 BURNER	4 BURNER	5 BURNER
GAS TYPE	UNIVERSAL LPG	UNIVERSAL LPG	NATURAL GAS	NATURAL GAS
Maximum gas consumption	84 MJ/h	101 MJ/h	83 MJ/h	100 MJ/h
Injector orifice diameter (barbecue burners)	ø1.15 mm	ø1.15 mm	ø1.90 mm	ø1.90 mm
Injector orifice diameter (side burner)	ø1.10 mm	ø1.10 mm	ø1.80 mm	ø1.80 mm
Number of injectors (barbecue burners)	4	5	4	5
Regulator pressure	2.75 kPa	2.75 kPa	1.0 kPa	1.0 kPa

Mobile restraint with hose assembly

 When the mobile barbecue is connected to a fixed gas supply via a flexible hose connection, a retraining tether of adequate strength shall be fixed to the appliance and be suitable to be fixed to the wall within 50mm of each connection point. The retaining tether must be less than 80% of the gas hose length.

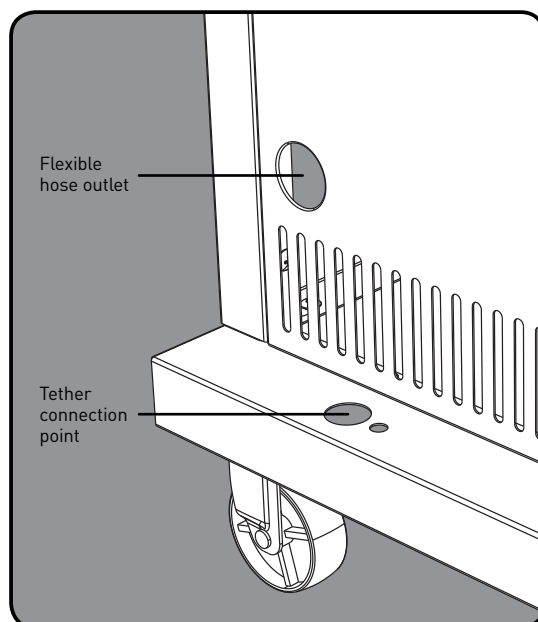

IMPORTANT

For further information on:

- GAS SPECIFICATIONS
- LPG INSTALLATION
- NATURAL GAS INSTALLATION
- OPERATING INSTRUCTIONS
- COOKING INSTRUCTIONS
- CLEANING AND CARE
- TROUBLESHOOTING:

REFER TO BUILT-IN INSTRUCTION MANUAL

NOTES

[illegible]



FOR SALES IN AUSTRALIA AND NEW ZEALAND
APPLIANCE: BEEFEATER SIGNATURE BBQ

This document sets out the terms and conditions of the product warranties for BeefEater Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. In this warranty:

- (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
- (b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
- (c) 'ASC' means Electrolux's authorised serviced centres;
- (d) 'BeefEater' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
- (e) 'Warranty Period' means the period specified in clause 3 of this warranty;
- (f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

2. Application: This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.

3. Warranty Period: Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance. Specific components are warranted against manufacturing defects in Australia and New Zealand for the periods listed below;

- Stainless Steel Box – Further 23 years parts only
- Enamel burner box – Further 8 years parts only
- Stainless steel plates, grills and burners – Further 3 years parts only
- Cast iron plates, grills and burners – Further 1 year parts only

4. Repair or replace warranty: During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.

5. Travel and transportation costs: Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.

6. Proof of purchase is required before you can make a claim under this warranty.

7. Exclusions: You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

- (a) light globes, batteries, filters or similar perishable parts;

Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

<p>AUSTRALIA</p>	<p>FOR SERVICE or to find the address of your nearest authorised service centre in Australia PLEASE CALL 1300 307 939 For the cost of a local call</p>	<p>FOR SPARE PARTS or to find the address of your nearest spare parts centre in Australia PLEASE CALL 13 13 50 For the cost of a local call</p>
<p>NEW ZEALAND</p>	<p>FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand PLEASE CALL 0800 10 66 10</p>	<p>FOR SPARE PARTS or to find the address of your nearest spare parts centre in New Zealand PLEASE CALL 0800 10 66 20</p>

- (b) parts and Appliances not supplied by Electrolux;
- (c) cosmetic damage which does not affect the operation of the Appliance;
- (d) damage to the Appliance caused by:
 - (i) negligence or accident;
 - (ii) misuse or abuse, including failure to properly maintain or service;
 - (iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
 - (iv) normal wear and tear;
 - (v) power surges, electrical storm damage or incorrect power supply;
 - (vi) incomplete or improper installation;
 - (vii) incorrect, improper or inappropriate operation;
 - (viii) insect or vermin infestation;
- (ix) failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- (a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
- (b) the Appliance is modified without authority from Electrolux in writing;
- (c) the Appliance's serial number or warranty seal has been removed or defaced.

8. How to claim under this warranty: To enquire about claiming under this warranty, please follow these steps:

- carefully check the operating instructions, user manual and the terms of this warranty;
- have the model and serial number of the Appliance available;
- have the proof of purchase (e.g. an invoice) available;
- telephone the numbers shown below.

9. Australia: For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

10. New Zealand: For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

11. Confidentiality: You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

For more information on all Beefeater products,
or for dimension and installation information,
call into your retailer, phone or email our customer
care team or visit our website:

AUSTRALIA

phone: 1300 307 939
email: customercare@beefeaterbbq.com
web: beefeaterbbq.com

NEW ZEALAND

phone: 0800 436 245
email: customercare@electrolux.co.nz
web: beefeaterbbq.com

BeefEater. We are part of the Electrolux Family.
To add a touch of professional inspiration to your
home, visit electrolux.com.au