

Quick Start Guide

 
WFE612, WFE614, WFE616, WFE512, WFE532 oven series



Enjoy peace of mind. Register your appliance today.

Stay updated on better living services, safety notices and shop for accessories.

1. **Open the camera app on your smartphone and point at the QR code to scan**
Product Registration QR code is located on the front of your appliance or inside the door rim*.

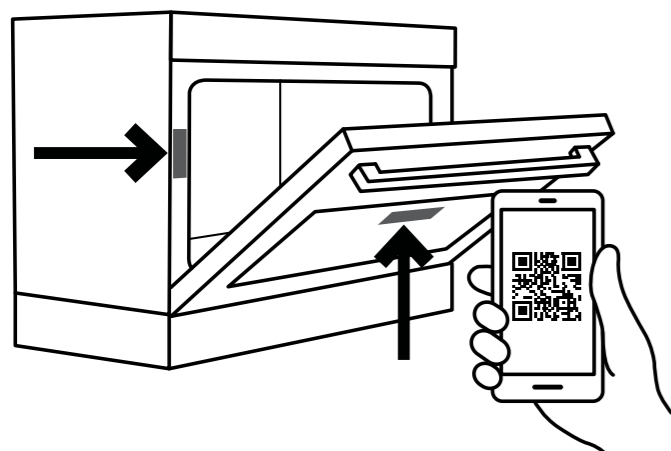

2. **Tap the notification or link to open the registration form**
3. **Complete your details and enjoy peace of mind**

*Exact location of QR code may vary depending on oven model



Need more help?

To access your detailed user manual online, simply scan the QR code on your smart phone. If you prefer a printed manual, please contact our Customer Care Centre using details below.



Customer Care Centre

Contact us if you need more help

Electrolux Home Products Australia

telephone: 13 13 49
email: customercare@electrolux.com.au
web: electrolux.com.au

Electrolux Home Products New Zealand

telephone: 0800 436 245
email: customercare@electrolux.co.nz
web: electrolux.co.nz

Quick Start Guide

WFE612, WFE614, WFE616, WFE512, WFE532 oven series



Dear Customer,

Thank you for purchasing a Westinghouse appliance. You have chosen a product that comes from a history of durable and reliable products loved by many families. We look to help you make the most of your time at home, so you can spend your time doing what you really love, with the ones you love.

Welcome to Westinghouse.

Ready



This is a Quick Start Guide. Please refer to user manual online for detailed information and installation

To access your detailed user manual online, simply scan the QR code on your smart phone.

For more detailed information and installation guide refer to user manuals at westinghouse.com.au/manuals

Before you start, please make sure:

 
- Your cooker has been correctly installed by a qualified person.
- Your cooker has power and is switched on.
- You've removed all relevant packaging.



Most of the packaging materials can be recycled. Please dispose of them at your local recycling centre or in your own recycling bin.

Set...

Get to know your control panel:

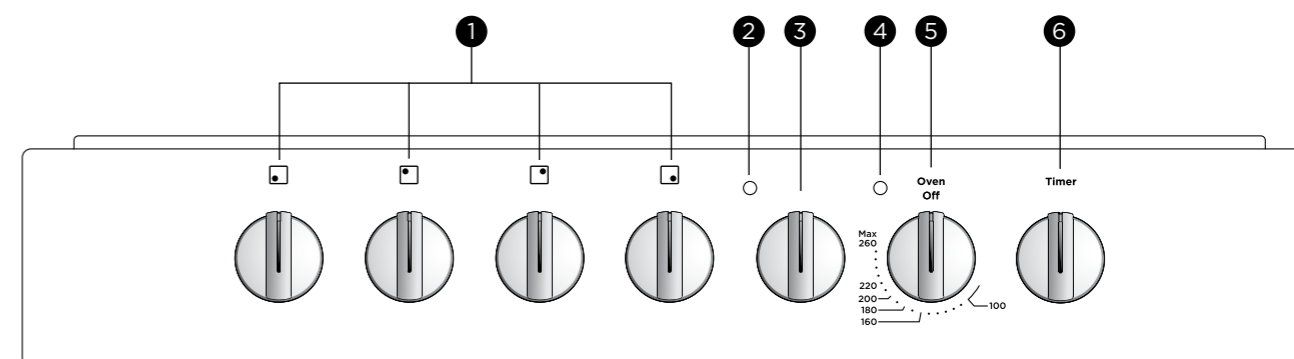


- | | | |
|---|--|-----------------------------|
| 1 Cooktop controls | 3 Grill temperature selector for WFE512, WFE532, WFE612 models | 4 Oven indicator light |
| 2 Grill indicator light for WFE512, WFE532, WFE612 models | Function selector for WFE614, WFE616 models | 5 Oven temperature selector |
| | | 6 Timer |

Set...


Installing the oven accessories

Fitting the oven shelves

 1. Ensure shelf orientation is correct (refer to diagram below).
2. Slide oven shelves onto oven supports (side runners) at an angle until raised back of shelf is past the stop on oven supports (side runners).
3. Lower front of shelf and push in until stop is reached.
4. To remove oven shelves, withdraw to the stop and raise the front of shelf to clear the stop.

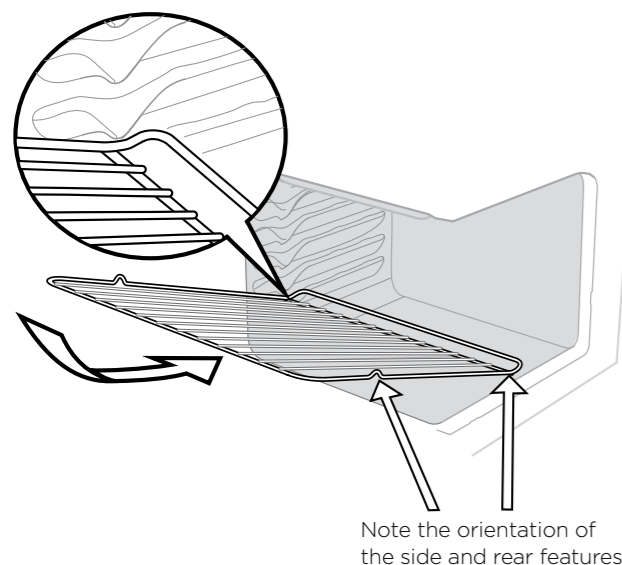


Oven shelf location

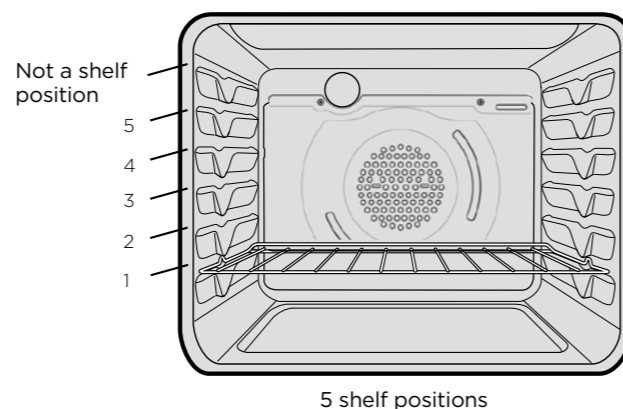 

NOTE: The top ledge is not a shelf position. There are no stops for shelf withdrawal.

Separate grill

 To insert the grill tray in a separate grill underbench product, open the grill door and fully extend the grill drawer. Position the grill tray so that the slots on the outer edges fit over the tabs on the slides.

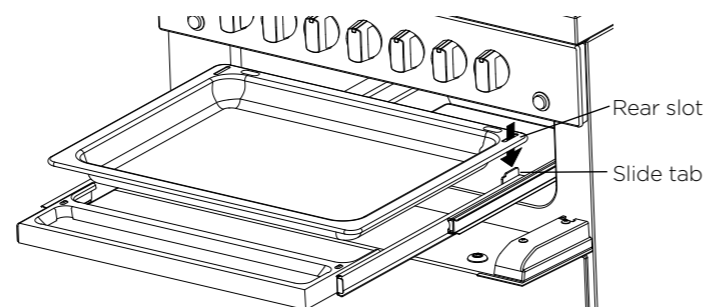


Condition the oven

(to burn off any residue)

New appliances can have oil or residue left from manufacturing. You will need to heat your oven for 30 minutes before using it for the first time.

 1. Ensure the "Auto Off" timer is set to "Off".
2. For WFE614 and WFE616 models turn the function selector dial to "Oven/Fan Bake".
3. Using the oven control knob, set the oven at 180°C for approximately 30 minutes.
4. For separate grill models run grill on maximum for 15 minutes with grill door open.
5. For WFE532 model which is fitted with solid hotplates, turn heat setting to high for 3 minutes to fully harden the hotplate coating.

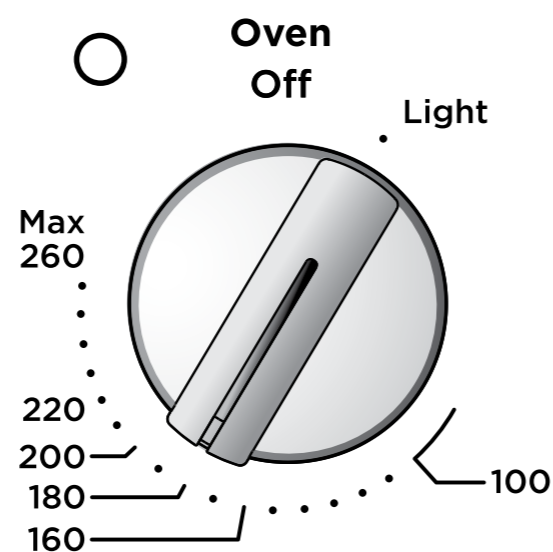

Go!

You're ready to use your new Westinghouse appliance. A few tips from us:

Lighting the gas hotplate, grill and oven

To light a burner, press the corresponding knob and while continuing to press, turn the knob anticlockwise to the 'High' position. Continue to press the knob after the flame is established for approximately 5 seconds. If the flame goes out when the knob is released, allow some time for the gas to disperse, then press the knob again, this time holding it down with slightly more force for the same length of time. Release the knob once the flame is established, and turn further anticlockwise to reduce the flame height as desired.



WARNING

- If burner does not light within 5 seconds, turn the knob to 'Off' position, allow gas to disperse, then try lighting again.

Remember to pre-heat each time.

For best cooking results pre-heat the oven. Pre-heating allows the oven to reach the required temperature quickly and efficiently as well as cook food at the correct temperature for the entire cook time. Recommended pre-heat time is 30 minutes for baking and 3 minutes for grilling.

Choose the right program for the best result:

OVEN

Hot air is distributed by a fan behind the rear wall of the compartment, providing an even temperature on all shelf levels – perfect for multi-level cooking or reheating entire meals for your family..

SOLID COOKTOP (WFE532 model only)

The strong solid-cast cooktop allows wide contact with your cookware for fast, efficient cooking. The cooktop is sealed to prevent spilt liquids from running under the hotplates.

Refer to your full user manual for more details on oven functions.

Set your temperature

- To set the temperature, turn the grill/oven temperature selector knob in a clockwise direction to the desired setting.
- An indicator light in the display will turn on and the grill/oven will begin to heat.
- Once the food is cooked, turn the temperature selector back in an anti-clockwise direction.

Note: For WFE614 and WFE616 models, the desired cooking function must be selected before the oven will turn on.

Set a Timer

- To set the timer, simply turn the timer knob clockwise to the required number of minutes.

Note for 60 minute timer: For any time below 15 minutes, turn knob past 15 minutes, then back to required time setting.

Note for 120 minute timer: For any time below ten minutes, turn the knob past the thirty minute mark, then turn it back to the required number of minutes.