

540MM UPRIGHT COOKERS

User Manual

CFE532WB, CFE532SB, CFE533WB, CFE536WB, CFE536SB, CFE535WB, CFE537WB, CFE547WB, CFE547WBB, CFE547SB, CFE547SBB, CFE516SB, CFG501WB, CFG504WB, CFG504SB, CFG503WB, CFG513SB, CFG513WB, CFG517WB, CFG517SB, CFG505WB, CFG505SB



The Chef in Aussie kitchens for over 70 years

CONGRATULATIONS

Congratulations and thank you for choosing your Chef upright cooker. We are sure you will find your new appliance a pleasure to use and a great asset to your cooking. Before you use the appliance, we recommend that you read through the whole user manual which provides a description of the product and its functions. For future reference, please store this booklet in a safe place.

To avoid the risks that are always present when you use a gas appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards

This appliance complies with the requirements of Australia standards AS/NZS 60335.2.6 and AS/NZS 5263.

CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments.

Docord	model	and	corial	number	horo
Kecord	model	ana	seriai	number	nere:

Model:	
Serial number:	

The symbols you will see in this booklet have these meanings:



warnina

This symbol indicates information concerning your personal safety



This symbol indicates information on how to avoid damaging the appliance



tips and information

This symbol indicates tips and information about use of the appliance



environmental tips

This symbol indicates tips and information about economical and ecological use of the appliance

Contents

Important safety instructions	3
Installation	4
Gas conversion instructions	11
Operating for the first time	18
Installing your oven accessories	19
Using the gas cooker	20
Using the electric cooker	22
General hints and tips	24
Cleaning the cooker	26
Getting to know your oven	30
Oven guide	31
Troubleshooting	32
Warranty	34

Important - check for any damage or marks

If you find the appliance is damaged or marked, you must report it within 7 days if you wish to claim for damage/ marks under the manufacturer's warranty. This does not affect your statutory rights.

Information on disposal for users

- Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

Important Information that may impact your **Manufacturer's Warranty**

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Chef manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Chef manufacturer's warranty in the event that your product fault is due to failure to adhere this manual.

Important safety instructions



$! \setminus$ To avoid an electric shock or fire

This appliance is NOT intended for use by persons (including children) with reduced physical, sensory or mental capability, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING - Accessible parts may become hot during use. To avoid burns, young children should be kept away.

Young children should be supervised to ensure they do not play with this appliance.

DO NOT operate the hotplates with external timers or separate remote control system.

During use this appliance becomes hot. Care should be taken to avoid touching hot external, internal surfaces and hot elements when in use. Use oven gloves.

This appliance must NOT be used as a space heater.

DO NOT install an after market lid or cover over this appliance.

DO NOT spray aerosols in the vicinity of this appliance while it is in operation.

DO NOT use or store flammable materials in the appliance (incl storage drawer) or near this appliance.

Ensure all specified vents, openings and airspaces are not blocked

Install cooker, shelving and fittings in accordance with the Guide and Installation Instructions, to avoid accidents.

DO NOT operate the gas appliance if the smell of gas persists.

DO NOT MODIFY THIS APPLIANCE.

The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

DO NOT install this appliance behind a decorative door in order to avoid overheating

DO NOT use this appliance as a space heater



Grill warnings

DO NOT leave grill on unattended.

Fat left on a grill dish is a fire hazard! Keep grill clean and turn off grill immediately after use.

If gas burner does not light in 15 seconds, allow one minute for gas to clear before trying again.

Placing thick portions of food under grill can be a fire hazard.

DO NOT cover the grill dish insert with foil.



Separate grill model: Grill with door open

Grill in oven model: Grill with door closed



Oven warnings

DO NOT use oven door as a shelf.

DO NOT push down on open oven door.

If the gas oven does not light in 8 seconds, allow 1 minute for gas to clear before trying again.

DO NOT line oven with foil or place anything on the bottom of the oven while baking, as trapped heat will crack or craze the floor of the oven cavity liner.

DO NOT use poly-unsaturated oils (vegetable oils) as this type of oil can cause black spots or deposits inside the oven. This residue is very difficult to remove.



Hotplate and burner warnings

DO NOT allow pots to boil dry, as damage to hotplate (and pan) may result.

DO NOT operate without a pot, fry pan etc on hotplates.

DO NOT allow cookware to overhang hob onto adjacent bench tops, this will cause scorching to the bench top surface.


Gas models: Ensure burner caps and crowns are in their correct position.

Do not store items on the cooking surface, to avoid fire.

Unattended cooking on a hob with fat or oil can be dangerous and may result in a fire.

General appliance description

Electric Separate Grill Oven depicted

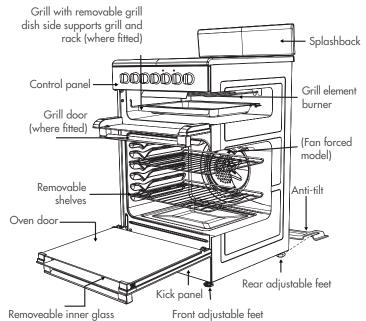


Location

The appliance has been designed to fit a 550mm gap in kitchen cabinetry or have free space on either side. Ensure the top of the hotplate is at least 10mm higher than the level of the benchtop.

Electric hob models must not be installed in a corner; they must be installed at least 100mm from the side wall.


Gas hob models must be installed with a minimum clearance of 100mm to side walls made of unprotected combustible material. For gas models, refer to section 6.10.1 in AS/NZS 5601.1 for all relevant clearance.

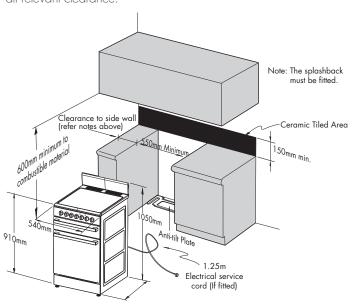




warning

In order to avoid accidental tipping of the appliance (for example, by a child climbing onto the open oven door), the anti tilt plate and stabilising bolt MUST be installed.

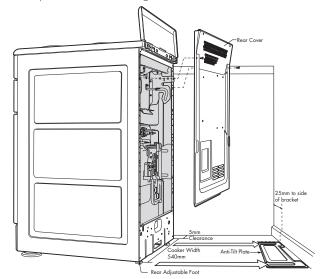


Position anti-tilt plate to the rear wall and 25mm from side of cupboard. Securely fix anti-tilt plate to the floor with fasteners. Adjust levelling feet on cooker as required.

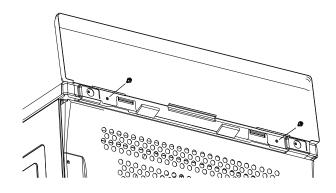

Splashback must be fitted to the rear using the two screws used to fasten the anti-tilt plate and splashback on the rear of the product.

Stabilising bolt

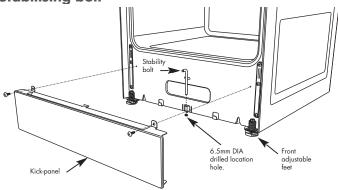

- 1. Remove oven door to be done by qualified personnel only. (Refer to procedure).
- 2. Remove screws from kick panel. To remove kick panel lift kick panel upwards to release the two Location Tabs from the holes in the bottom of the panel.
- 3. Position cooker into the ant-tilt plate and then mark the position for the Stability Bolt hole on the floor.
- 4. Pull cooker out and drill the bolt hole, using a 6.5mm masonry or wood drill. Minimum 30mm deep for concrete.
- 5. Reposition cooker back into place and fit the Stability Bolt through the slot and into the drilled hole.
- 6. If the cooker is placed on a base, measures must be taken to prevent the appliance slipping from the base.
- 7. Carefully remove any protective plastic film to prevent damage to the appliance.




warning


For your safety this cooker is designed to be moved out of position by a qualified person only.

The unit must be pushed up against the wall on installation. On gas units check that the gas hose, if used, has not been kinked during installation.


Procedure to remove the door

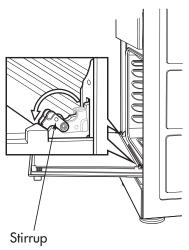


1. With door fully open, rotate the two stirrups to its rest position (to engage the stirrups).

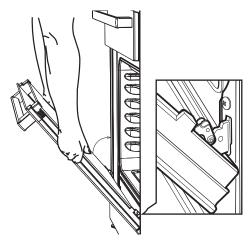


2. Close the door until it stops against the stirrups.

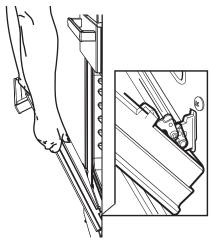

3. Close the door further.

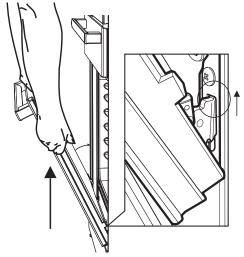


4. Lift the door slightly and evenly while continuing to slowly close the door.

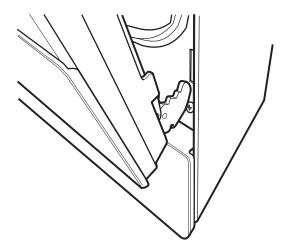


5. Remove the door by lowering gently and pull away from the frame of the oven. Care should be taken not to damage kick panel and other parts of the cooker.


Procedure to assemble the door

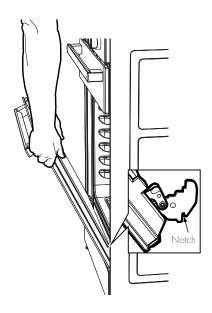

- 1. Hold door with both hands.
- 2. Locate both hinges into the frame slots at the same time.

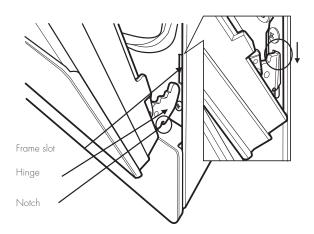

3. Ensure that the location notch drops into frame slot. Care should be taken not to damage other parts of the cooker.

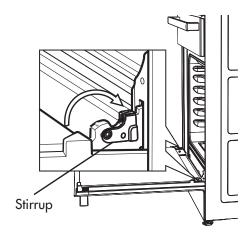

- 4. Open door fully and rotate stirrups away from you back to their original position.
- 5. Close the door fully.
- 6. Carefully remove any protective plastic film to prevent damage to the appliance.

Electric wiring requirements


The cooker MUST be installed in compliance with:

- Wiring connections in AS/NZS 3000 Wiring Rules.
- Local regulations, municipal building codes and other statutory regulations.
- Data Plate Gives information about the rating and is located behind the bottom of the oven door.
- A functional switch MUST be provided near the appliance in an accessible position (AS/NZS 3000).
- Wiring MUST be protected against mechanical failure (AS/ NZS 3000).
- Disconnection from the fixed wiring must occur as required by AS/NZS 3000 wiring rules.
- This range must be connected with cable of 75°C rating minimum
- This product has passed the insulation resistance test after manufacture. If the resistance reading is low at installation, it is probably caused by moisture from the atmosphere being absorbed by the elements after the range has been produced. (pass at $0.01M\Omega$ AS/NZS 3000 Wiring Rules).
- The cooker MUST be properly earthed.
- When connections are made to a multiphase 230/240V supply, the bridge piece MUST be removed from between the active connections.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance must be fixed in position or must be connected to the supply by a supply cord fitted with a male connector.

Model	Total kW	Total Current (Amps)	Cable Section (mm²)	Min Temp (°C)
CFE532	8.2	35.7	6.0	75
CFE535	9.64	41.9	10.0	75
CFE536	8.2	35.7	6.0	75
CFE537	10.04	43.7	10.0	75
CFE547	9.64	41.9	10.0	75

Hard wiring

- 1. Remove rear panel.
- 2. Fit wires through hole at bottom centre using the appropriate gland to protect insulation of wires from the hole edge. Note that the secondary insulation of the wires will probably need to be removed to fit through gland. If the conduit to appliance is required to bend due to rear wall an elbow may be required to achieve this.
- 3. Set the length of wiring from the gland to terminal block, ensuring length is sufficient but not excessive.
- 4. Make connections to terminals and engage wires into plastic clip. Cable tie as per diagram and secure plastic clip with two long screws supplied.
- 5. Replace rear cover.

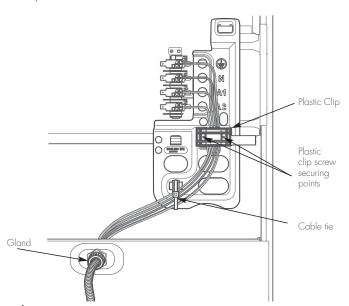



Ensure wires cannot contact hot element ends or sharp edges.

Rated power input

Model	Total kW	A1 kW	A2 kW
CFE532	8.2	2.2	6.0
CFE535	9.64	3.64	6.0
CFE536	8.2	2.24	6.0
CFE537	10.04	4.04	6.0
CFE547	9.64	4.04	5.6

Gas requirements

This appliance must be installed by an authorised person, according to all codes and regulations of:

- AS/NZS 5601 series (particular attention to specific requirements for domestic gas cooking appliances)
- Local gas fitting regulations, municipal building codes and other statutory regulations.

The cookers are made for Natural Gas. Conversion to Propane (Australia) or ULPG (NZ) is possible. The cooker is supplied with a kit for conversion to Propane (Australia only). Refer to Gas Conversion Instructions on Page 11 in this user manual. If the cooker is required to use ULPG (NZ only), a conversion kit can be obtained by contacting the Customer Care Centre for details. Before installation, check that the cooker is configured for the gas supply.


The following table shows the supply and operating pressures for various supplies.

Gas type	Natural gas	Universal LPG	Propane
Supply pressure at inlet to appliance regulator (if fitted)	1.13 (kPa) Minimum	2.75* (kPa)	2.75* (kPa)
Operating pressure at appliance test point	1.00 (kPa)	2.75 (kPa)	2.75 (kPa)

*If the regulator is placed upstream of the cooker inlet, as is normal for cookers operating on LPG, then the supply pressure and operating pressure are the same. The injector sizes for each burner are shown in the Gas Conversion Instructions on Page 16.

Fitting of Gas Regulator

- The appliance regulator MUST be orientated so that the pressure nipple is accessible
- The arrow showing the direction of flow MUST be pointed correctly
- The regulator has a $\frac{1}{2}$ " BSP internal thread at the inlet and outlet.

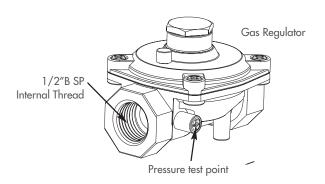

Use AS/NZS 5601 to ensure adequate gas supply

Checking pipe size

To work out a suitable pipe size for connection use the information in this table.

Gas Consumption (MJ/h)					
Model	Natural gas	Universal LPG	Propane		
CFG503	58.1	45.7	56.5		
CFG504	47	36.7	47.5		
CFG513	60.2	48.2	58.3		
CFG516	37.3	30.2	-		
CFG517	49.1	39.2	49.3		
CFG505	47	36.7	47.5		

Wiring connection for gas cooker


To allow for disconnection of the appliance after installation, the plug must be accessible after installation, or a functional switch must be provided near the appliance in an accessible position.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Gas connection

Read these points before connecting to the gas supply:

- The cooker inlet connection point has a ½" BSP externalthread. See Diagram below
- A gas regulator is supplied
- It is recommended to fit the regulator to the applianceconnection point, then fit either hard piping or a high levelflexible connection (AS/NZS 5601.1) which is then attached to the consumer hard piping
- Ensure installation allows withdrawal of appliance.

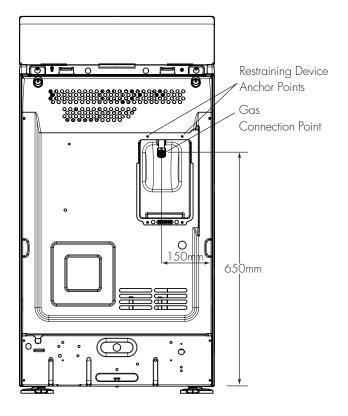

Operation on SNG

For SNG, please contact Electrolux Customer Service.

Testing the gas cooker



warning

You MUST test the cooker after installation, before you hand it over to the customer.

You MUST have a manometer and a connecting tube. Checking the gas supply

- 1. Check the manometer zero point is correct.
- 2. Connect the manometer to the cooker pressure test point. This is located on the regulator or LPG inlet fitting.
- 3. Turn on the gas supply and the electricity (if applicable) and try to ignite the gas. Note: It will take additional time to light the gas for the first time, as air needs to be purged from the
- 4. Check the operating pressure for the particular gas type (see 'Gas Type' table).
- For LPG cookers: Adjust the regulator if necessary(this may be remote from the cooker) to ensure 2.75 kPa at inlet to Appliance Gas Regulator.
- For Natural Gas cookers: Regulators are supplied preadjusted and configured by the component maker for use with Natural Gas. The appliance installer is not required to make an adjustment to obtain the correct outlet pressure setting. An arrow on the base of the regulator indicates the direction of the gas flow when the inlet and outlet of the regulator are orientated correctly.
- 5. When the regulator has been fitted check for leaks from the connections with soapy water.

Checking regulator function

With the appliance operating, check the outlet pressure:

- 1. When all the burners of the appliance are operating at maximum.
- 2. When the smallest burner of the appliance is operating at minimum, Under these conditions the outlet pressure should not vary from nominal operating pressure of 1.0kPa (for Natural Gas) or 2.75kPa (for Propane and ULPG) by more than \pm 20% (ie \pm 0.20kPa for Natural Gas).

If the regulator appears to not be performing satisfactorily then check the following points:

- 1. If the outlet pressure is consistently too low then.
- the inlet pressure may be too low and adjustment of an upstream regulator may be needed, or
- an upstream regulator or valve with insufficient flowcapacity may be present in the gas supply line. It may benecessary to repeat the checks whilst measuring both theinlet and outlet pressure to determine if the inlet pressure is 1.13 - 5kPa for NG, 2.75 - 7 kPa for Propane and ULPG.
- 2. Check that the regulator has been fitted to the gas supply line in the correct orientation.
- 3. Replace the regulator if it fails to perform after the checks.

Testing cooker features

- Observe the flame appearance on each burner. If it is smaller or larger than expected, then the injector size needs checking
- If the flame is unsatisfactory, then refer to the Electrolux Technical Publications and correct the fault if possible
- When maximum flame appearance is correct, check the turn down setting on each burner. If incorrect, proceed as follows:



- 1. Disconnect electric power.
- 2. Remove the control panel and adjust the bypass screw mounted on the body of each hotplate control cock.
- 3. Check the ignition on all burners both separately and in combination.
- 4. Check the operation of the electrical components, if applicable.
- 5. When operating correctly, show customer how to use the cooker.
- 6. If not operating correctly, advise the customer to ring Electrolux service. Place a warning sign on cooker or if dangerous, disconnect cooker.

Conversion to LP/Propane Gas

For conversion to Universal LPG/propane gas types, all gas injectors need to be changed, all gas valves are adjusted, the gas regulator is converted, and the gas grill burner aeration shutter is changed where the gas grill is provided.

After converting the appliance, attach the ULPG or Propane sticker to the cooker, near the gas supply inlet. Cover the Natural Gas label that is factory fitted.

Important: The conversion must be performed by a qualified service technician in accordance with the kit instructions and all local codes and requirements. Failure to follow instructions could result in serious injury or property damage.



WARNING

Failure to make the appropriate conversion can result in serious personal injury and property damage.

Note: Always perform a gas leak test after converting the appliance.

Gas Hob Conversion

Tools required:

- 7mm hex socket screwdriver or 7mm nut runner.
- Small flat-blade screwdriver.
- 1. Remove trivets/pan supports, burner crown, and top caps from burner bases.
- 2. Using a 7mm socket, remove Natural Gas injectors.
- 3. Using the Injector table and hob layout diagram, select the correct gas injector for each burner and intended gas type.
- 4. Using a 7mm socket, screw in gas injectors. Set injectors in place firmly but not with excessive torque.
- 5. Reinstate trivets/pan supports, burner crown, and top caps ensuring that these components are sitting correctly on their respective lower parts.
- If Gas Separate Grill is provided, please go to "Gas Separate Grill Conversion", otherwise proceed to the next step.
- 7. Remove all control knobs on the front of the cooker by gripping each knob behind its skirt and pulling away from the control panel.

8. Locate the recessed turndown adjustment screw in each gas valve, insert the screwdriver, and turn the adjustment screw clockwise until the screw stops.

Note: If a Gas Oven is present its control can be adjusted the same way. If access to adjustment screws is not clear, see "Gas Separate Grill Conversion" instructions on how to remove the control panel.





Adjustment screws at each gas valve Adjustment screw for oven for hob and gas grill where fitted thermostat where fitted

Note: If the thermostat body is brass (dull yellow colour), replace the existing adjustment screw with the LPG adjustment screw supplied in the conversion kit and turn the screw clockwise until the screw stops. If the thermostat body is all aluminium (silvery white colour), turn the existing adjustment screw clockwise until the screw stops. If the conversion kit is not available, please reach out to our Customer Care team at 131349 (if you are in Australia) or 0800436245 (if you are in New Zealand) or by email.

9. Install control knobs (with separate skirts where used) by pushing them on fully.

Gas Separate Grill Conversion (Where used)

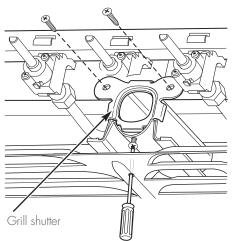

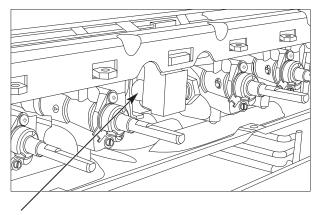

Injector on the injection block

Tools required:

- 7mm open-ended or ring spanner.
- #2 Phillips head screwdriver.
- Stubby #2 Phillips head screwdriver.
- Warning: Risk of electric shock. Ensure the cooker is NOT plugged into a power point before proceeding.
- 2. Remove all control knobs on the front of the cooker by gripping each knob behind its skirt and pulling away from the control panel if not already done as part of the Gas Hob conversion.
- 3. Remove the control panel by removing the 2 screws behind the grill door below the Control Panel. Rest the control panel on the open grill door being careful not to stretch or damage the wiring.
- 4. **Warning: Risk of laceration.** The now exposed front edge and other edges of the grill compartment panel can have sharp edges. Wear appropriate gloves.
- 5. Remove the grill aeration shutter by: i) Unscrew the grill burner venturi to the shutter screw using the stubby #2 Phillips screwdriver through the hole in the grill compartment panel, and ii) Unscrew the 2 screws that secure the shutter to the hob frame.
- Replace the grill aeration shutter with the Propane (LPG) shutter and fix in place with the 3 screws removed in the previous step.
- 7. Remove the grill burner gas injector using the 7mm spanner from its holder in front of the aeration shutter. To loosen the injector, rotate the spanner in a clockwise direction as you are working from behind it!

- 8. Select the correct gas injector for the grill burner and the intended gas type and replace the grill burner gas injector. Set the injector in place firmly but not with excessive torque.
- 9. Locate the recessed turndown adjustment screw in each gas valve, insert the screwdriver, and turn the adjustment screw clockwise until the screw stops. Note: All gas valves for the Gas Hob, Gas Oven, and Gas Separate Grill need to be adjusted the same way.
- 10. Replace the control panel being careful to ensure any wires do not get trapped between the grill compartment panel and the control panel as per the reverse of step 3.
- 11. Install control knobs (with skirts where used) by pushing them on fully.

NG shutter




Propane (LPG) shutter




Gas Oven - Freestanding Cookers (Where used)

Tools required:

- 7mm open-ended or ring spanner or 7mm hex socket screwdriver or nut runner.
- #2 Phillips head screwdriver.
- Warning: Risk of electric shock. Ensure the cooker is NOT plugged into a power point before proceeding.
- 2. Remove the plastic cover behind the gas connection point by unscrewing 2x Phillips screws).
- 3. **Warning: Risk of laceration.** The rear cover and internal components can have sharp edges. Wear appropriate gloves and long sleeve & leg clothes.
- 4. Remove the rear panel by unscrewing 2 (or 4 where used) Phillips screws.
- 5. Inside the lower back of the cooker, remove the lower internal baffle plate (where fitted).

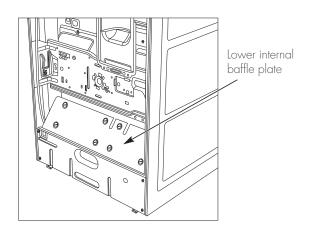

6. Remove the gas injector holder from the burner by bending up the 2 metal tabs at the end of the burner holding the gas injector, then slide the injector holder out of the burner body.

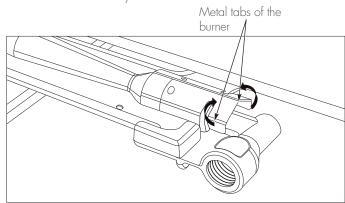

- 7. Remove the oven burner gas injector from its holder using the 7mm spanner or socket or nut runner.
- 8. Select the correct gas injector for the oven burner and the intended gas type and replace the oven burner gas injector. Set the injector in place firmly but not with excessive torque.
- 9. Slide the gas injector holder back into the burner and bend down the 2 metal tabs to ensure that the injector holder cannot slide out of the burner body.
- 10. Install the internal baffle (where used), rear cover, and plastic cover behind the gas connection as per the reverse of steps 1 to 4.

Note: Adjustment of the turndown of the Gas Oven valve (thermostat) should have been done as part of the Gas Hob Conversion.

Gas Oven - Elevated Cookers


Tools required:

- 7mm open-ended or ring spanner or 7mm hex socket screwdriver or nut runner.
- #2 Phillips head screwdriver.
- Warning: Risk of electric shock. Ensure the cooker is NOT plugged into a power point before proceeding.
- 2. Remove the rear bridging plate between the oven and hob at the rear of the cooker.
- 3. **Warning: Risk of laceration.** The rear cover and internal components can have sharp edges. Wear appropriate gloves and long sleeve & leg clothes.
- 4. Remove the oven rear panel by unscrewing 2 (or 4 where used) Phillips screws.
- 5. Remove the gas injector holder from the burner by bending up the 2 metal tabs at the end of the burner holding the gas injector, then slide the injector holder out of the burner body. Refer to the figure above.
- 6. Remove the oven burner gas injector from its holder using the 7mm spanner or socket or nut runner.
- 7. Select the correct gas injector for the oven burner and the intended gas type and replace the oven burner gas injector. Set the injector in place firmly but not with excessive torque.
- 8. Slide the gas injector holder back into the burner and bend down the 2 metal tabs to ensure that the injector holder cannot slide out of the burner body.
- 9. Install the rear cover and bridging plate as per the reverse of steps 1 to 3. Note: Adjustment of the turndown of the Gas Oven valve (thermostat) should have been done as part of the Gas Hob Conversion.

Gas Regulator Conversion


Chant Regulator


- 1. Unscrew the top hat nut from the regulator. The top hat nut and control pressure spring assembly will disengage as an assembly. See figures A&B.
- 2. Unscrew the threaded pin from top hat. See figures C&D
- 3. Turn over threaded pin, so spring is free and screw pin back into the top hat until firm. See figures E&F.
- 4. Screw the top hat nut assembly back into the regulator ensuring that it is fully screwed down. See figures G&H. The regulator is now set for connection to LPG.

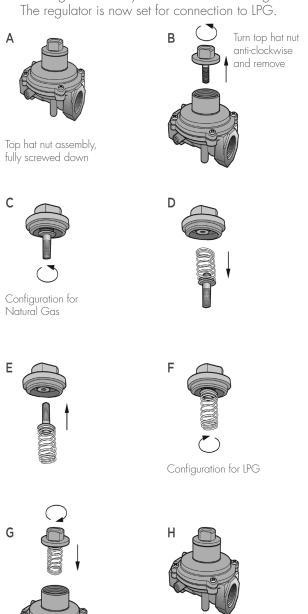


Dong Yang Regulator

- 1. Unscrew the hex nut from the regulator. The hex nut, brass washer and nylon insert will disengage as an assembly. See Fig. 1.
- 2. Unclip the nylon insert from the nut assembly by rotating the insert ¼ turn, and pulling it free. See Fig. 2.
- 3. Turn over the insert, and clip back into position. See Fig. 3&4.
- 4. Screw the hex nut assembly back into the regulator ensuring that it is fully screwed down. The regulator is now set for connection to LPG.

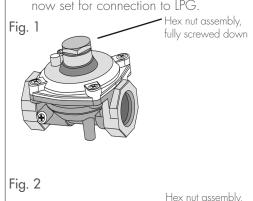

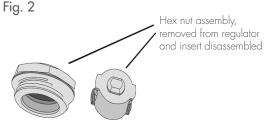

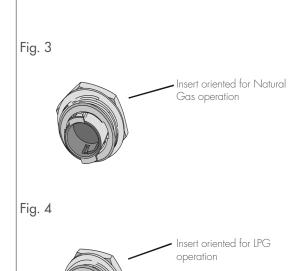

Commissioning Gas Type Conversion

Tools required:

- A manometer capable of reading from 0 to at least 3.0kPa.
- Remove the Test Point (TP) from the appliance Gas
 Regulator and connect a manometer capable of reading
 from 0 to at least 3.0kPa.
- 2. Turn on the gas supply to the appliance and test for leaks.

Gas Hob Commissioning

- Turn on a Gas Hob burner to high and hold the gas valve control knob in. At the same time use the inbuilt igniter (240v powered models) or a gas match applied to that burner to provide an ignition source.
- 2. Once the burner is lit and after 5s release the valve knob and observe for the following:
 - a. Flames have traveled to all burner ports promptly.
 - b. Burner stays alight once gas valve knob is released.
 - c. Burner flames are almost entirely blue. Some light yellow within the flame may be present but there should be no yellow at the tip at the outer end of the flame
 - d. The TP pressure as indicated by the manometer should be between 3.12kPa and 2.08kPa. (2.60kPa +/- 20%)
 - e. See "Fault Finding" if any of these requirements are not met.
- 3. Rapidly move the gas valve of the lit burner from high to low and back again a few times. The burner should stay alight. If the burner does not stay alight, adjust the turndown for that burner at the gas valve slightly counterclockwise to increase the gas rate at minimum turndown. Refer to Gas Hob Conversion instructions.
- 4. Shut off the burner and repeat for all other Gas Hob Burners.
- 5. Light all Gas Hob Burners and repeat step 2.

Gas Separate Grill Commissioning (Where used)

- 1. Turn on the Gas Grill burner to high, press in, and hold the gas valve control knob in. At the same time use the inbuilt igniter to provide an ignition source.
- 2. Once the burner is lit observe the following:
 - a. Flames travel to all burner ports promptly.
 - b. Burner stays alight once gas valve knob is released.
 - c. Burner flames are almost entirely blue. Some light yellow within the flame may be present but there should be no yellow at the tip at the outer end of the flame.
 - d. The TP pressure as indicated by the manometer should be between 2.1kPa and 3.1kPa. (2.60kPa +/- 20%)
 - e. See "Fault Finding" if any of these requirements are
- 3. Rapidly move the gas valve of the lit burner from high to low and back again a few times. The burner should stay alight. If the burner does not stay alight, adjust the turndown for that burner at the gas valve slightly counterclockwise to increase the gas rate at minimum turndown. Refer to Gas Hob Conversion instructions.

Gas Oven Commissioning (Where used)

- 1. Turn on the Gas Oven Thermostat to 120°C, press in, and hold the gas valve control knob in. At the same time use the inbuilt igniter to provide an ignition source.
- 2. Once the burner is lit observe the following:
 - a. Flames travel to all burner ports promptly.
 - b. Burner stays alight once gas thermostat knob is released.
 - c. Burner flames are almost entirely blue. Some light yellow within the flame may be present but there should be no yellow at the tip at the outer end of the flame.
 - d. The TP pressure as indicated by the manometer should be between 2.1kPa and 3.1kPa. (2.60kPa +/- 20%)
 - e. See "Fault Finding" if any of these requirements are not met.

3. Close the door and wait for the thermostat to operate and turn the burner down to maintain 120°C. The burner should stay alight. If the burner does not stay alight, adjust the turndown for the burner at the gas valve slightly counterclockwise. Refer to Gas Hob Conversion instructions on how to locate the adjustment screw.

Table for injector sizes

The following table shows the injector sizes for each burner.

	Injector Size (mm)			
Burner	Natural gas (Nominal test point pressure: 1.00kPa)	Propane – For Australia only (Nominal test point pressure: 2.75kPa)	ULPG - For NZ only (Nominal test point pressure: 2.75kPa)	
Intense heat wok burner	1.75	1.00	1.00	
High heat burner	1.60	0.95	0.90	
Medium heat burner	1.35	0.82	0.70	
Low heat burner	1.00	0.62	0.55	
Grill	1.50	0.82	0.82	
Oven	1.60	0.95	0.82	


Fault Finding

PROBLEM	POSSIBLE CAUSES	WHAT TO DO	
Burner will not light	Gas not turned on	Check supply	
	Air not purged from gas pipes	Purge gas pipe to appliances Keep gas valve open for a longer time while keeping ignition source present at that burner	
	Ignition source not operating	Check appliance is plugged in and 240V power supply is available Check spark at burner (Gas Oven and Gas Separate Grill only with piezo ignition) Attempt to light burner with gas match to confirm presence of tuel gas	
Burner flames are very big and/or very	Incorrect Gas Injector size	Check injector against requirement in gas injector table for the required gas type	
yellow	Hob burner crown and/or cap not correctly set in place	Check that hob burner crown is seated in base and cap is seated on the burner crown	
	Gas Oven injector holder not set in place or pipe bent at oven injector holder	Check oven injector holder is fully in the receptacle of the oven burner, adjust pipe to burner assembly to give blue flame	
	Incorrect gas pressure	Check Gas Regulator outlet pressure at Test Point on Gas Regulator Check Gas Regulator inlet supply pressure Check that Gas Regulator conversion instructions have been followed correctly	
Burner flames are small when gas valve	Incorrect Gas Injector size	Check injector against requirement in gas injector table for the required gas type	
on high	Incorrect gas pressure	Check Gas Regulator outlet pressure at Test Point on Gas Regulator Check Gas Regulator inlet supply pressure Check that Gas Regulator conversion instructions have been followed correctly	
Burner flames are uneven - Gas Hob	Hob burner crown and/or cap not correctly set in place	Check that hob burner crown is seated in base and cap is seated on the burner crown	
Burners	Gas injector not screwed in correctly	Check that Gas Injector orifice is pointing straight up	
Burner flames are uneven - Gas Separate Grill	Gas injector not screwed in correctly Air shutter incorrect or not set in place correctly or not present at all	Check that Gas Injector orifice is pointing straight up Check fitment of gas shutter and that the gas shutter is the correct one for the gas type being used	
Burner flames are uneven - Gas Oven	Burner flames on the left is higher than the right side flames as looking at the oven	This is normal. No action required	
	Gas injector not screwed in correctly or Gas injector holder not fitted correctly	Check that Gas Injector is fitted correctly, and injector assembly is inserted into burner	
No ignition spark	Wires disconnected at the back of piezo ignitor (piezo ignition only)	Remove control panel and check wiring	
	Wires disconnected at the back of switch (240V)	Turn off and disconnect from 240V outlet, then remove control panel to check no wires have become disconnected	
	No 240V power	Check whether power supply is available and turn on	

Operating for the first time

Choosing utensils for gas and electric hotplates

Refer to diagram below

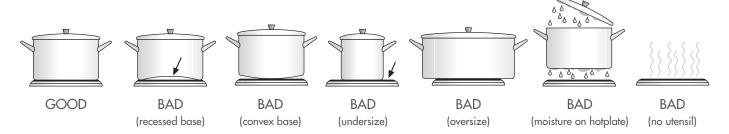



Installation and service warning

- Only an authorised person must install and service this appliance (Certificate of Compliance to be retained)
- In order to avoid tipping of appliance the anti-tilt plate MUST be installed
- Appliances requiring connection to 230 240V MUST be earthed
- An authorised person should inspect this appliance every 5 years
- This appliance must NOT be installed on a base, box or in a closed cupboard
- If the electrical supply cord is damaged, a qualified person MUST replace the cord to avoid a hazard or void your warranty
- Surrounding kitchen cabinets MUST WITHSTAND
- In order to avoid a hazard the installation instructions MUST be followed.

(i)

Before operating first time

- 1. Read all the Warning and Safety information.
- 2. Remove all internal boxes and bags from oven.
- 3. Clean out the oven interior with detergent and hot water and polish with a soft cloth. DO NOT close oven door until the oven is completely dry.
- 4. New appliances can have an odour during first operation. It is recommended to 'run in' the oven before you cook. Run the oven at 180°C for 2 4 hours and ensure that the room is well ventilated.
- 5. If your appliance is fitted with solid hotplates, turn heat setting to high for 3 minutes to fully harden the hotplate coating.


Installing your oven accessories

Fitting oven shelves

- 1. Ensure shelf orientation is correct (refer to diagram below).
- 2. Slide oven shelves onto oven supports (side runners) at an angle until raised back of shelf is past the stop on oven supports (side runners).
- 3. Lower front of shelf and push in until stop is reached.
- 4. To remove oven shelves, withdraw to the stop and raise the front of shelf to clear the stop.



Oven shelf location

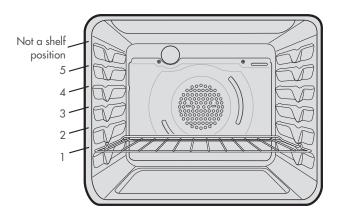


NOTE: the top ledge is not a shelf position. There are no stops for shelf withdrawal.

Fitting the grill dish

Separate Grill: Ensure rear of the dish is engaged with the side support before sliding backwards. To remove, simply pull forwards and upwards.

To ensure proper grill operation, slide the grill dish fully rearward to the stop.

To remove, simply pull forwards and upwards.

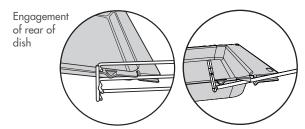

NOTE: Models CFG505 and CFG517 contains single position side racks.

Grill in Oven: see Fitting Oven Shelves

The grill dish with wire insert can be used in any of the two upper height positions (shelf positions 4 and 5) between the runners.


NOTE: You must remove the grill dish when baking in the oven.

Replacing the oven light



warnina


Ensure the appliance is switched off at power supply (not just the control knobs) before replacing the light globe to avoid possibility of electric shock.

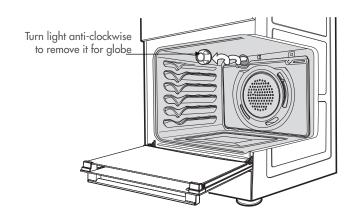


Using the gas cooker

Gas oven features and descriptions


CFG517WBNG / CFG517WBLP / CFG517SBNG / CFG517SBLP

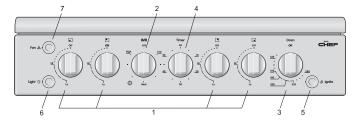


CFG505WBNG / CFG505WBLP / CFG505SBNG / CFG505SBLP

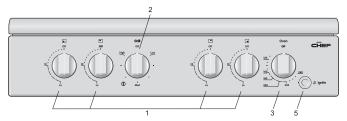

CFG503WBNG / CFG503WBLP/ CFG513WBNG / CFG513WBLP / CFG513SBNG / CFG513SBLP / CFG501WBNG / CFG501WBLP

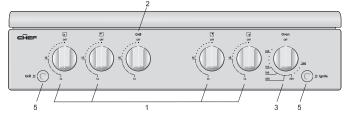

CFG504SBNG / CFG504SBLP / CFG504WBNG / CFG504WBLP

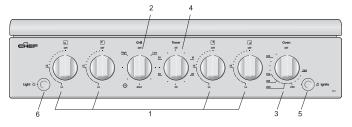



For CFG504 models only, do not operate the gas oven and grill together.

- 1. Burner Control Knob sets burner temperature.
- 2. Grill Control Knob sets grilling temperature.
- 3. Oven Control Knob sets oven temperature.
- **4. Timer 60 Minute** (where fitted) sets reminder time. When timer returns to zero, timer gives a short ring.

NOTE: for any time below 15 minutes, turn knob past 15 minutes, then back to required time setting.

- 5. Manual Grill or Oven Igniter or Hotplates

 ignites grill burner, oven burner or hotplates when appropriate control knobs are set.
- 6. Light Switch (where fitted) turns oven light on/off.
- 7. Fan Switch turns oven fan on/off.

Gas oven conventional baking

The heat comes from the bottom oven burner. The temperature at the centre of oven is the same temperature set on the control knob. When oven is used on this mode, shelf position is important, (refer to 'Oven Guide'). As hot air naturally rises, the upper half of the oven will be approximately 10°C higher and the lower half approximately 10°C cooler than the set temperature.

For best results from your gas oven use dark coloured trays and baking dishes on a single shelf. Refer to 'General Hints and Tips' section for more information.

Gas oven fan forced baking

Fan Forced baking generally requires lower temperatures than conventional baking. Most recipe books, unless stated, are for conventional oven temperatures. It is recommended when using the fan forced mode to reduce the oven temperature by 10°C.

In a fan forced gas oven the heat comes from the bottom burner. Hot air is distributed by an electrically operated fan located behind the rear wall of the compartment, providing an even temperature on all shelf levels. This means batches of the same food can be baked using multiple shelf positions simultaneously.

Fan Forced operation can be used for single shelf baking with equal success.

For best baking results preheat oven for 30 minutes before turning on the fan.


Using the gas cooker


Gas hotplate

Ensure burner caps, crowns and trivets are properly assembled.

For wok ONLY use the trivet and burner dedicated for wok cooking.


Burner cap and burner crown must be clean and located correctly for the burner to light.

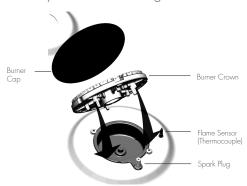

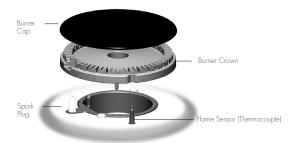

Gas oven burner flame

From a cold start the oven burner flame will be higher on the left hand-side. After reaching the set temperature, the flame will become even. This does not affect cooking results.

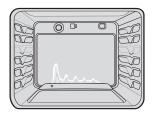

LIGHTING GAS HOTPLATE, GRILL AND OVEN

Electronic ignition with flame safeguard

This hob is fitted with mains powered electronic ignition. When the appliance has been connected and the power is on, depressing ignite button will release sparks to all burners.

To light a burner, depress the corresponding knob fully and while continuing to depress knob for approximately 5 seconds, turn anticlockwise to 'HI' position. The flame sensor must warm-up in order for the flame to stay alight.

The knob may be released once the flame is established, and turned further anticlockwise to reduce the flame height as desired.

- Before releasing the knob, ensure the knob is fully depressed.
- If the flame goes out when the knob is released, simply repeat the ignition procedure again.

Hotplate Ignition – (Manual)

To light a burner, depress the corresponding knob fully and while continuing to depress the knob approximately 5 seconds, turn anti-clockwise to 'HI' position. At the same time, hold hand-ignitor next to the burner and ignite (handignitors not supplied). The flame sensor must warm up in order for the flame to stay alight

Grill Ignition - Electronic

While pressing the electronic ignitor switch, depress the corresponding knob fully and while continuing to depress the knob for approximately 5 seconds, turn anti-clockwise to 'HI' position. The flame sensor must warm up in order for the flame to stay alight.

Grill Ignition - Piezo

Depress the grill control knob fully and while continuing to depress the knob for approximately 5 seconds, turn anticlockwise to 'HI' position. The flame sensor must warm up in order for the flame to stay alight.

Grill - in Oven

Grill is electric and is operated by control knob only.

Oven Ignition – Electronic

While pressing the Electronic Ignitor Switch, push turn and hold the Oven Control Knob to the desired temperature. Hold Control Knob in for 15 seconds after ignition.

Oven Ignition - Piezo

With the left hand push and hold the Oven Control Knob in and turn it a quarter of the way anti-clockwise. Keep the oven Control Knob pushed in firmly and at the same time push the Oven Piezo Ignitor button on the right hand side of the control panel (several times if necessary). It will make a loud 'clack' noise as the Piezo mechanism creates a spark. Hold control knob in for 15 seconds after ignition.


∠!\ warning


- Keep hands clear of burners when lighting.
- If burner does not light within 5 seconds, turn knob to 'Off' position, allow gas to disperse, then try lighting again.
- Burners MUST be operated between 'HIGH' and 'LOW' settings only.

Using the electric cooker


Electric features and descriptions

Grill in Oven Models

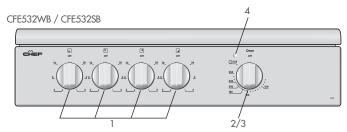


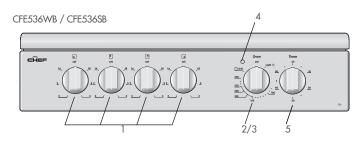


CFE516SB

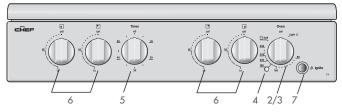

Separate Grill Models

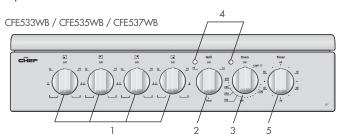

CFE547SB /CFE547SBB /CFE547WB /CFE547WBB

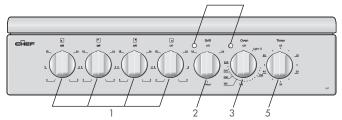

- Solid/Ceramic Hotplate Control Knob

 sets hotplate temperature.
- 2. Grill Control Knob sets grilling temperature.
- 3. Oven Control Knob sets oven temperature.

- 4. Grill/Oven Indicator Light(s) Comes on when grill/oven temperature knob is operated. Oven indicator light cycles on and off when temperature is reached.
- 5. Timer 60 Minute (where fitted) sets reminder time.
 - When timer returns to zero, timer gives a short ring.

NOTE: For any time below 15 minutes, turn knob past 15 minutes, then back to required time setting.

- 6. Burner control knob sets burner temperature.
- 7. Hotplates ignitor ignites gas hotplates when appropriate control knobs are set.

Solid hotplates

If present, the red dot in the centre of hotplate changes colour when heated.

When necessary to keep element looking good, apply coating of 'hot plate protection' onto solid hot plates.

Ceramic Hotplates



warning

If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

- The ceramic cooktop is made from ceramic glass, a tough, durable material that withstands heating and cooling without breaking. However, it must be noted that as it is glass, it may break, and must therefore be treated with care. Should you have any questions about the glass in your new appliance, please contact the service centre by dialling 13 13 49
- The smooth glass surface has a pattern to show where the elements under the glass are located
- When a hotplate is on, the hot surface warning light will come on. After switching off, this light will continue to glow until the temperature of the hotplate drops below 60°C.

i Electric oven conventional baking

Heat comes from two elements, one above and one below the food. The bottom element is hidden below the floor of the oven. As hot air rises naturally, the upper part of the oven will be approximately 10°C higher than the set temperature and the lower part of the oven approximately 10°C cooler.

For Grill in Oven Models, the grill dish must be removed when baking.


Using the electric cooker

Electric oven fan forced baking

In a fan forced electric oven the heat comes from the rear oven element. Hot air is distributed by a fan behind the rear wall of the compartment, providing an even temperature on all shelf levels. This means, batches of food can be baked using multiple shelf positions simultaneously.

Fan forced operation can be used for single food baking with equal success.

Fan Forced baking generally requires lower temperatures than conventional baking. Most recipe books, unless stated, are typically for conventional oven temperatures. It is recommended that when using the fan forced mode, reduce the oven temperature by 10 degrees (refer to 'Oven Guide').

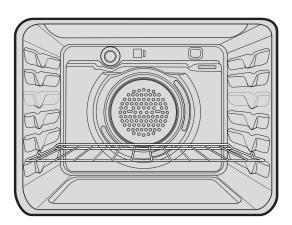

General hints and tips



Using the Grill

• **Separate Grill:** Grill with door open.

Grill dish must be fully inserted.

Grill in oven: Grill with door closed.

Hints general

- For best baking results, across all models, preheat oven for 30 minutes.
- The material and finish of baking trays and dishes used will affect the way foods are baked, especially base browning.
- Enamelware, anodised aluminium, dark bakeware or nonstick interiors and coloured exteriors will assist in maintaining or reducing the baking time and increase base browning
- Ovenproof glassware or ceramics are poor conductors of heat. The shiny surface of aluminium or polished steel utensils and trays also reflects the heat rather then passing it through to the food being baked
- it through to the food being baked
 Always place dishes centrally on the shelf to ensure even browning
- Stand casseroles dishes or similar-type dishes on suitably sized baking trays to prevent spillage onto the base of oven to make cleaning of oven easier
- DO NOT place dishes, trays or baking pans directly on the oven base as they become very hot and will crack and craze the oven liner
- Use ovenproof cookware, which will withstand temperatures of 250°C
- DO'NOT use baking trays larger than 30 x 35cm (12 x 14 inches) as they will restrict the circulation of the heat and may affect cooking performance of the oven
- Use shallow casserole dishes in preference to deeper ones as this shortens cooking time in the oven.

Conventional Oven

- The shelf position is critical. The temperature in centre of the oven is the temperature shown on the oven control knob. Single shelf baking gives optimal cooking results.
- DO NOT place baking trays, oven dishes or foil directly on the base of oven, as trapped heat will crack and craze the floor of the oven liner.

Fan Forced

- DO NOT place baking trays and oven dishes directly against the grid covering the fan at the back of the oven
- DO NOT Place oven dishes directly on the oven base
- Make sure shelves are evenly spaced
- When baking more than one dish in fan forced oven, place dishes centrally on shelves rather than several dishes on one shelf
- When the oven is full you may need to allow a slightly longer baking time
- When using different size trays or cooking different types of food, cooking times may vary for each dish.



General tips

Condensation and Steam

- Always stand back from heated oven when opening oven door to allow any build-up of steam or heat to release
- During cooking steam may be produced which can be released when opening the oven door. This is quite normal
- If there is any build-up of condensation on the oven door it is recommended that it be carefully wiped away either during or after cooking.

Cleaning the cooker

Ovens and hotplates are made from steel and enamel. Do not use abrasives and harsh scourers as they may scratch the surface



Do not use steam cleaners

Stainless Steel

- All grades of stainless steel can stain, discolour or become greasy. You must clean these areas regularly by following the procedures below if you want your appliance to look its best, perform well and have a long life
- Care must be taken when wiping exposed stainless steel edges as they can be sharp
- The front frame around the oven can be cleaned with stainless steel cleaners if it comes soiled or discoloured
- A suitable cleaner can be purchased from Electrolux Customer Care Centres
- Make sure you follow the polish or brushing lines in the steel.

General

- Always clean appliance after use, especially food spillage. DO NOT use steel wool, wax polishes or caustic based commercial cleaners as these will damage your oven
- DO NOT use steam cleaners, as this may cause moisture build-up especially in the glass door
- Door Glass DO NOT use harsh abrasive cleaners or sharp metal scrapers to clean glass since they can scratch the surface, which may result in shattering of the glass.



warning

Door glass is a tough and durable material designed to withstand heating and cooling without breaking. However it must be remembered that it is glass and may break, therefore must be treated with care.

If you have any questions about the glass in the oven please contact the Service centre on 13 13 49.

General hints and tips


Cleaning the Oven Door

Cool air circulates through the door to lower the surface temperature on the outside of the oven door.

- Do not remove the oven door
- This product has a removable inner door glass.


To remove the inner door glass for cleaning

• Open the door fully to access the hinges then rotate the "stirrups" on both hinges fully towards the door.

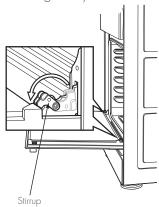


Slowly close the door until it stops against the 'stirrups'


(about 45°)

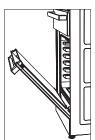

To remove the top trims (2 off), press the ribbed release clips at each end and lift top trim away from the door.

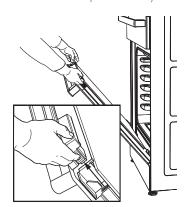

- Using both hands, gently remove the inner glass by sliding out and lifting away from the door
- Inner door glass: some products have heat reflective glass on the inner door glass. These are identified by a black dot on the lower left hand corner of the inner door glass.

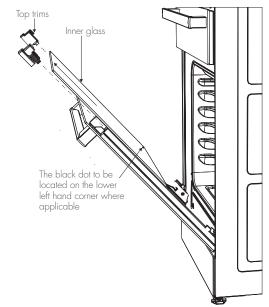

- Wipe inner and outer glass gently with detergent and warm water
- Wipe clean and dry thoroughly.

Re-Assembling the oven door inner glass

- Replace the inner glass back to the door with the black dot located on the lower left hand corner where applicable
- Replace the top trim ensuring the clips snap back into position
- Fully open the door, rotate the stirrups back to their original position and close the door.



warnina

DO NOT use the oven without the inner door glass fitted.

DO NOT use harsh abrasives on glass as this may damage the alass

DO NOT place glass in dishwasher.

Hand wash only with a soft cloth and warm soapy water. When dry, polish with a soft cloth and ensure the glass is dry before re-assembly.



caution

Ensure the appliance is off and cool before cleaning.

Oven

- - Do not remove the oven door
- Make sure oven knobs are in the off position
- Clean immediately after use as a warm oven is easier to clean
- Use detergent, hot water (and household ammonia/ cloudy ammonia if necessary) and a soft cloth. Dry thoroughly.
- Remove shelves when cleaning oven
- If there is a build-up of grease, place a small oven proof dish containing ½ cup (62mL) household ammonia/cloudy ammonia and ¾ cup (187mL) water in the oven. Heat oven to 110 degrees and turn oven off when 110 degrees is reached. Leave over-night. The fumes will loosen stubborn grease and stains. Remove bowl, wash with hot, soapy water and dry well before closing oven door again.

Oven Shelves

- Chrome shelves: use detergent and hot water. If very dirty use a non-abrasive nylon scourer
- Enamel dishes and tray: use detergent and hot water. If very dirty a non-abrasive nylon scourer
- DO NOT clean oven parts with abrasive or caustic-type cleaners.

Oven - Grill Dish and Insert

- After every use, and while still warm, sprinkle grill insert with detergent and cover with wet paper towel as this will loosen food particles and grease
- Wash pan and grid with hot, soapy water with a little household ammonia/cloudy ammonia added. Rinse and dry before replacing in position.



:\rightarrow caution

 If the ceramic glass surface is cracked, switch off the appliance immediately to avoid the possibility of electric shock.

Ceramic Hotplates

- Clean with detergent and hot water and polish with a soft cloth
- For harder to clean spills a blade scraper is supplied
- Aluminium foil, plastic and high sugar content food can cause pitting if not removed before the hotplate has cooled.
- Sometimes SURFACE stains appear to be 'bubble' marks under the ceramic glass. These can be cleaned off with a razor blade scraper and ceramic cleaner.

Solid Hotplates

- Solid hotplates are fitted with stainless steel trim rings, which after initial use, change colour to light brown.
 This is a normal characteristic of stainless steel and will not affect the operation or performance of your hotplates
- Clean off any spillage after hot plate has cooled down
- At regular intervals, clean hotplate with a nylon scouring pad and soapy water. Wipe clean then warm hotplate for 30 seconds to dry the surface
- Apply 'hot plate protector". Set hotplate on high for 3 minutes to allow coating to harden.

Gas Trivets and Burners

- Flame port blockages should be removed with a small metal cake skewer or nylon brush.
- Clean dirty spark plugs very gently with a nylon scourer.
 DO NOT use steel wool. DO NOT bend spark plug as it may break.
- For enamelled burner skirts and trivets, persistent stains may require rubbing with a nylon scourer or creamed powder cleansers. Household enamel cleaners are available, follow the manufacturer's instructions in their use. Harsh abrasive cleaners, powder cleaners, steel wool or wax polishes should not be used.
- These can all be lifted off and removed for separate cleaning.
- NOTE! When refitting the burners, ensure that they are correctly seated.
- Ensure burners are thoroughly dried after cleaning or spillage. When cleaning the burners, ensure that all the flame ports are free of any blockage (refer to Figure 1 b on page 4). If necessary, use a toothpick or brush to clear ports. The outer surface of the burner caps have a polished finish and extra care needs to be taken to avoid scratching this surface during cleaning. In instances of heavy soiling, it may be necessary to apply a nonabrasive cleaning compound and rub with a cloth until the soiling is removed and then finish with a soft, dry cloth.
- NOTE! DO NOT place trivets or burners in the dishwasher.

Stainless steel (Models with Stainless Steel hob)

 Simply wipe with a soft cloth using warm water and a mild detergent and rinse with clean water. Where stainless steel has become extremely dirty or discoloured, use a stainless steel cleaner – but be sure to follow the brushing lines.

Ignition spark plug and flame safeguard sensor

GENTLY clean the ignition spark plug and flame safeguard sensor with a damp cloth to avoid lighting difficulties. Ensure that they are dry before use.

Injector

Ensure the injector remains free of any foreign material. When cleaning the burner spill bowl, first put tape over the injector hole before wipe out the spill bowl to avoid to block the injector hole, then remove the tape after cleaning.

If necessary, use a thin piece of wire to clear the orifice.

Do's	Don'ts
Use pots with a flat base.	Do not slide pots across the glass as this can results in scratches to the surface
Clean when cold unless sugar spills which should be removed with a ceramic scraper.	Do not clean when hot as it is dangerous and cleaning products can burn and stain.
Clean after every use with a sponge and soapy water then dry.	Do not leave food residues or water on the ceramic as the contamination can damage the ceramic and screening printed graphics
Use a non-scratch scourer (usually blue in colour) if required.	Do not use steel wool or scourer pads that are not specified as non-scratch (usually green in colour). Heavy duty scourers are too abrasive
Difficult stains should be removed with a ceramic scraper and cleaning cream specific for ceramic glass cooktops. Cerapol	Do not use general abrasive cleaners as these can cause microscratches, dulling the glass surface and increasing the likelihood of contamination embedding into the glass
At least once per week use ceramic sealer cream. Ceraseal	Do not use the ceramic top as a cutting board or work bench as this will cause scratches.

Ceramic Cooktop Cleaning

CUSTOMER ADVICE

Sometimes SURFACE stains appear to be a "bubble" mark under the ceramic glass.

These can be cleaned off with a razor blade scraper and ceramic cleaner.

Keeping the ceramic cooktop clean and protected will keep it in good condition and help avoid breakage.





Cerapol Cleaner ACC019



Ceraseal Protector ACC018

> Available at the following web shops. https://shop.electrolux.com.au

If the deposit is minimal, simply wipe off with a dry cloth.

If the deposit is more stubborn, clean off with a moist soapy sponge then rinse off.

If the deposit still does not clean off easily, use a non-abrasive nylon scratch pad and special purpose ceramic glass cleaning agent such as Cerapol cleaner (ACC019 - Available from our web shop).

If the deposits are still burnt on and above methods did not work, use a specially designed ceramic glass scraper (0383001001 - Available from our web shop).

After having successful cleaned the cooktop, apply a ceramic glass conditioner Ceraseal protector (ACC018 - Available from our web shop). The conditioner will leave a protective coating that will help prevent future stains from becoming baked on. Marks which appear to be bubbles under the ceramic will also clean off. Use Ceraseal (ACC018) to help protect the ceramic and allow for easier cleaning. Polish on with a dry clean cloth.







Marks which appear to be bubbles under the ceramic will also clean off.









Use Ceraseal (ACC018) to help protect the ceramic and allow for easier cleaning. Polish on with a dry clean cloth.





Stainless Steel Cooktop Cleaning

NOTE: Ensure any oil is cleaned off the hob before use, otherwise it may cause the hob to turn a yellowish colour. All grades of stainless steel may stain, discolour or attain an adhering layer of grime in normal operation. To achieve maximum surface appearance, stainless steel must be kept clean.

Doʻs	Don'ts	
Clean in the direction of stainless steel brushing lines.	Do not clean against the stainless steel brushing lines as this will cause scratching.	
Wash with warm soapy water.	Do not use caustic cleaners.	
For stains use a specific stainless-steel cleaner ACC031.	Do not use abrasive cleaners, scourers or steel wool as this will cause scratching.	
Always clean the stainless steel after food spillage.	Some foods may discolour the stainless steel.	
Use the correct sized pot as described in the owner manual.	Do not oversized pots as they can reflect heat onto the stainless steel causing discolouration.	

NOTE: Do not use stainless steel cleaners on oven doors or control panels with finger print proof coating. Refer to owner manual for specific models.



Steel Kleen ACC032



Steel Power ACC031

> Available at the following web shops or distributors. https://shop.electrolux.com.au/

Remove deposits with a soft cloth and warm soapy water then wipe with a dry soft cloth. If there are signs of yellowing or stubborn stains, use a suitable stainless steel cleaner Steel Kleen (ACC032 - Available from our web shop), apply with a soft cloth and clean in the direction of the stainless steel grain only.

After the cooktop is clean, apply stainless steel protectant Steel Power (ACCO31 - Available from our web shop) which will leave a protective coating to help prevent future stains from occurring.

Before







Getting to know your oven

Getting to know your new oven with this 'Simple Test Cake'

When baking, it is possible that there will be some variation in colour. Therefore, we suggest to make this simple, easy and delicious test cake to help you understand your new oven. All ovens do sometimes have hot or cold spots, therefore it is important to judge with your eye as you may need to rotate your dishes during baking.

'Simple Test Cake'

125g butter, softened to room temperature

- 1 cup caster sugar
- 1 teaspoon pure vanilla essence
- 4 large eggs
- 2 cups self-raising flour pinch of salt
- 4 tablespoons (80mL) full-cream milk

Method:

- 1. Butter base and sides of two, 20cm straight-sided round or square cake pans. Then line the base with grease proof paper or baking paper.
- 2. Preheat oven to moderate '180°C' (170°C fan forced) for 30m and ensure oven shelf is in position 2 of the oven.
- 3. Cream softened butter and sugar until light in colour.
- 4. Add vanilla essence.
- 5. Add eggs one at a time, beating well after each addition.
- 6. Sift flour and salt into the mixture and beat until well combined.
- 7. Add milk and beat or stir to combine.
- 8. Spoon mixture equally between prepared cake pans.
- 9. Bake in preheated oven, position 2 for about 25 to 35 minutes. Tip: Insert a fine cake skewer into the cake mix. If it comes out clean, or if the edges of the cake have come away slightly from the sides of the cake pan, the cake is ready.
- 10. Remove from oven and place on wire cake rack and rest for 5 minutes before removing from cake pans. Cool completely.

To Serve: sandwich together with your favourite jam or conserve, and dust top with pure icing sugar.

FOOT NOTE: if desired, substitute butter for either margarine or olive oil spread.

Recipe is based on the Australian standard metric 250mL cup and 20mL tablespoon sets.

Oven guide

The following is intended as a guide and experience may show some slight variation in order to meet individual requirements. Where the gas models vary from the electric models, details for gas cooking is shown in brackets. For best results when baking, preheat your oven for 30 minutes.

Food	Conventional Oven		Fan forced oven		Time in minutes
	Temperature °C	Oven shelf position*	Temperature °C	Oven shelf position*	
Plain or fruit scones	220	2 (3)	210	Any	10 –15
Rolled biscuits	170 (180)	2	150 (170)	Any	10 –15
Spooned biscuits	190	2	180	Any	12 –15
Shortbread biscuits	160	1 or 2	150	Any	30 – 35
Hard individual meringues	110	2	100	Any	90
Soft individual meringues	180	2	165	Any	15 – 20
Pavlova – 6 eggs	110 (120)	1	100	Any	75
Cup cakes	190	2	180	Any	15 – 20
Sponge – 4 eggs	180	2	170	Any	20 – 30
Plain butter cake	180	2	170	Any	25 – 40
Rich fruit cake	140 (150)	2	130	Any	180
Shortcrust cornish pasty#	200 (200/180)	2	180 (180/160)	Any	40 – 45 (10/35)
Shortcrust custard tart	200/180 (220/180)	1(3)	190/170 (200/180)	Any	20 - 30 (10/25)
Cream puffs	210	2	200	Any	25 – 30
Yeast bread	210	1	200	Any	25 – 30
Pizza	220	2	220	Any	15 – 25

 $^{^{\}star}$ Shelf position is counted from the bottom shelf up. Bottom shelf position is 1.

[#] Turn down temperatures shown.

Meat/Poultry/Fish		Recommended temperature °C	Minutes per kilogram
Beef	- Rare	200	35 - 40
	– Medium	200	45 - 50
	– Well done	200	55 - 60
Lamb	– Medium	200	40
	– Well done	200	60
Veal		180	60
Pork		200	60
Chicken		180 - 200	45 – 50
Duck		180 - 200	60 – 70
Turkey		180	40 – 45 (less than 10kg) 35 – 40 (more than 10kg)
Fish		180	20

Troubleshooting

Problem	Causes	What to do
Uneven cooking	Incorrect shelf position	Select shelf that puts food in centre of oven
	Oven tray too large	Try other trays or dishes
	Trays not in centre	Put trays in centre
	Air flow in oven uneven	Rotate food during cooking
	Grill tray affecting thermostat	Remove grill tray from oven on bake modes
Baked products too brown on top	Oven not preheated	Preheat the oven
	Baking tins too large for recipe	Use correct size tins
	Baking tins not evenly spaced	Stagger baking tins at least 3cm between tins and the oven walls
	Products not evenly sized or spaced on trays	Make into same size and shape and spread evenly over trays
Baked products too brown on	Baking tins too large	Use correct size tins
bottom	Baking tins are dark metal or glass	Change to shiny, light tins or lower the temperature by 10°C
	Food too low in oven	Cook one shelf higher
	Oven door opened too frequently during baking	Don't open the oven door until at least half the cooking time has passed
	Baking temperature too high	Lower the temperature
	Grill tray affecting thermostat	Remove grill tray from oven on bake modes
Cakes have a cracked thick crust	Baking temperature too high	Lower the temperature
	Food too low in oven	Cook one shelf higher
	Cake batter over mixed	Mix just long enough to combine the ingredients
	Baking tin too deep	Check size of tin and use recommended size
	Baking tins dark	Change to shiny light tins
Baked products are pale, flat and	Baking temperature too low	Raise the temperature
undercooked	Food too low in oven	Cook one shelf higher
	Baking time too short	Increase cooking time
	Incorrect baking tin size	Use correct size tin
Cakes fallen in centre	Baking temperature too low	Raise the temperature
	Baking time too short	Increase cooking time
	Proportions of ingredients incorrect for recipe	Check recipe
	Opening door too early during baking	Do not open door until the last quarter of cooking time
Roast meat and potatoes not brown	Poor hot air circulation	Elevate food onto a rack to allow air circulation
in fan oven	Grill tray affecting thermostat	Remove grill tray from oven on bake modes
Juices running out of meat		Do not pierce meat with fork, turn with tongs
Grilled meats overcooked on outside and raw in the centre		Grill at lower insert position
Grilled chops and steaks curling		Cut into fat every 2cm (3/4")
The oven seal is loose		The oven seal is only attached at each corner. It may seem like loose fit but when the oven door is closed it will function correctly.

Troubleshooting

If you have a problem with your appliance check the following before you ring the service line.

Problem	What to do	
Operational problems	Check the electricity is turned on	
ie: Oven, grill or hob not working	Check your fuses. If the fuse continues to blow, call the Service Centre	
	Check the circuit breaker	
	Ensure correct knob is turned	
	Gas only – Dry or clean ignition electrodes	
	Gas only – Make sure flame ports and ignition areas are clean and dry	
	Gas only – Check gas supply is on	
	Gas only – Ensure cap/crown correctly fitted.	
	Replace or tighten light globes (where fitted)	
	See also Gas Conversion Fault Finding on Page 17	
Heat up problems	Oven not pre-heated – Pre-heat oven for 30 minutes	
	Check oven door is closed properly	
	Remove foil or trays from bottom of oven	
	Change set oven temperature	
	Preheat your oven/grill before you put the food in to be cooked	
Unit smoking odours	Turn oven/grill on high to remove protective oils	
	Persistent gas smell – do not operate appliance. Call service 131349	
Condensation	Reduce the amount of water used for cooking	
Note: some condensation is normal and is to be expected during cooking	Leave the door open after cooking if food remains in cooker for warming	
Timer not audible	Turn Timer knob past 15-minute mark then to the required number of minutes	
Oven shelf tight	Remove shelf and insert as per diagram	
Stains appear to be under ceramic	These stains are on the SURFACE of the glass and can be cleaned off with a razor blade scraper and ceramic glass cleaner.	

When you need information, service or replacements please quote:

- 1. Model Number
- 2. Serial Number: You can find these on the data plate, which can be seen when the oven door is open. If you need more information, please contact the Customer Care Centre on 1300 363 640 (Australia Centre is open 8.00am to 5.00pm Monday to Friday EST) Or 0800 436 245 (New Zealand Centre is open 8.00am to 5.00pm Monday to Friday). Only authorised service centres should carry out servicing. Otherwise warranty may be void. If you have a warranty or spare parts enquiry, you should call the numbers listed on the back page.

Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZÉALAND
APPLIANCE: CHEF BUILT-IN OVENS, COOKTOPS AND FREESTANDING
COOKFR

This document sets out the terms and conditions of the product warranties for Chef Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. In this warranty:

- (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
- (b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
- (c) 'ASC' means Electrolux's authorised serviced centres;
- (d) 'Chef' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
- (e) 'Warranty Period' means the period specified in clause 3 of this warranty;
- (f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
- 2. Application: This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.
- 3. Warranty Period: Subject to these terms and conditions, this warranty continues in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance.
- 4. Repair or replace warranty: During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.
- **5. Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.
- Proof of purchase is required before you can make a claim under this warranty.
- 7. Exclusions: You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:
 - (a) light globes, batteries, filters or similar perishable parts;
 - (b) parts and Appliances not supplied by Electrolux;
 - (c) cosmetic damage which does not affect the operation of the Appliance;

- (d) damage to the Appliance caused by:
 - (i) negligence or accident;
 - (ii) misuse or abuse, including failure to properly maintain or service;
 - (iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
 - (iv) normal wear and tear;
 - (v) power surges, electrical storm damage or incorrect power supply;
 - (vi) incomplete or improper installation;
 - (vii) incorr ect, improper or inappropriate operation;
 - (viii) insect or vermin infestation;
 - (ix) failure to comply with any additional instructions supplied with the Appliance;
- In addition, Electrolux is not liable under this warranty if:
 - (a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
 - (b) the Appliance is modified without authority from Electrolux in writing;
 - (c) the Appliance's serial number or warranty seal has been removed or defaced
- **8. How to claim under this warranty:** To enquire about claiming under this warranty, please follow these steps:
 - (a) carefully check the operating instructions, user manual and the terms of this warranty;
 - (b) have the model and serial number of the Appliance available;
 - (c) have the proof of purchase (e.g. an invoice) available;
 - (d) telephone the numbers shown below.
- 9. Australia: For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.
- 10.New Zealand: For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.
- 11.Confidentiality: You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this

Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

AUSTRALIA	FOR SERVICE or to find the address of your nearest authorised service centre in Australia PLEASE CALL 13 13 49 For the cost of a local call	FOR SPARE PARTS or to find the address of your nearest spare parts centre in Australia PLEASE CALL 13 13 50 For the cost of a local call
NEW ZEALAND	FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand PLEASE CALL 0800 10 66 10	FOR SPARE PARTS or to find the address of your nearest spare parts centre in New Zealand PLEASE CALL 0800 10 66 20

Like to know more?



For further information on all Chef appliances, or to obtain detailed dimension and installation information, call into your Retailer, phone or email our Customer Care team or visit our website:

Australia

phone:	13 13 49
email:	customercare@electrolux.com.au
web:	chefappliances.com.au

Chef. We are part of the Electrolux family. Share more of our thinking at electrolux.com.au