

How to maintain your vacuum cleaner

to ensure optimal performance
For corded, cordless and robot vacuums



Scan to learn more about filter and nozzle maintenance.

Signs your vacuum cleaner needs maintenance



Unpleasant odours



Damaged, bent or cracked filters



Unusual noises



Poor suction power



Any irregularities in performance

Recommended maintenance - filters

Cleaning frequency:



Empty the bin after every clean



Pre-filters or HEPA filters Wash once a week.



Fine dust filter Wash once a month.

Replacement:



Pre-filters 6 months




Fine dust filter 12 months

Cleaning methods:




Dust-bin

- Empty the dust bin.
- Rinse with water or wipe with damp cloth.
- Thoroughly dry before re-use.

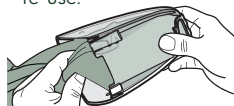

Filter

Rinse with lukewarm water and thoroughly dry before re-use.

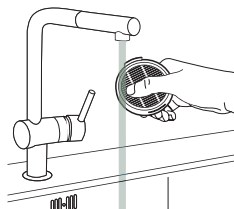

Recommended maintenance - nozzle/brush



Frequency:



Once a week


Cleaning directions:

Manually remove roller or brush for a more thorough clean.

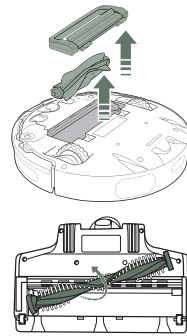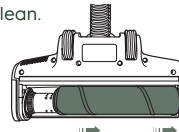


Tangled hair removal

Pull out, or cut, hair from the brush roller.

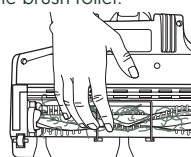

Wipe off dust

Clean the bristles and brush roller with a damp cloth.

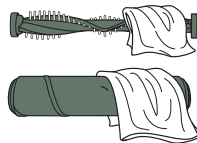

BrushRollClean

Step on pedal* to untangle hair even when the vacuum is on.



* Only nozzle comes with BrushRollClean feature.