

# INSTALLATION MANUAL

## REFRIGERATOR DOOR REVERSAL KIT

Models: ETB3200MG,ETB3400H,ETB3400J,ETB3400K,ETB3440K,ETB3700H,ETB3700J,ETB3700K,ETB3740K,ETM3100L,ETM3100SC,ETM3400L,ETM3440L,ETM3400SC,ETM3400BC,HTB3500AG,RTM3400L,WTB3100AK,WTB3400AH,WTB3400AK,WTB3400WK,WTB3440WH,WTB3700AH,WTB3700WH,WTB3700WK,WTM3100WL,WTM3100SL,WTM3400WL,EBB3402K,EBB3442K,EBM3402L,EBM3442L,EBB3700H,EBB3702K,EBB3742K,HBB3200AG,WBB3100WK,WBB3100AK,WBB3400AH,WBB3400HK,WBB3400WK,WBB3400AK,WBB3402BL,WBB3402WL,WBB3700AH,WBB3700HK,WBB3700AK

 
This installation manual is applicable to both top freezer (top mount) and bottom freezer (bottom mount).

### KIT CONTENTS

	DESCRIPTION	QTY
	Cover top cabinet wh GR	1
	Cover top cabinet wh WHT	1
	Cover top cabinet right GR	1
	Cover top cabinet right WHT	1
	Hinge top cover left GR	1
	Hinge top cover left WHT	1
	Hinge top left	1
	Hinge centre left	1
	Hinge bottom base left	1
	Door auto closer LH	2
	Screw centre mullion M5x8	3
	Screw centre hinge M5x16	2
	Cover screw mullion WH WHT	2

NOTE: Keep kit parts separate from other parts as you disassemble them to avoid mix-ups. This installation manual is applicable to both top freezer and bottom freezer models.

#### TOOLS YOU WILL NEED (not supplied)



#### WARNING

Electrolux/Westinghouse takes no responsibility for incorrectly assembled doors leading to injury or malfunction.

#### CAUTION


Refrigerator must stand for 30 minutes prior to connecting to power supply to ensure system functions correctly.

#### IMPORTANT


All hinge screws require tightening to a torque setting of 5-10Nm.

### FRIDGE DESCRIPTION

Top view of right hand hinge cabinet

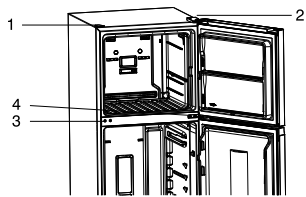


Bottom view of right hand hinge cabinet

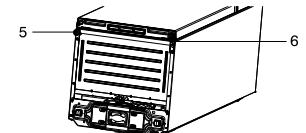


- 1 Cover top cabinet WH
- 2 Hinge top right and hinge top cover right
- 3 Cover hole mullion
- 4 Hinge centre right and screws
- 5 Adjustable foot
- 6 Hinge bottom assembly right

### INSTRUCTIONS

1. Ensure refrigerator is empty of all loose items and unplugged from power source.

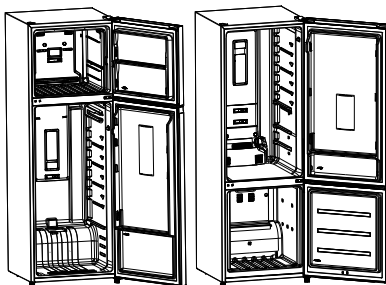


2. Store power cord next to motor to prevent damage. Check for water in drain pan and remove any water with a cloth or sponge if necessary.

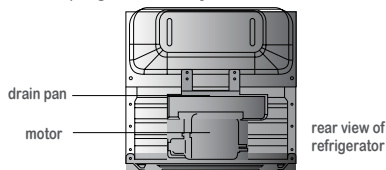


3. Lay the refrigerator on its back.

#### WARNING


Your refrigerator is heavy - you may need assistance.

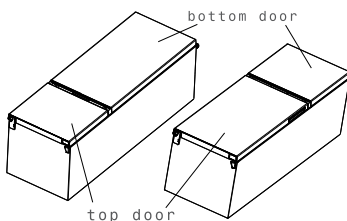


4. Remove the hinge cover with a soft plastic lever.

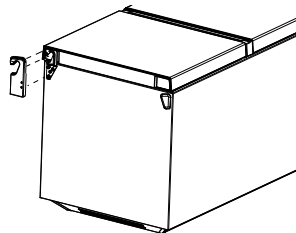


5. Remove the LH cap with a soft plastic lever.

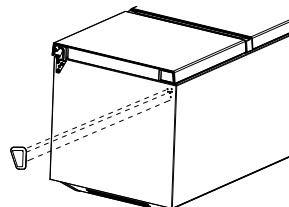


6. Unscrew top hinge screws and remove RH top hinge. Do not discard screws.

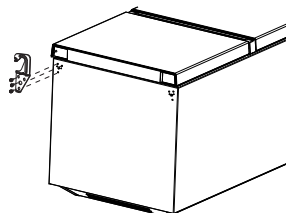


7. Remove top door by opening 45° and gently slide off hinge. Set door aside to prevent damage.

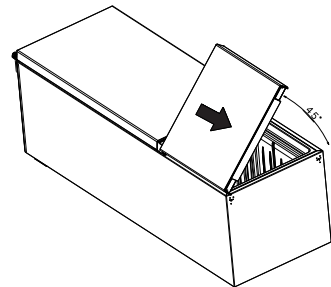


8. Unscrew 2 centre hinge screw. Remove the cover hole mullion with plastic lever. Do not discard screws (if screws loosen can be use spare in kit content).

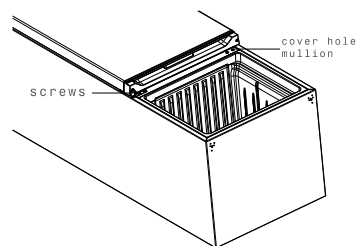


9. Remove RH centre hinge by lifting the door slightly and sliding hinge out of the door.

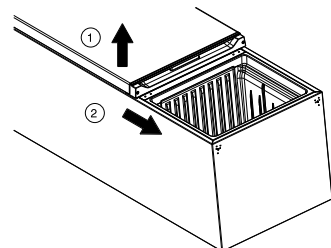


10. Remove bottom door by opening 45° and gently slide off hinge. Set door aside to prevent damage.

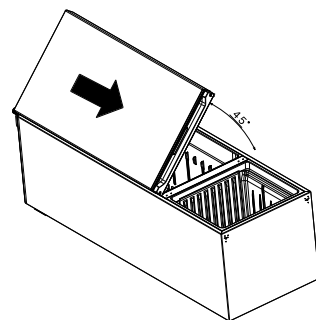


11. Remove the cover door from top door and assemble it on the other side. Remove the RH door auto closer and replace with LH door auto closer (kit content) on the other side. Repeat the same step with bottom door.

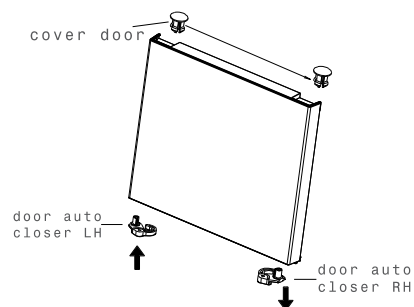


12. Unscrew the hinge foot using phillips head screwdriver and unscrew foot on opposite side. Do not discard.

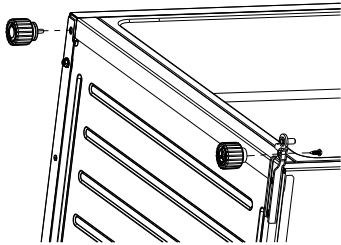


13. Unscrew the bottom hinge screw shown, pull the hinge away from cabinet then up to remove.

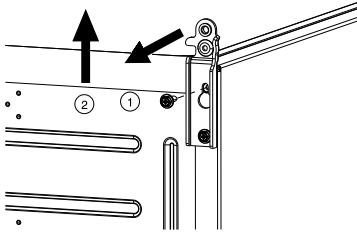


14. Place the bottom hinge LH (kit content) onto the cabinet, placing it down then towards cabinet to install. Replace the screw.

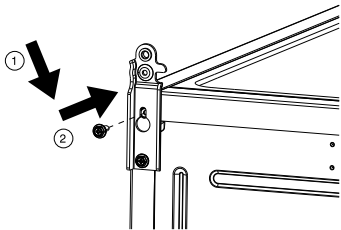


15. Replace the hinge foot onto the LH bottom hinge and tighten with screw. (for the MK kit, do not just place the RH foot).

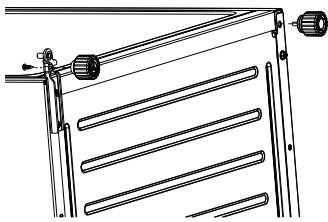


16. Replace the bottom door by holding at 45° and gently slide onto the bottom hinge and close the door.

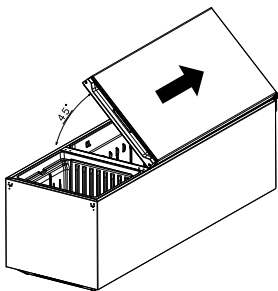


17. Replace LH centre hinge (kit content) by lifting the door slightly and sliding hinge into the door and placing the door down again.

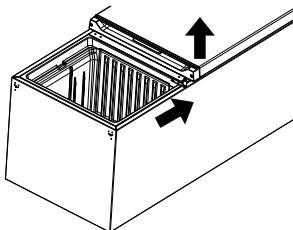


18. Insert M5x16 screws from existing centre hinge into the LH centre hinge, tighten the screw until the bracket is secured. Assemble 2 phillips head screws M5x8 and covers (kit content) on the other side as show in below .

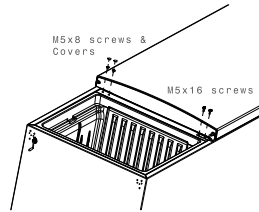


19. Replace the top door by holding at 45° and gently slide onto the centre hinge and close the door.

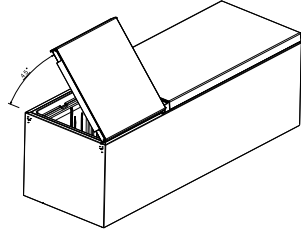

20. Slide the LH top hinge (kit content) into the door, loosely screw screws from the existing top hinge in the cabinet.

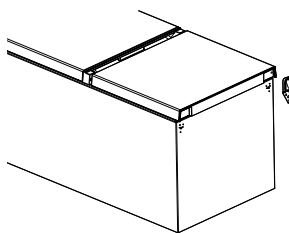

21. Ensure that the edges of the doors are parallel with the sides of the cabinet.

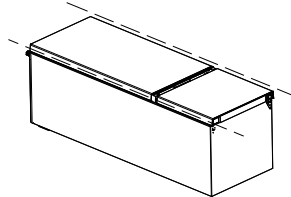


22. Ensure that the bottom door and the top door have a parallel gap.




23. Fully tighten the LH top hinge to the cabinet until the hinge is secure.

Without sensor

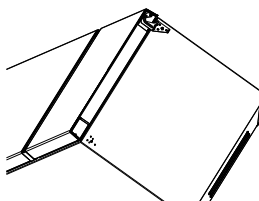


With sensor

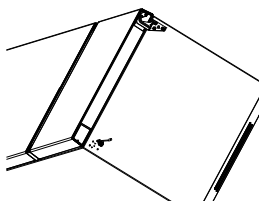


24. Clip the LH hinge cover (kit content) over LH top hinge. For the spec with sensor insert the ambient sensor into RH top cover (Kit content). (for the MK kit, do not just place the RH top cover)

Without sensor

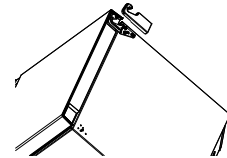


With sensor

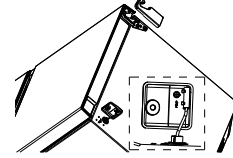


25. For the spec without sensor Insert the RH top hinge hole cap (kit content). For the spec with sensor insert the RH top cover (kit content) and tighten one screw M5x8 (kit content). (for the MK kit, do not just place the RH top cover)

Without sensor

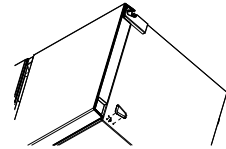


With sensor

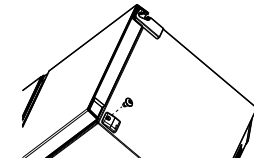


26. Stand the refrigerator upright.

**⚠ WARNING**

Your refrigerator is heavy – you may need assistance.

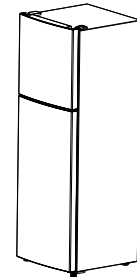

27. Level the cabinet by adjusting the foot.

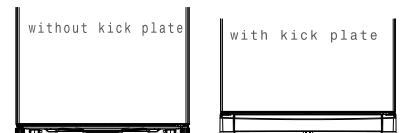

\*\* It is recommended to apply a small amount of silicone grease (Molykote 140113826022 or equivalent – not provided with kit) on all pivoting pin of left hand hinges for lubrication.

For further information on these appliances, or to obtain detailed dimension and installation information, call into your Retailer, phone or email our Customer Care team or visit our website:

AUSTRALIA  
Customer Care Centre: 131349  
Email: [customercare@electrolux.com.au](mailto:customercare@electrolux.com.au)  
Website: [www.westinghouse.com.au](http://www.westinghouse.com.au)

NEW ZEALAND  
Customer Contact Centre: 0800 422273  
(0800 4CCARE)  
Email: [customercare.nz@electrolux.com](mailto:customercare.nz@electrolux.com)  
Website: [www.westinghouse.co.nz](http://www.westinghouse.co.nz)

MALAYSIA  
Customer Care Hotline: 1300 88 1122  
Fax No: +603-6524 2521  
Email: [malaysia.customercare@electrolux.com](mailto:malaysia.customercare@electrolux.com)  
Website: [www.electrolux.com.my](http://www.electrolux.com.my)

VIETNAM  
Customer Care Center: 1800 58 88 99 (Toll Free)  
Fax: +84 28 39105470  
Email: [vn care@electrolux.com](mailto:vn care@electrolux.com)  
Website: [www.electrolux.vn](http://www.electrolux.vn)

SINGAPORE  
Customer Care hotline is +65 6727 3699  
Email: [customer-care.SIN@electrolux.com](mailto:customer-care.SIN@electrolux.com)  
Website: [www.electrolux.com.sg](http://www.electrolux.com.sg)  
HHONG KONG  
Service Hotline: +852 3193 9888  
Email: [ha@ead.dch.com.hk](mailto:ha@ead.dch.com.hk)  
Website: [www.electrolux.com.hk](http://www.electrolux.com.hk)