 
 
 


This installation manual is applicable to bottom freezer (bottom mount).


KIT CONTENTS


	DESCRIPTION	QTY
A.	 Left stopper auto closer	1
B.	Right bearing cover gray	1
	Right bearing cover white	1
C.	Left bearing gray	1
	Left bearing white	1
D.	 Left top hinge	1
E.	Left top hinge cover gray	1
	Left top hinge cover white	1
F.	Center hinge hole cover gray	2
	Center hinge hole cover white	2
G.	Left bearing auto-closer gray	2
	Left bearing auto-closer white	2
H.	 Screw M6x18	2

NOTE: Keep kit parts separate from other parts as you disassemble them to avoid mix-ups.
This installation manual is applicable to bottom freezer model.


TOOLS YOU WILL NEED (not supplied)


Philips head &
Flathead screwdriver

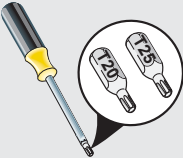

T20 & T25 Torx
Head screwdriver

 
8 mm Socket
wrench


* Optional Tool:

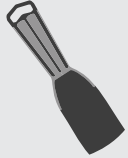
Plastic putty knife


Rubber Hammer

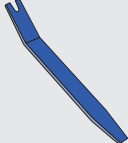
Plastic pry tool


Grease bag

Note : *Tools you will needed (Not supplied)



WARNING

Electrolux/Westinghouse takes no responsibility for incorrectly assembled doors leading to injury or appliance malfunction.



CAUTION

Refrigerator must stand for 30 minutes prior to connecting to power supply to ensure system functions correctly.



IMPORTANT

Tighten all hinge screws according to the torque specified in each step.




CAUTION

Door reversal must be done by an authorized installer or service person.
If it is not, the doors will not be covered by the warranty.

FRIDGE DESCRIPTION

Isometric view of right hand hinge cabinet

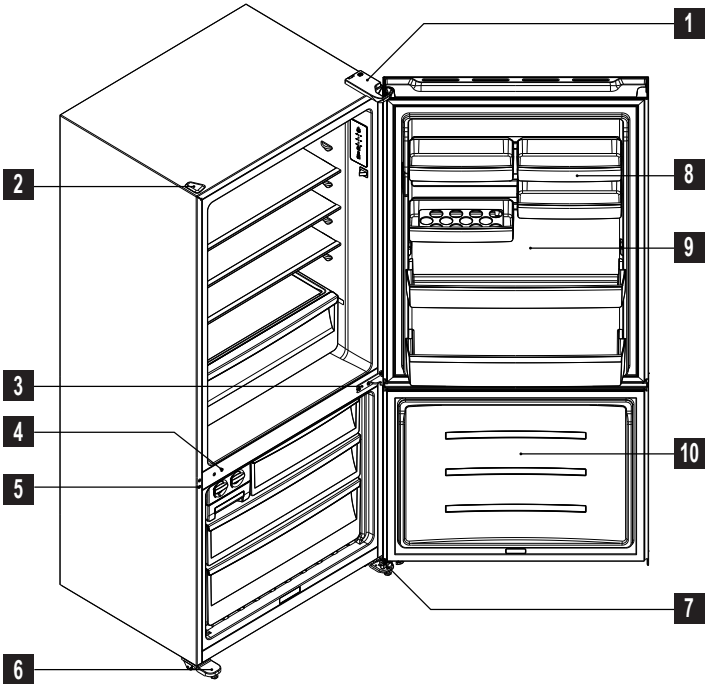

- 1 Right top hinge cover + Right top hinge
- 2 Top cabinet cover
- 3 Center hinge (Reversible door)
- 4 Label hole covers
- 5 Center hinge hole covers
- 6 Foot base cover + Left bottom base hinge
- 7 Right bottom base hinge
- 8 Door bin
- 9 Upper door
- 10 Lower door

INSTRUCTIONS

1. Unplug the refrigerator and open the upper door.
Remove all the door bins to prevent damage, then close the door (see Figure 1).

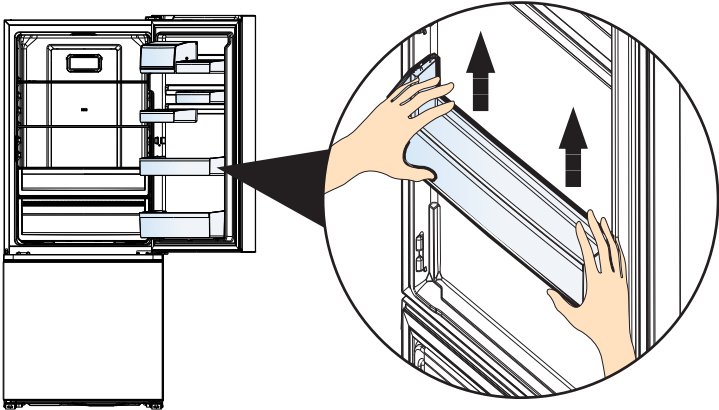


FIGURE - 1

2. Pry off the top cabinet cover using a plastic putty knife (see Figure 2A).
3. Loosen the screw and remove the right top hinge cover (see Figure 2B).
4. Loosen the three 8 mm screws to remove the right top hinge (see Figure 2C).

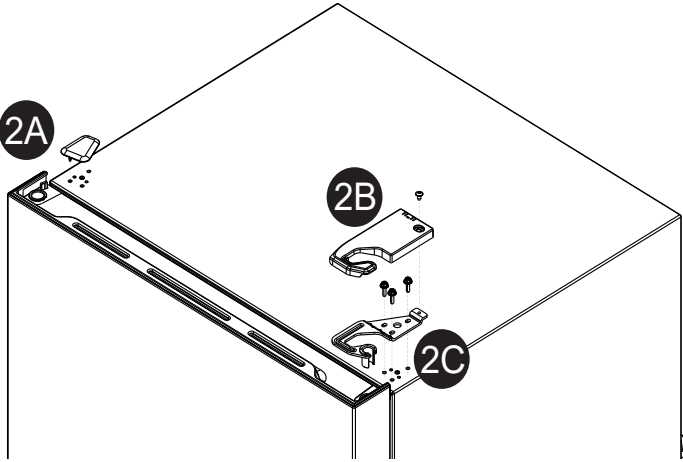


FIGURE - 2

5. Remove the upper door by closing the door, tilting it, and lifting it upward.
Then place the door on a smooth surface (see Figure 3).

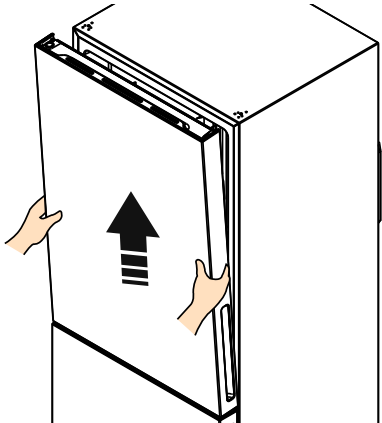


FIGURE - 3

6. Close the lower door. Then unscrew the center hinge pin (reversible door) (see Figure 4).

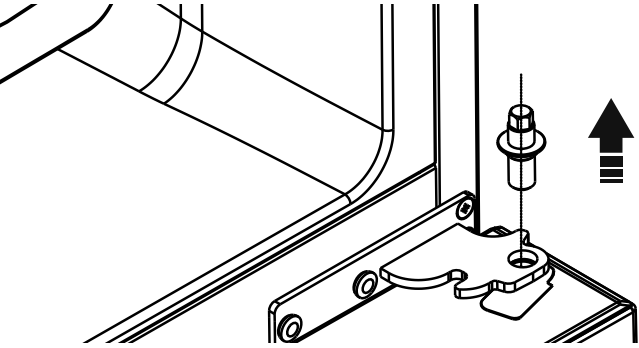


FIGURE - 4

- 7.Remove the lower door by tilting it and lifting it upward (see Figure 5).

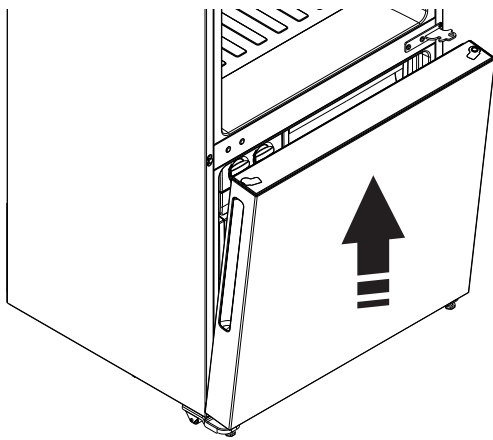


FIGURE - 5

8. Remove the center hinge (reversible door) by unscrewing it (see Figure 6).

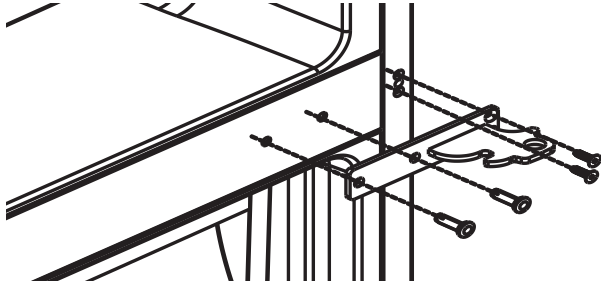


FIGURE - 6

9. Using a plastic putty knife, gently remove the two center hinge hole covers (see Figure 7A).
Then peel off the two label hole covers (see Figure 7B).



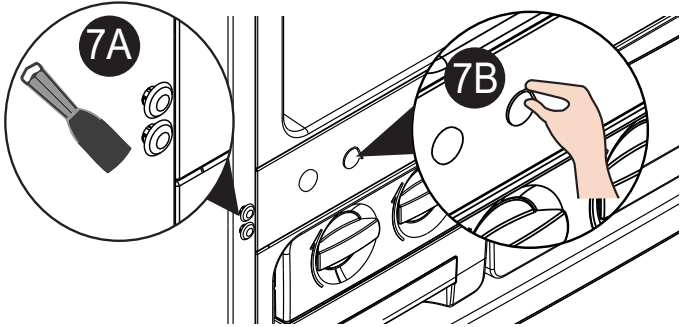


FIGURE - 7

10. Rotate the center hinge (reversible door) 180°, then reinstall it on the left side (see Figure 8).

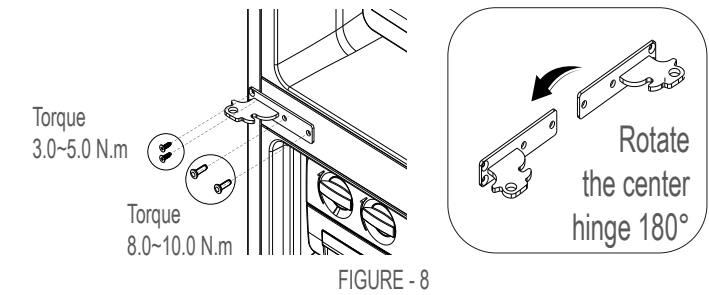

11. Take the **Center Hinge Hole Covers (F)** and the **M6×18 screw (H)** from the kit box. Install them on the right side (see Figures 9A and 9B).

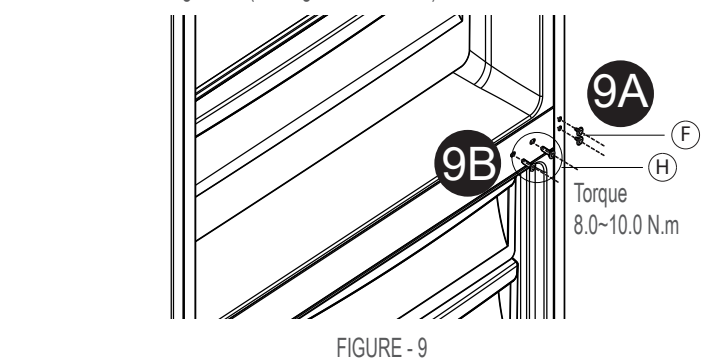


12. Loosen the tapping screw and the bottom hinge pin (reversible door), then remove the right stopper auto-closer (see Figure 10A).


13. Remove the foot base cover from the left bottom base hinge (see Figure 10B).

14. Take the **Left stopper auto-closer (A)** from the kit box, put on the other side by tapping screw and bottom hinge pin (reversible door) then tighten securely (see Figure 10C).

15. Reinstall the foot base cover onto the right bottom base hinge (see Figure 10D).

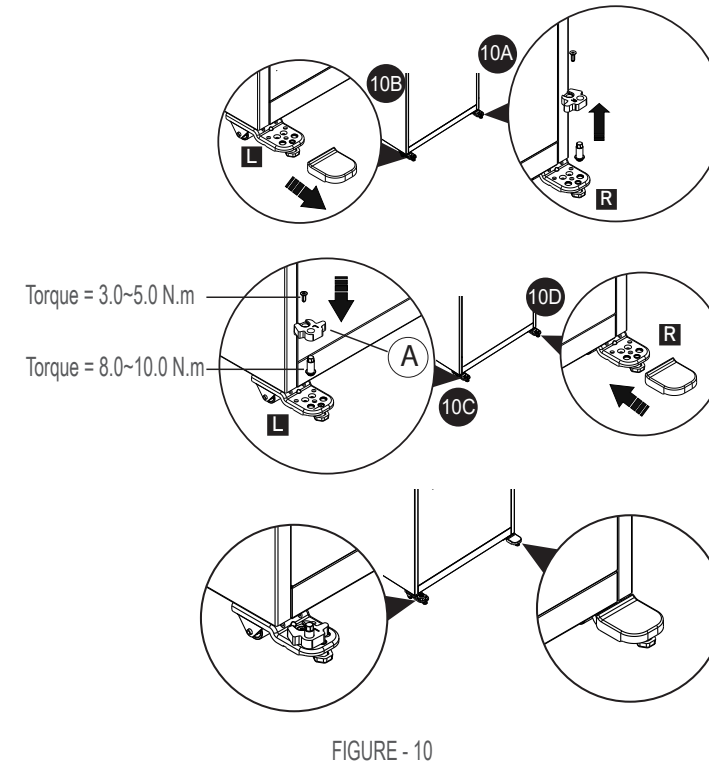


16. Brushing white grease along the left cabinet front side, start from top to bottom (see Figure 11).

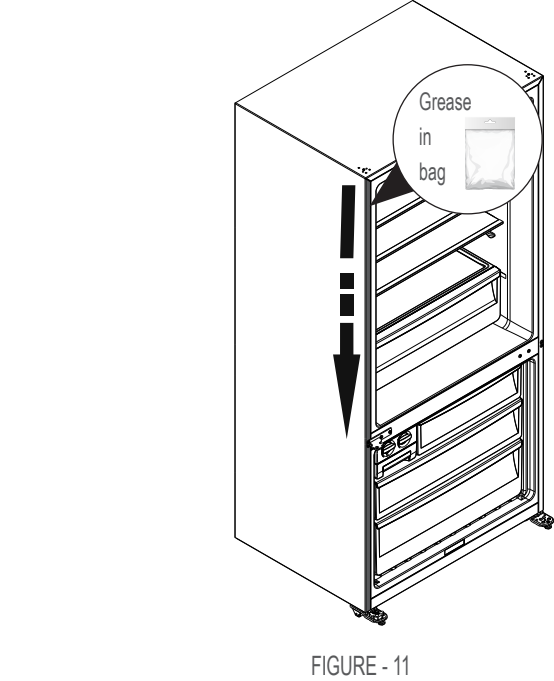


17. Turn the upper door upside down, loosen the screw, and remove the Right Bearing Auto-Closer (see Figure 12A). Then place the **Left Bearing Auto-Closer (G)** on the left side and reinstall it (see Figure 12B).

Upper door

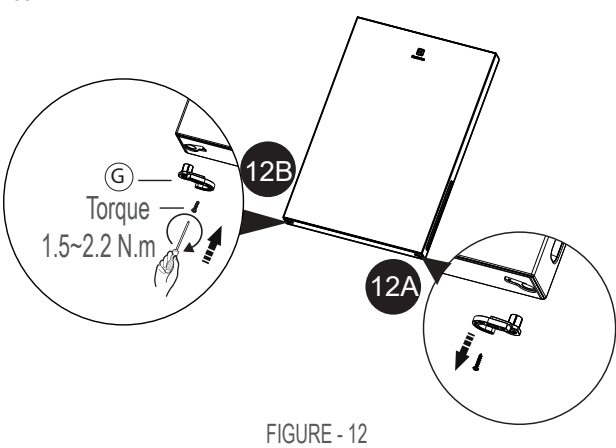


18. Repeat Step 17 for the lower door in the same way as for the upper door. (See Figure - 13)


Lower door

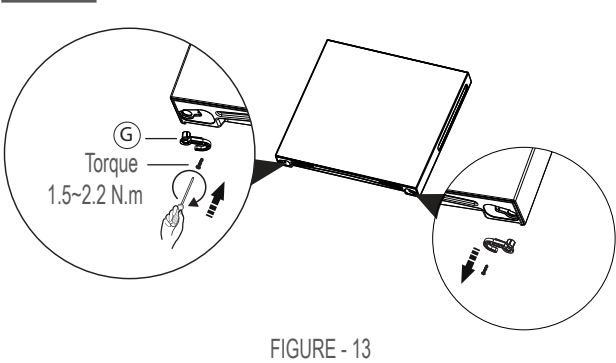


19. Carefully remove the right bearing and the left bearing cover using a plastic pry tool. (see Figure 14).

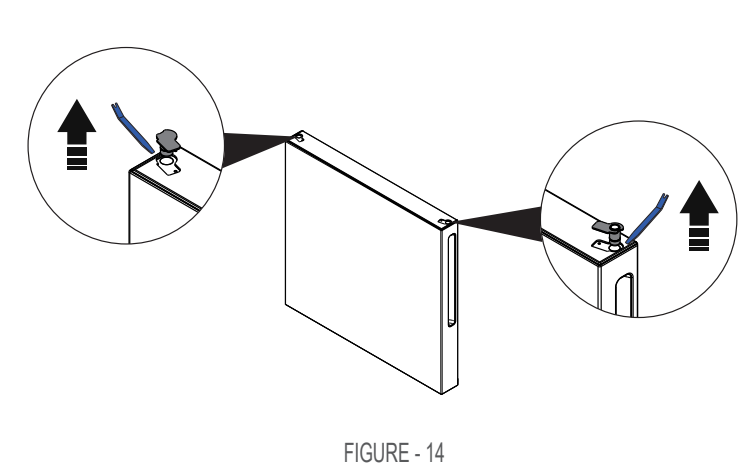


20. Install the **Left Bearing (C)** on the left side (see Figure 15A) and the **Right Bearing Cover (B)** on the right side using a rubber hammer (see Figure 15B).

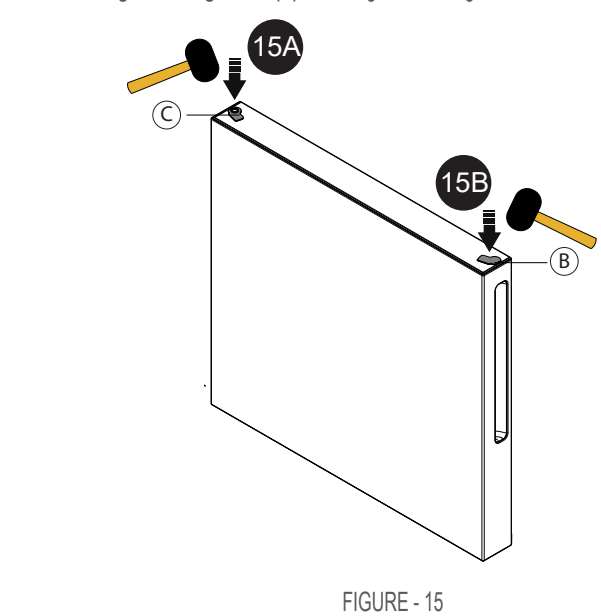


21. Insert the lower door onto the bottom hinge pin (reversible door) (see Figure 16).

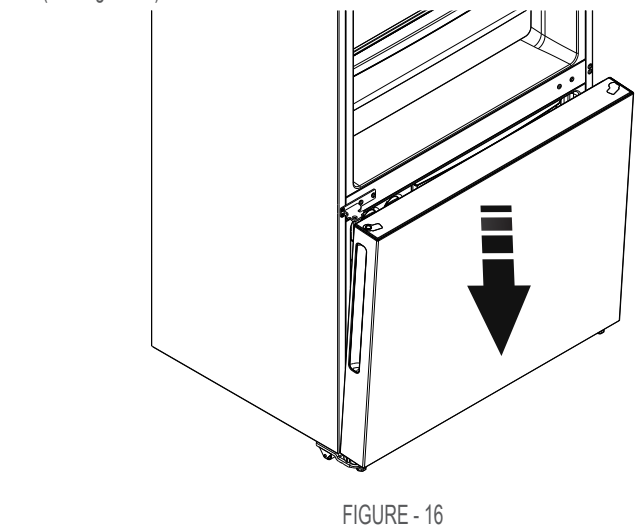


22. Reinstall the centre hinge pin (reversible door) (See Figure 17).

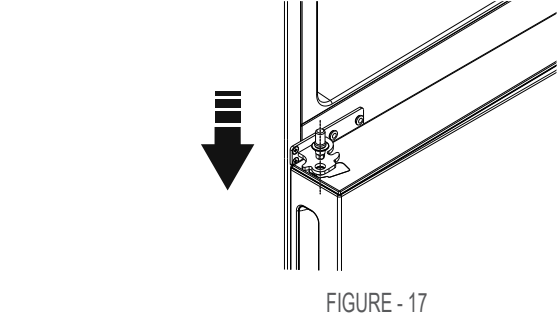

23. Insert the upper door into the center hinge pin. Ensure the door has approximately 10-12 mm between the upper and lower door (see Figure 18).

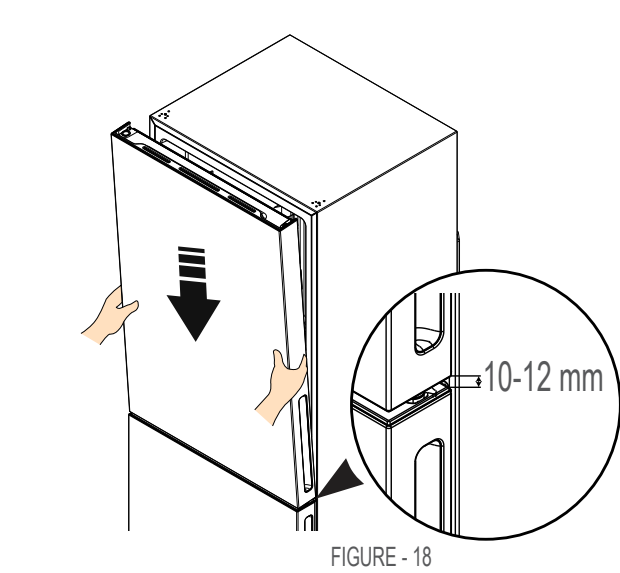

24. Reinstall the top cabinet cover on the right side (see Figure 19A). Install the **Left top hinge (D)** using the three screws (see Figure 19B). Then secure the **Left top hinge cover (E)** with the tapping screw (see Figure 19C).

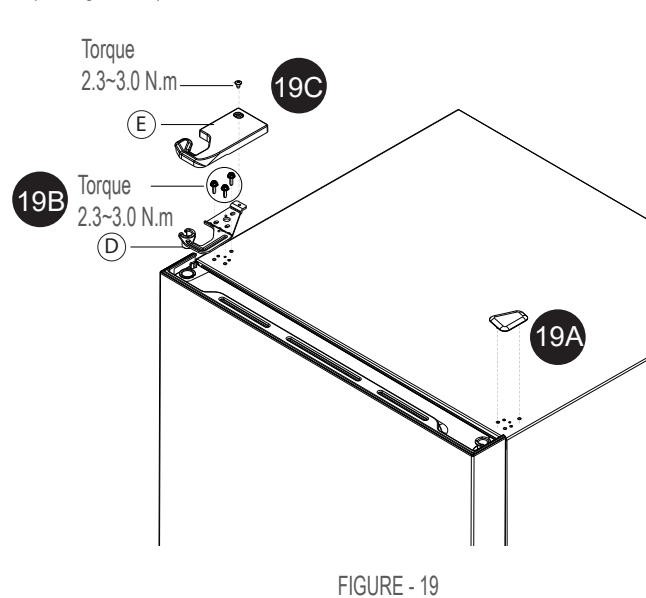

25. Open the upper door, reinstall the door bin(s), close the door, and plug the refrigerator into an electrical outlet.

For further information on these appliances, or to obtain detailed dimension and installation information, call into your Retailer, phone or email our Customer Care team or visit our website:

AUSTRALIA
Customer Care Centre: 131349
Email: customer-care@electrolux.com.au
Website: www.westinghouse.com.au

NEW ZEALAND
Customer Contact Centre: 0800 422273
(0800 4CCARE)
Email: customer-care.nz@electrolux.com
Website: www.westinghouse.co.nz

MALAYSIA
Customer Care Hotline: 1300 88 1122
Email: malaysia.customer-care@electrolux.com
Website: www.electrolux.com.my

VIETNAM
Customer Care Center: 1800 58 88 99 (Toll Free)
Fax: +84 28 39105470
Email: vn-care@electrolux.com
Website: www.electrolux.vn

SINGAPORE
Customer Care hotline is +65 6727 3699
Email: customer-care.SIN@electrolux.com
Website: www.electrolux.com.sg

HONG KONG
Service Hotline: +852 3193 9888
Email: ha@ead.dch.com.hk
Website: www.electrolux.com.hk

INDIA
Customer care hotline : 18002021800
email : customer-careindia@electrolux.com
website: <https://www.electrolux.in>