

ERI512SE
ERI812SE



EN	Cooker Hood	User Manual	2
TH	เครื่องดูดควัน	คู่มือการใช้งาน	12




Electrolux

**Enjoy peace of mind.
Register your appliance today.**

Stay updated on better living services,
safety notices and shop for accessories.

1. Open the camera app
on your smartphone
and point at the QR
code to scan.

Product Registration QR
code is located on the
front or underside of your
appliance.

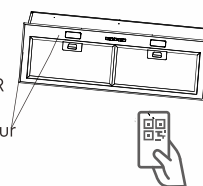

2. Tap the notification or link to open the
registration form.

3. Complete your details and enjoy peace
of mind.

WELCOME TO ELECTROLUX

Thank you for purchasing a Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

- 3 Important safety instructions
- 4 Installation
- 8 Operation and maintenance
- 11 Warranty

LEGEND

The symbols you will see in this booklet have these meanings:



WARNING!

This symbol indicates information concerning your personal safety



CAUTION!

This symbol indicates information on how to avoid damaging the rangehood



IMPORTANT!

This symbol indicates tips and information about use of the rangehood



ENVIRONMENT!

This symbol indicates tips and information about economical and ecological use of the rangehood

CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments.
- Catering and similar non-retail applications

RECORD MODEL AND SERIAL NUMBER HERE:

Model:

Serial No:

IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

SAFETY INSTRUCTIONS

Please read this manual carefully prior to installing and using the rangehood in order to avoid damage or injury. The manufacturer will not accept liability for damage caused from not following these instructions. If you need assistance contact Customer Care. Please keep the manual for future reference and pass it on to any new owners of the appliance.



ENVIRONMENT!

Remove and discard any packaging material before using this accessory. Most of the packaging materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in the appropriate collection containers.



WARNING!

- This appliance is not intended for use by persons (including children) with reduced physical, sensory mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Ensure the rangehood is switched off before carrying out maintenance, to avoid any possibility of electric shock.
- Grease filters must be removed every four weeks (maximum) for cleaning to reduce the risk of fire.
- Do not flambe or have an exposed flame under the rangehood.
- This rangehood is not recommended for barbecues.
- The exhaust air from the rangehood must not be discharged into any heating flue, which may carry combustion products from other sources.
- Exhaust air must not be discharged into a wall cavity, unless the cavity is designed for the purpose.
- There must be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels.
- Always cover lit gas burners with pots or pans when the rangehood is in use.
- Always switch off gas burners before you remove pots or pans.
- Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a rangehood other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.



CAUTION

- Accessible parts may become hot when used with cooking appliance.
- Regulations concerning the discharge of air have to be fulfilled.
- Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Cleaning

- Wipe the rangehood body and flue with a sponge or soft cloth soaked in warm soapy water, and dry with a soft cloth, for stainless steel models apply a stainless steel protector. Do not use oven cleaners or other abrasive materials.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.

Electrical Connection

- Check that the mains voltage matches with the voltage on the data plate inside the rangehood.
- Check that the installation complies with standards of local gas and electricity authorities.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance has a 1.2m power cord and 10A plug, ensure that the plug is accessible after installation.

Accessories


- Use 150mm round exhaust ducting for best performance.
- When using semi-rigid duct always install duct with the wire helix pulled taut to minimise pressure loss.
- Try to keep exhaust duct short and straight.
- Keep bends in the exhaust duct to a minimum.
- Do not restrict exhaust duct.
- Reducing the size of the exhaust duct will reduce the airflow of the rangehood. Please read instructions carefully. Service calls resulting from incorrect installation will be charged for.

Installation must comply in all respects with your gas and electrical authorities. This rangehood is an indoor domestic appliance, and has been manufactured and tested to comply with Australian and New Zealand Standard AS/NZS 60335.2.31

INSTALLATION

Standard ducting installation

It is recommended that the unit be positioned at a minimum of 600mm for an electric cooktop and 620mm for a gas cooktop, and no further from the cooktop than 800mm. The unit becomes less effective as the distance from the cooking surface to the rangehood increase.

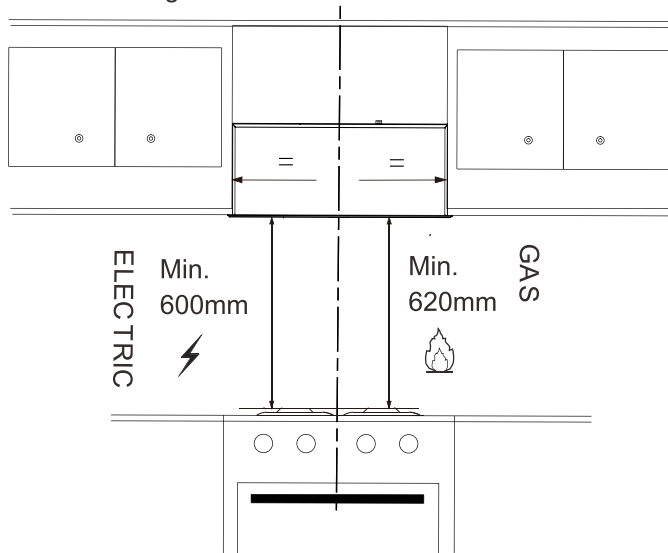


Note: The hoods and hob are mounted symmetrically in the center.


! WARNING!

Where the cooker manufacturer's relevant instructions specify a greater clearance, then the greater clearance shall apply.


Fixing point dimensions for ERI512SE ERI812SE

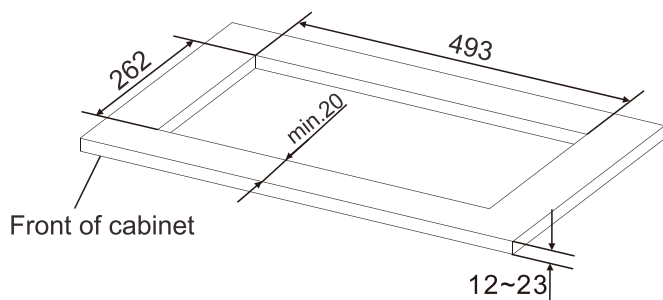


Product dimensions for ERI512SE ERI812SE

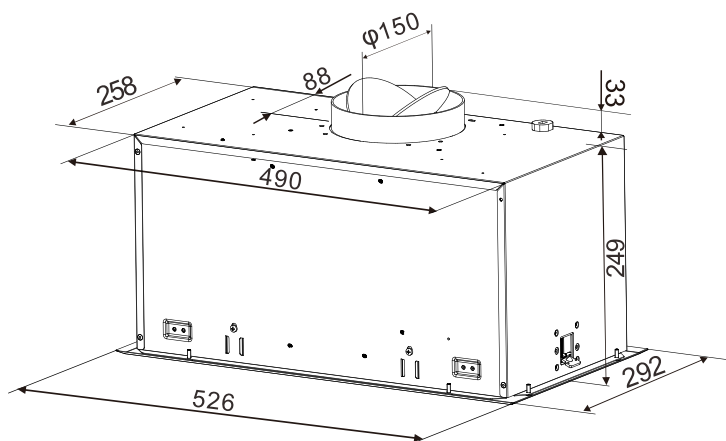

Fixing point dimensions for ERI512SE ERI812SE

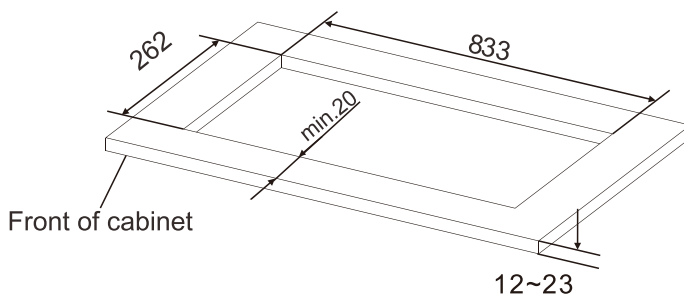


Product dimensions for ERI512SE ERI812SE

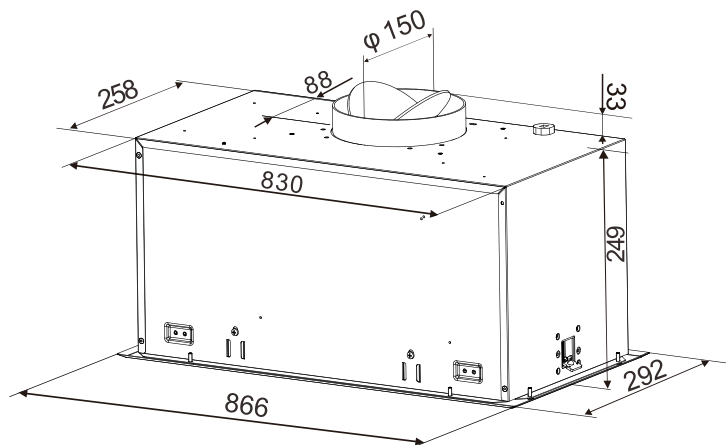

The items shown below are supplied

1. Hood body;
2. Vane x2;
3. Mounting screws (ERI512SE: 8x pan head screws 3.5x25mm, ERI812SE: 10x pan head screws 3.5x25mm)

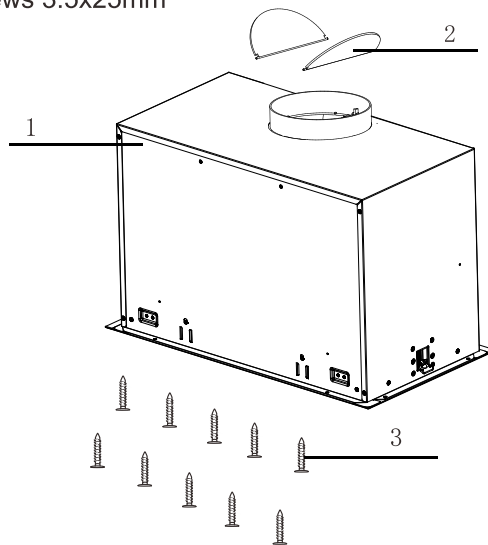

Parts to be purchased


1. Aluminum tape or cable ties to secure flue pipe;
2. Rigid or semi rigid duct;
3. Carbon filter (Applicable to products installed for recirculation mode)

Cutting the cabinet



Cut the slot in the cabinet according to the fixing point dimension.

Fixing the rangehood

1.Remove the grease filter(s)




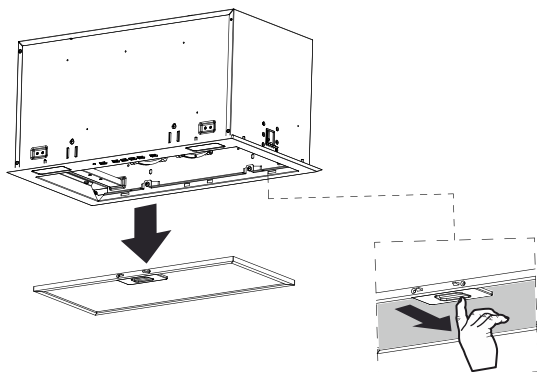


2.Unscrew the face panel screws from body and release the terminals of button and lights

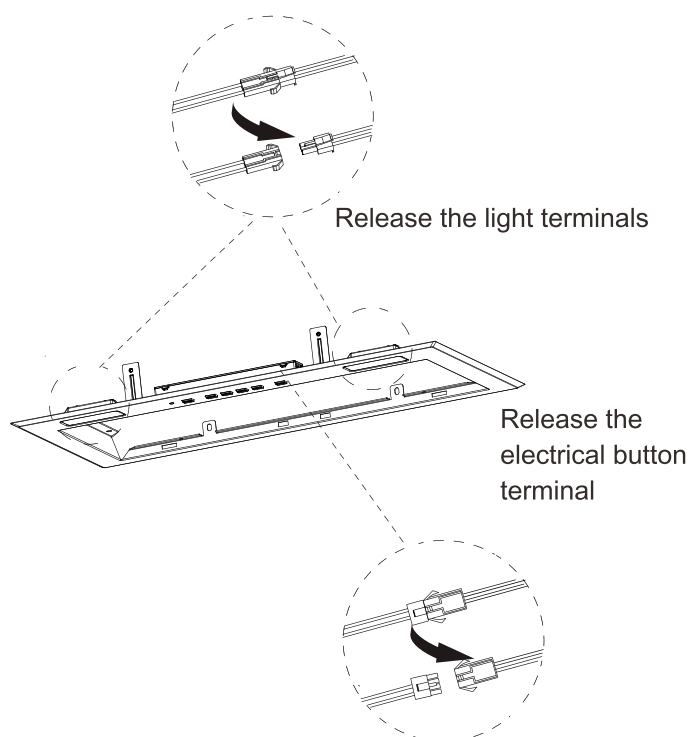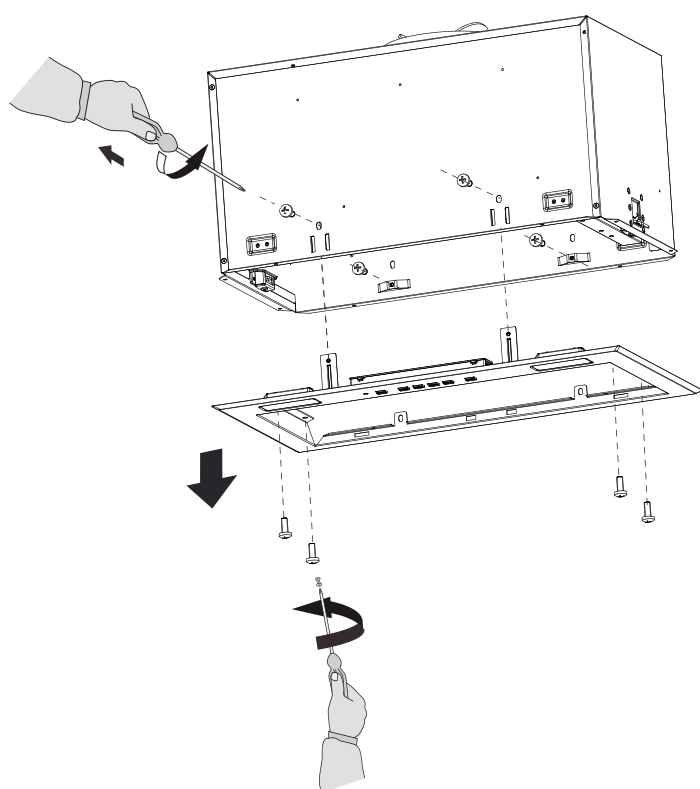


INSTALLATION

3. Push upwards the range hood to the cabinet from bottom side until you hear the 'click' sound. Fasten the fasteners by turning the screw clock-wise.

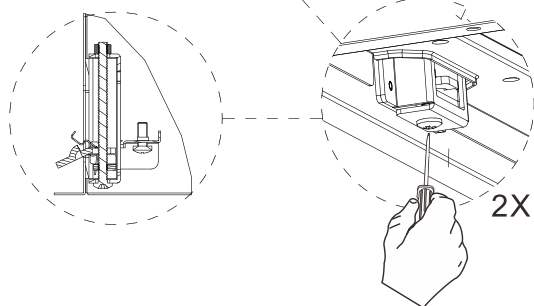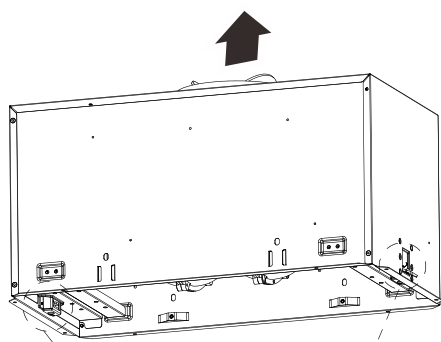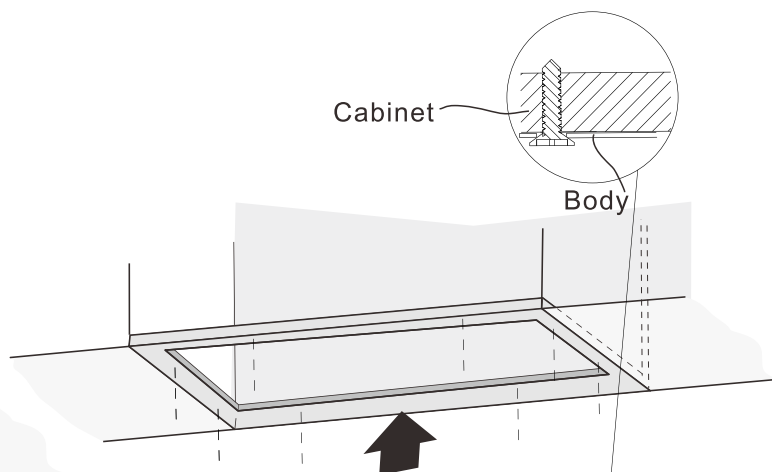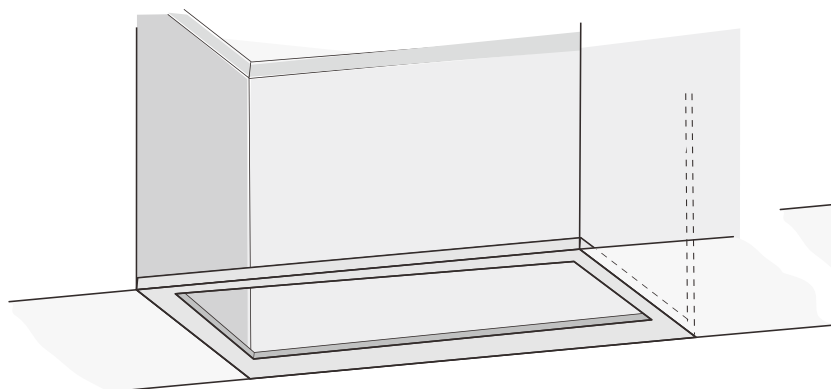

4. Fix the range hood using the supplied screws to fix the range hood.


5. Fix the face panel to body using the screws and connect the terminals in step 2

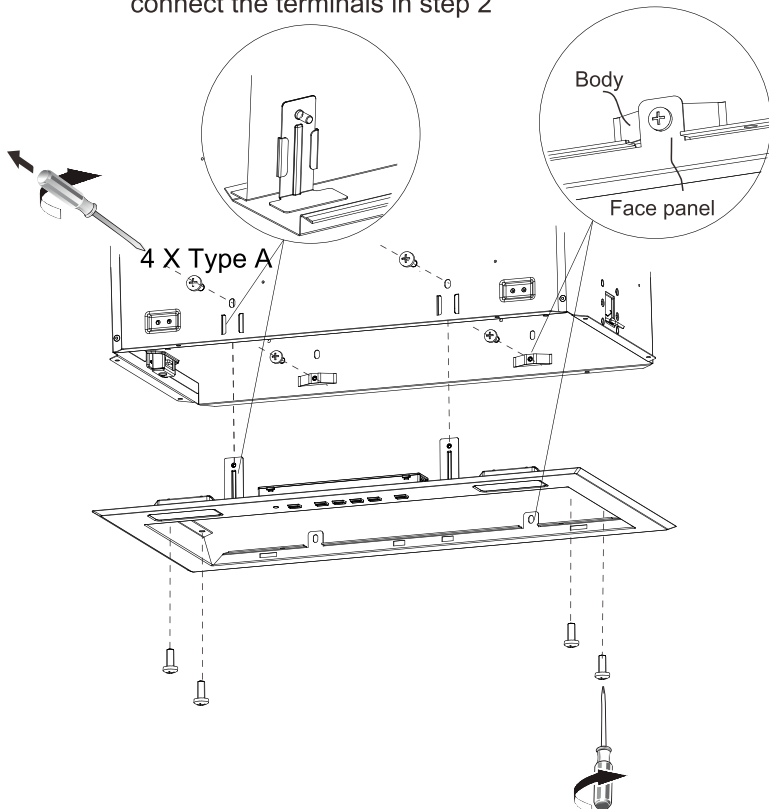

NOTE: Customer can adjust 4 screws (type A) to reduce the gap between hood body and cabinet

Fixing the vanes and flue pipe

Fix the vanes in accessories and a $\phi 150\text{mm}$, non-combustible, rigid flue pipe to the exhaust transition duct using cable ties or duct tape.

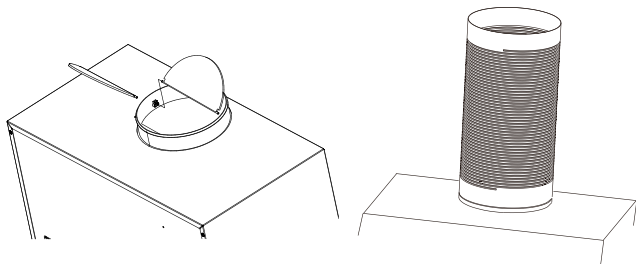


i IMPORTANT!


If using a semi-rigid duct, always install duct with the wire helix pulled taut to minimise pressure and noise

Ducting accessories

For best performance, a $\phi 150\text{mm}$ ducting is recommended

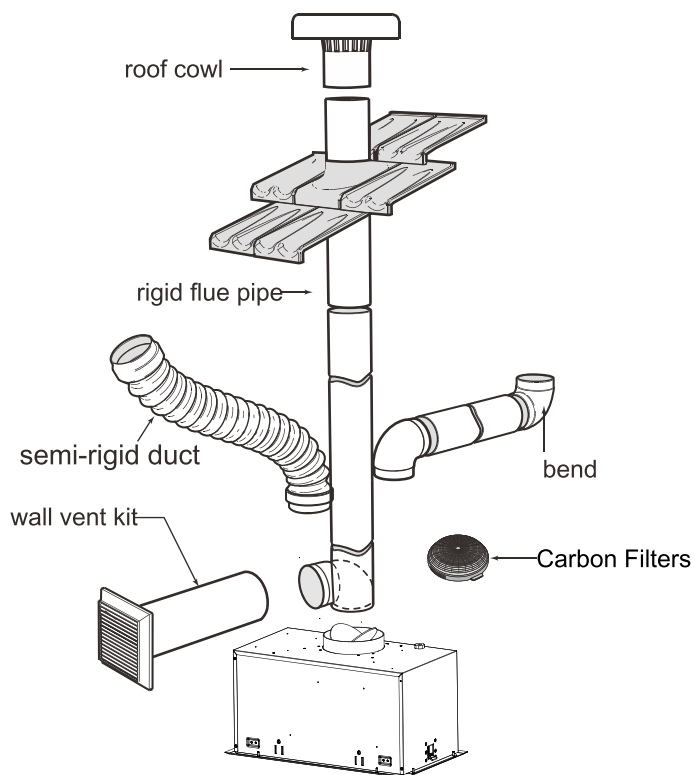

Ducted recirculating installation

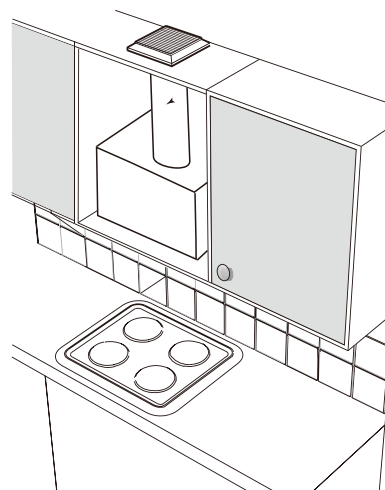

Accessories can be bought from your local appliance retailer, or in Australia at our online spare parts and accessories store: shop.electrolux.com.au or scan below QR code




Unilux_Venting-Ducting




Carbon Filter

Optional carbon filters diminish cooking odours in the recirculated air. Depending on the frequency of use and the type of cooking, the expected life of carbon filters is 3 months. Using carbon filters will reduce the airflow of the rangehood. Please install the carbon filters as following picture shown.

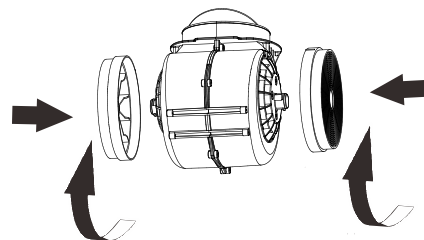

(Install the carbon filter)

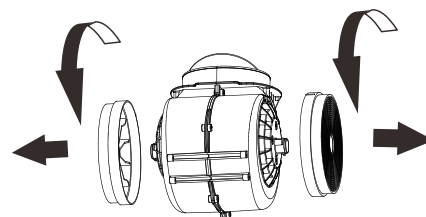


(Uninstall the carbon filter)

OPERATION & MAINTENANCE

Control operation

ERI512SE
ERI812SE

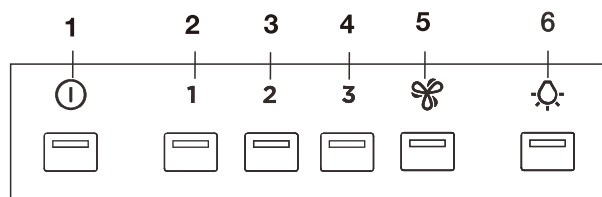

- | | |
|---------------|----------------|
| 1 On/off | 4 Fan speed 3 |
| 2 Fan speed 1 | 5 Power Boost |
| 3 Fan speed 2 | 6 Light on/off |

Turning on the fan

Option 1: Press the power button

Pressing the ① will turn on the hood at fan speed 2 or the last used fan speed (except for Power Boost speed) with the light on.

Option 2: Directly select fan speed

Turning off the fan

Pressing the ① will turn off the hood at any fan speed.

Fan speeds

Fan speed 1: While heating up food, cooking with covered pots, light frying, light boiling

Fan speed 2: While cooking with covered pots on multiple cooking zones or burners, frying, boiling

Fan speed 3: While boiling, frying big quantities of food without a lid, cooking on multiple cooking zones or burners, grilling, intensive frying, wok cooking

Power boost: While boiling, frying large quantities of food without a lid and of high humidity. Suitable fan speed for cooking that generates high amount of cooking fumes.

When operating at maximum speed, the hood will return to previous setting after 6 minutes.

Turning on/off the light

Press button: to turn on the light, press: once again to turn off the light

Delay off

To activate delay off function, press and hold selected fan speed for 2 seconds. The indicator of the selected fan speed will flash and the hood will run at that fan speed for the next 5 minutes before shutting down automatically

To deactivate the delay off function, press any of the fan speed buttons or press the ON/OFF button and the delay off function will be turned off

Activating/Deactivating the carbon filter saturation alarm

The activation of the carbon filter alarm is advised for recirculating installations, where by carbon filters are installed in the hood. To activate the alarm, hold the button for 5 seconds, upon which the indicator will flash twice. To deactivate the alarm, hold the button for 5 seconds, upon which the indicator will flash once.

Grease filter saturation alarm

When the indicator starts to flash, it signals that it is necessary to wash the grease filters. This alarm is triggered after the hood has been in operation for 15hrs. To dismiss & reset the alarm after cleaning the filters, press & hold the button for 2 seconds (Refer to Care and cleaning)

Carbon filter saturation alarm

When the indicator starts to flash, it signals that it is necessary to change the activated carbon filter. This alarm is triggered after the hood has been in operation for 180hrs. To dismiss & reset the alarm after cleaning, press & hold the button for 2 seconds

Hob2Hood


This is an advanced automatic function which connects the hob to a special hood. Both the hob and the hood have an infra-red signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan from the hob manually.

Hints and Tips for Hob2Hood function

When you operate the hob with Hob2Hood function:

- Protect the hood panel from direct sunlight.
- Do not spot halogen light on the hood panel.
- Do not cover the hob panel.
- Do not interrupt the signal between the hob and the hood (for example with a hand or a cookware handle).

When Hob2Hood is triggered by hob, the ⓘ indicator will be on. This indicates that the Hob2Hood is active

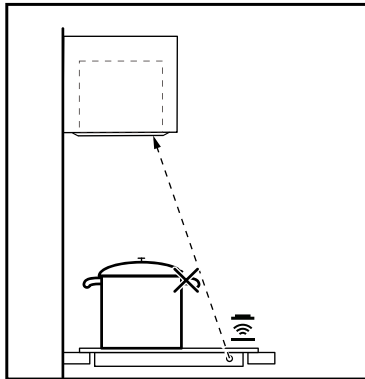

! IMPORTANT!

It may happen that other remote controlled appliances may block the signal. To avoid it do not operate the remote of the appliance and the hob at the same time.

Rangehoods with the Hob2Hood function

To find the full range of rangehoods which work with this function refer to our consumer website. The rangehoods that work with this function must have the symbol  or .

Maintenance



WARNING!

- Before maintenance or cleaning is carried out, the rangehood should be disconnected from the main power supply. Ensure that the rangehood is switched off at the wall socket and the plug removed.
- External surfaces are susceptible to scratches and abrasions, so please follow the cleaning instructions to ensure the best possible result is achieved without damage.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.

- Do not change the light bulb or carry out maintenance immediately after use as the rangehood may be hot. Allow it to cool first.
- Use both hands for removing and re-fitting the filter to avoid accidentally dropping the filter on to your cooktop or kitchen bench.
- Take care of sharp edges during installation, maintenance and cleaning. When the filters, light cover or fascia panel are removed, wear gloves for protection.

Care and cleaning

Cleaning steel surface

Clean stainless steel surfaces using non-abrasive cleaning products that are specifically for use on stainless steel. To ensure best results also use an even pressure and follow the grain of the stainless steel. Use of a soft cloth reduces the risk of scratching. If the cloth is wet ensure that a dry soft cloth is used to wipe down the surface again reducing the risk of any surface rust appearing.

Cleaning grease filters

The filter must be cleaned at least once a month using non aggressive detergents, either by hand or in the dishwasher, which must be set to a low temperature and a short cycle. The openings must be placed downwards to let the water run out of the filters. The cleaning agents will make the aluminium filter turn dull, this is normal.

Carbon filter

The carbon filter should only be used if you want to use the hood in the recirculation function.

This filter cannot be cleaned or re-used and as a general rule, the activated carbon filter should be changed as carbon filter requirement.

Condensation on rangehood surfaces

In some applications customers using induction cooktops may experience condensation forming on surfaces of the rangehood. Some conditions may contribute to the formation of condensation such as:


- Room temperature and humidity
- Installation height of rangehood above the cooktop
- Size and type of cookware used.
- How the induction cooktop is used
- Incorrect flue diameter (i.e. too small), flue length too long, too many bends in flue

Some methods to reduce the occurrence of condensation are;

1. Use the right speed according to the type of cooking;
 - a. Speed 1: light frying/boiling
 - b. Speed 2: frying/wok cooking/heavy boiling
 - c. Speed 3: grilling, intensive frying and wok cooking
2. Before you start cooking, switch on the range hood at minimum speed, to control moisture and remove cooking odour;
3. Increase the range hood speed only when the amount of vapor makes it necessary; (i.e, increase fan speed as more steam is generated)
4. Use boost speed only when it is strictly necessary.
5. Use pot lid when boiling to control moisture.
6. If the cooking zones of the induction cooker allows, choose the smallest pot practicable for cooking.
7. Keep range hood filter(s) clean to optimize grease and odour efficiency.

Replacing the light

1. Always switch off the electrical supply before carrying out any operation on the appliance.
2. Only a qualified and trained service technician can undertake the work of lamp replacement and servicing.

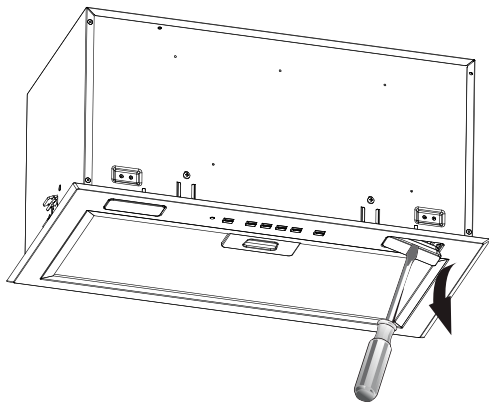


Suitable light for replacement

ERI512SE ERI812SE:

Specification of light: ROHS/DC12V/2.5W/100LM

(CTH06-101) DSS-2.5 W-S-70x28.2mm

Dimension of light

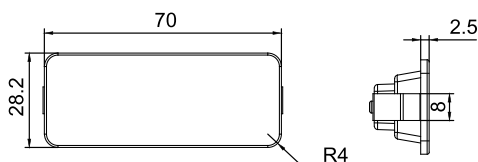



This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. In this warranty:

- 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
 - 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
 - 'ASC' means Electrolux's authorised serviced centres;
 - 'Electrolux' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
 - 'Warranty Period' means the period specified in clause 3 of this warranty;
 - 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
- 2. Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.
- 3. Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 36 months and in New Zealand for a period of 36 months, following the date of original purchase of the Appliance.
- 4. Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.
- 5. Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.
- 6. Proof of purchase** is required before you can make a claim under this warranty.
- 7. Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:
- light globes, batteries, filters or similar perishable parts;
 - parts and Appliances not supplied by Electrolux;
 - cosmetic damage which does not affect the operation of the Appliance;

- damage to the Appliance caused by:
 - negligence or accident;
 - misuse or abuse, including failure to properly maintain or service;
 - improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
 - normal wear and tear;
 - power surges, electrical storm damage or incorrect power supply;
 - incomplete or improper installation;
 - incorrect, improper or inappropriate operation;
 - insect or vermin infestation;
 - failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
- the Appliance is modified without authority from Electrolux in writing;
- the Appliance's serial number or warranty seal has been removed or defaced

8. How to claim under this warranty:

To enquire about claiming under this warranty, please follow these steps:

- carefully check the operating instructions, user manual and the terms of this warranty;
- have the model and serial number of the Appliance available;
- have the proof of purchase (e.g. an invoice) available;
- telephone the numbers shown below.

9. Australia:

For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

10. New Zealand:

For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

11. Confidentiality:

You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

FOR SERVICE or to find the address of your nearest authorised service centre in Australia PLEASE CALL 13 13 49 For the cost of a local call (Australia only)	AUSTRALIA ELECTROLUX HOME PRODUCTS 163 O'Riordan Street, Mascot NSW 2020 electrolux.com.au	FOR SPARE PARTS or to find the address of your nearest spare parts centre in Australia PLEASE 13 13 50 For the cost of a local call (Australia only)
FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand PLEASE CALL 0800 10 66 10 (New Zealand only)	NEW ZEALAND ELECTROLUX (NZ) Limited 3-5 Niall Burgess Road, Mount Wellington electrolux.co.nz	FOR SPARE PARTS or to find the address of your nearest spare parts centre in New Zealand PLEASE 0800 10 66 20 (New Zealand only)

ขอต้อนรับสู่อิเล็กทรอนิกส์

ขอขอบคุณที่เลือกซื้อเครื่องใช้ไฟฟ้าจากอิเล็กทรอนิกส์
ท่านได้เลือกผลิตภัณฑ์ที่มาพร้อมกับประสบการณ์ระดับมืออาชีพ
และนวัตกรรมที่สั่งสมมาเป็นเวลาหลายทศวรรษ ผลิตภัณฑ์ของเราได้รับการออกแบบให้มีความสร้างสรรค์และทันสมัยโดยคำนึงถึงท่านเป็นหลัก เพื่อให้เมื่อใดก็ตามที่ท่านใช้งานผลิตภัณฑ์ ท่านจะมั่นใจได้ว่าท่านจะได้ผลลัพธ์ที่ยอดเยี่ยมทุกครั้ง

ขอต้อนรับสู่อิเล็กทรอนิกส์

คำอธิบายสัญลักษณ์

สัญลักษณ์ที่ท่านจะเห็นในคู่มือนี้มีความหมายดังต่อไปนี้:

 คำเตือน!

สัญลักษณ์นี้แสดงข้อมูลที่เกี่ยวข้องกับความปลอดภัยของท่าน

 ข้อควรระวัง!

สัญลักษณ์นี้แสดงข้อมูลวิธีการหลีกเลี่ยงความเสียหายที่อาจเกิดขึ้นกับเครื่องดูดควัน

 สิ่งสำคัญ!

สัญลักษณ์นี้แสดงข้อแนะนำและข้อมูลเกี่ยวกับการใช้งานเครื่องดูดควัน

 สิ่งแวดล้อม!

สัญลักษณ์นี้แสดงข้อแนะนำและข้อมูลเกี่ยวกับการใช้งานเครื่องดูดควันอย่างประหยัดและเป็นมิตรต่อสิ่งแวดล้อม

เงื่อนไขในการใช้งาน

ผลิตภัณฑ์นี้มีวัตถุประสงค์เพื่อนำไปใช้ในครัวเรือนและการใช้งานที่มีลักษณะใกล้เคียงกัน เช่น:

- พื้นที่ห้องครัวสำหรับพนักงานในร้านค้า สำนักงาน และพื้นที่ทำงานอื่นๆ
- บ้านไร่
- โดยแขกผู้เข้าพักในโรงแรม ที่พักข้างทาง และสถานที่พักอาศัยอื่นๆ
- ที่พักที่มีที่นอนและอาหารเข้า
- งานจัดเลี้ยงและการใช้งานที่ไม่ใช่การค้าปลีก

- 13 คำแนะนำด้านความปลอดภัยที่สำคัญ
- 14 การติดตั้ง
- 18 การใช้งานและการซ่อมบำรุง

จดหมายเลขรุ่นและหมายเลขประจำเครื่องที่:

รุ่น:

หมายเลขประจำเครื่อง:

ข้อมูลสำคัญที่อาจส่งผลต่อการรับประกันจากผู้ผลิต

การปฏิบัติตามคำแนะนำการใช้งานในคู่มือเล่มนี้อย่างเคร่งครัดมีความสำคัญอย่างยิ่งต่อสุขภาพและความปลอดภัย การไม่ปฏิบัติตามคำแนะนำการใช้งานในคู่มือเล่มนี้อย่างเคร่งครัดอาจส่งผลให้เกิดการบาดเจ็บ เกิดความเสียหายต่อทรัพย์สิน และส่งผลกระทบต่อสิทธิของท่านในการแจ้งเคลมการรับประกันจากผู้ผลิตของอิเล็กทรอนิกส์ที่ให้มาพร้อมกับผลิตภัณฑ์ของท่าน ผลิตภัณฑ์ต่างๆ ต้องได้รับการติดตั้ง ใช้งาน และควบคุมการทำงานตามคำแนะนำในคู่มือเล่มนี้ ท่านอาจไม่สามารถแจ้งเคลมการรับประกันจากผู้ผลิตของอิเล็กทรอนิกส์ได้ หากความผิดพลาดนั้น เกิดจากการไม่ปฏิบัติตามคำแนะนำการใช้งานในคู่มือเล่มนี้อย่างเคร่งครัด

ข้อแนะนำเพื่อความปลอดภัย

โปรดอ่านคู่มือเล่มนี้ให้ละเอียดครบถ้วนก่อนติดตั้งและใช้งานเครื่องดูดควัน เพื่อป้องกันความเสียหายหรือเกิดอันตราย ผู้ผลิตจะไม่รับผิดชอบต่อความเสียหายที่เกิดจากการไม่ปฏิบัติตามคำแนะนำเหล่านี้ หากท่านต้องการความช่วยเหลือ ให้ติดต่อศูนย์บริการลูกค้า โปรดเก็บคู่มือเล่มนี้ไว้เพื่อใช้อ้างอิงในอนาคต และส่งต่อให้เจ้าของรายต่อไป



สิ่งแวดล้อม!

แกะแล้วทิ้งวัสดุที่ใช้เป็นบรรจุภัณฑ์ก่อนใช้งานอุปกรณ์เสริมนี้ วัสดุบรรจุภัณฑ์ส่วนใหญ่สามารถนำกลับมาใช้ใหม่ได้ โปรดกำจัดวัสดุเหล่านี้ผ่านศูนย์รีไซเคิลในท้องถิ่นของท่านหรือโดยการทิ้งบรรจุภัณฑ์ลงในถังขยะที่เหมาะสม



คำเตือน!

- อุปกรณ์นี้ไม่ได้มีไว้สำหรับการใช้งานโดยบุคคล (รวมทั้งเด็ก) ที่มีสมรรถภาพทางกายภาพ ทางประสาทสัมผัส หรือความสามารถทางจิตใจไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ ยกเว้น จะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้อุปกรณ์จากผู้ที่ได้รับผิดชอบความปลอดภัยบุคคลเหล่านี้ เด็กเล็กควรได้รับการดูแลเพื่อป้องกันไม่ให้เล่นกับผลิตภัณฑ์
- ตรวจสอบให้แน่ใจว่าได้ปิดสวิตช์เครื่องดูดควันก่อนทำการบำรุงรักษาเพื่อป้องกันการถูกไฟฟ้าช็อต
- ต้องถอดตัวกรองไขมันออกมาทำความสะอาดทุกๆ 4 สัปดาห์ (สูงสุด) เพื่อลดความเสี่ยงในการเกิดเพลิงไหม้
- ห้ามทำฟเลมเบ้ (การทำอาหารแบบใช้ไฟเผา) หรือทำให้เกิดเปลวไฟใต้เครื่องดูดควัน
- ไม่แนะนำให้ใช้เครื่องดูดควันรุ่นนี้สำหรับทำบาร์บีคิว
- ห้ามปล่อยควันจากเครื่องดูดควันเข้าไปในท่อควันหรือปล่องควันที่อาจมีสารที่เกิดจากการเผาไหม้จากแหล่งอื่นๆ
- ห้ามปล่อยควันเข้าไปในช่องว่างระหว่างกำแพง ยกเว้นในกรณีที่ยกเว้นนั้นได้รับการออกแบบมาเพื่อการนี้
- ในห้องต้องมีระบบถ่ายเทอากาศที่เพียงพอเมื่อใช้เครื่องดูดควัน พร้อมกับกับอุปกรณ์ที่ใช้แก๊ส หรือเชื้อเพลิงอื่นๆ
- ตั้งหม้อหรือกระบอกบนเตาแก๊สที่จุดไฟทุกครั้งเมื่อใช้งานเครื่องดูดควัน
- ปิดเตาแก๊สก่อนนำหม้อหรือกระบอกลงจากเตาทุกครั้ง
- เครื่องดูดควันและอุปกรณ์ดูดควันจากการปรุงอาหารอื่นๆ อาจส่งผลกระทบต่อการใช้งานอุปกรณ์ ที่มีการเผาไหม้ก๊าซ หรือเชื้อเพลิงอื่นๆ (รวมถึงการเผาไหม้ในห้องอื่นๆ) อย่างปลอดภัย เนื่องจากการไหลย้อนกลับของก๊าซเผาไหม้ เพราะก๊าซเหล่านี้จะทำให้เกิดภาวะพิษจากคาร์บอนมอนอกไซด์ได้ หลังการติดตั้งเครื่องดูดควันนี้หรือเครื่องกำจัดควันอื่นๆ ควรให้บุคลากรที่มีความสามารถดำเนินการทดสอบการใช้งานอุปกรณ์ปล่องควันเพื่อให้แน่ใจว่าก๊าซเผาไหม้จะไม่ไหลย้อนกลับ



ข้อควรระวัง

- ชิ้นส่วนต่างๆ จะร้อนขึ้นเมื่อใช้งานกับอุปกรณ์ประกอบอาหาร
- ต้องปฏิบัติตามข้อบังคับเกี่ยวกับการระบายอากาศ
- การไม่ติดตั้งสกรูหรือตัวยึดตามคำแนะนำเหล่านี้อาจทำให้เกิดอันตรายจากไฟฟ้าได้
- เพื่อหลีกเลี่ยงอันตรายจากความประมาทในการติดตั้งเทอร์มิสติกเกอร์ใหม่ ผลิตภัณฑ์นี้ต้องไม่ได้รับการจ่ายไฟผ่านอุปกรณ์สลับกระแสไฟฟ้าภายนอก เช่น เครื่องตั้งเวลา หรือต้องไม่เชื่อมต่อเข้ากับวงจรที่จะเปิดและปิดเองอยู่เสมอโดยการไฟฟ้า

การทำความสะอาด

- เช็ดตัวเครื่องดูดควันและปล่องควันด้วยฟองน้ำหรือผ้านุ่มชุบน้ำอุ่นผสมสบู่ แล้วเช็ดให้แห้งด้วยผ้านุ่ม สำหรับรุ่นที่เป็นสแตนเลสสตีล ให้ใช้ผลิตภัณฑ์ปกป้องพื้นผิวสแตนเลสสตีล ห้ามใช้น้ำยาคำทำความสะอาดเตาอบหรือผลิตภัณฑ์ที่มีฤทธิ์กัดกร่อนอื่นๆ
- หากไม่ทำความสะอาดตามคำแนะนำ อาจทำให้เกิดไฟไหม้ได้

การต่อระบบไฟฟ้า

- ตรวจสอบว่าแรงดันไฟฟ้าหลักตรงกับที่ระบุในฉลากแสดงข้อมูลด้านในเครื่องดูดควัน
- ตรวจสอบว่าการติดตั้งเป็นไปตามมาตรฐานของหน่วยงานควบคุมการใช้แก๊สและไฟฟ้าในท้องถิ่น
- หากสายไฟชำรุด โปรดให้ผู้ผลิต ตัวแทนฝ่ายบริการ หรือบุคคลที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟเพื่อหลีกเลี่ยงอันตรายจากไฟฟ้า


อุปกรณ์เสริม

- ใช้ท่อดูดควันแบบกลมขนาด 150 มม. เพื่อประสิทธิภาพที่ดีที่สุด
- เมื่อใช้ท่อดูดควันชนิดกึ่งแข็ง ให้ติดตั้งท่อโดยตั้งขดท่อให้ตึงเพื่อรักษาแรงดันภายในท่อ
- ท่อดูดควันต้องสั้นและตรง
- ท่อดูดควันต้องโค้งงอน้อยที่สุด
- ห้ามจำกัดขนาดของท่อดูดควัน
- การลดขนาดของท่อดูดควันจะทำให้ประสิทธิภาพการไหลเวียนของอากาศผ่านเครื่องดูดควันลดลง โปรดอ่านคำแนะนำอย่างละเอียดถี่ถ้วน การโทรติดต่อฝ่ายบริการเพื่อแก้ไขปัญหาอันเนื่องมาจากการติดตั้งที่ไม่ถูกต้องจะต้องเสียค่าบริการ

การติดตั้ง

การติดตั้งต่อมาตรฐาน

ขอแนะนำให้ติดตั้งตัวเครื่องห่างจากเตาไฟฟ้าอย่างน้อย 600 มม. และห่างจากเตาแก๊สอย่างน้อย 620 มม. และห่างจากเตาไม้เกิน 800 มม. ประสิทธิภาพของตัวเครื่องจะลดลงหากระยะห่างจากพื้นผิวสำหรับประกอบอาหารถึงเครื่องดูดควันมากกว่าระยะที่แนะนำ

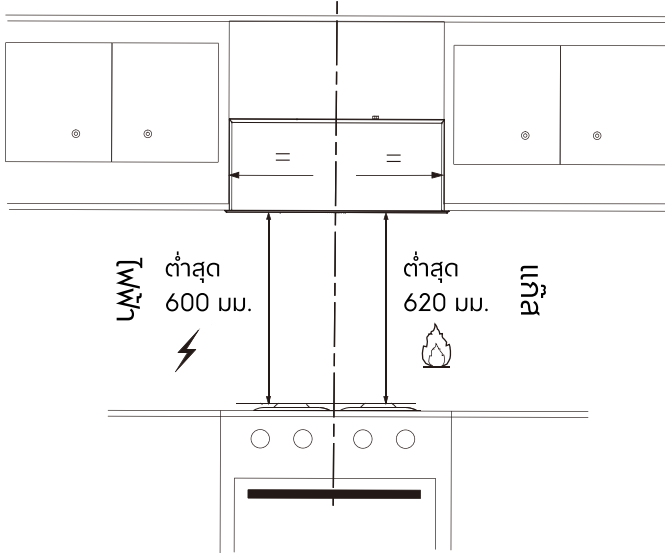


หมายเหตุ: เครื่องดูดควันและเตาได้รับการติดตั้งอย่างสมมาตรบริเวณกึ่งกลาง




คำเตือน!

หากคำแนะนำที่เกี่ยวข้องของผู้ผลิตเตาระบุให้เว้นระยะห่างจากเตามากขึ้น ก็ควรเว้นระยะห่างตามนั้น


ขนาดจุดยึดสำหรับ ERI512SE ERI812SE

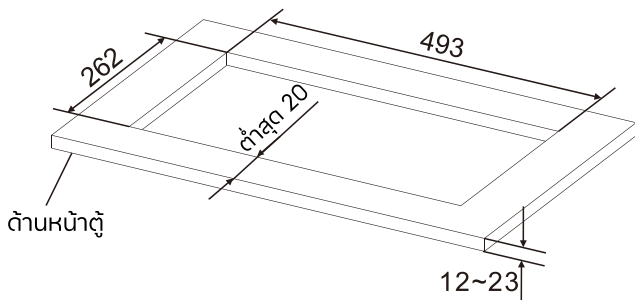


ขนาดผลิตภัณฑ์สำหรับรุ่น ERI512SE ERI812SE

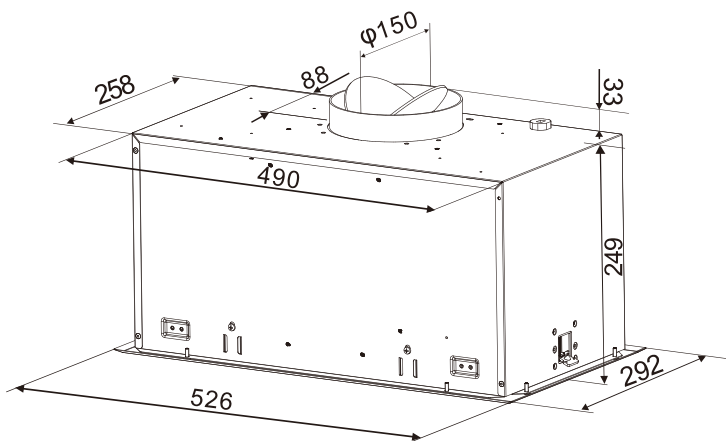

ขนาดจุดยึดสำหรับ ERI512SE ERI812SE

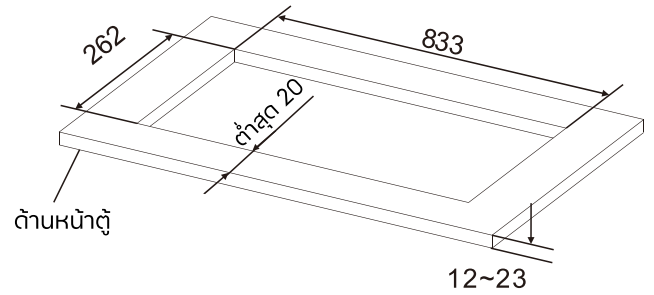


ขนาดผลิตภัณฑ์สำหรับรุ่น ERI512SE ERI812SE

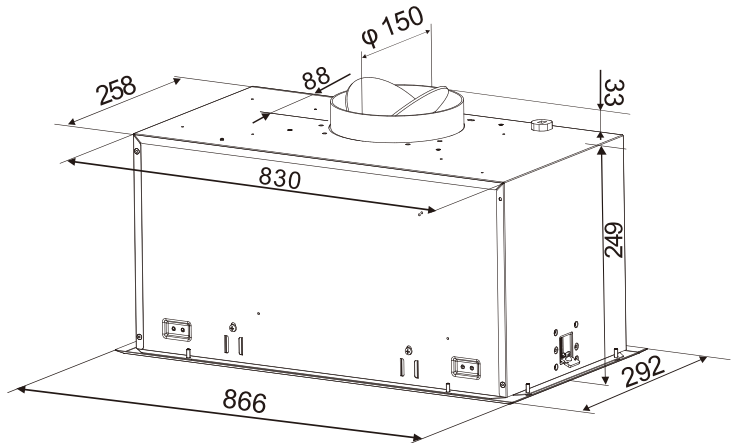

รายการที่แสดงด้านล่างนี้เป็นรายการที่มีให้

1. ตัวเครื่องดูดควัน
2. ใบพัด (2 ตัว)
3. สกรูยึด (ERI512SE: สกรูหัวกลมแบบ 8 ตัว ขนาด 3.5x25 มม., ERI812SE: สกรูหัวกลมแบบ 10 ตัว ขนาด 3.5x25 มม.)

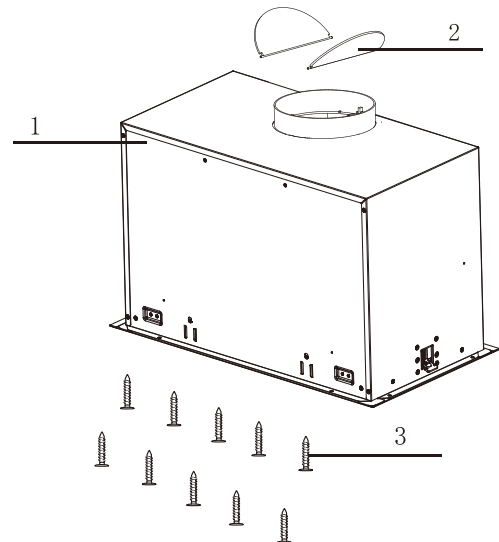

ชิ้นส่วนที่ต้องซื้อ


1. เทปอลูมิเนียมหรือสายรัดสายไฟสำหรับยึดท่อปล่องควัน
2. ท่อนิดแข็งหรือกิ่งแข็ง
3. แผ่นกรองคาร์บอน (ใช้กับผลิตภัณฑ์ที่ติดตั้งแบบระบบหมุนเวียนอากาศภายใน)

การตัดตู้



ตัดช่องในตู้ตามขนาดจุดยึดที่ระบุไว้

การยึดเครื่องดูดควัน

1. ถอดตัวกรองไขมันออก



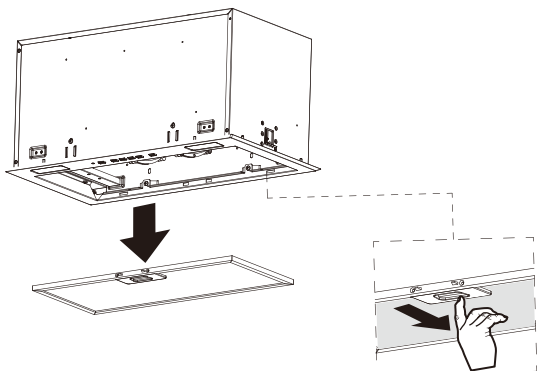


2. คลายสกรูแผงหน้าจากอกจากตัวเครื่องและคลายขั้วต่างๆ ของปุ่มและไฟส่องสว่างออก

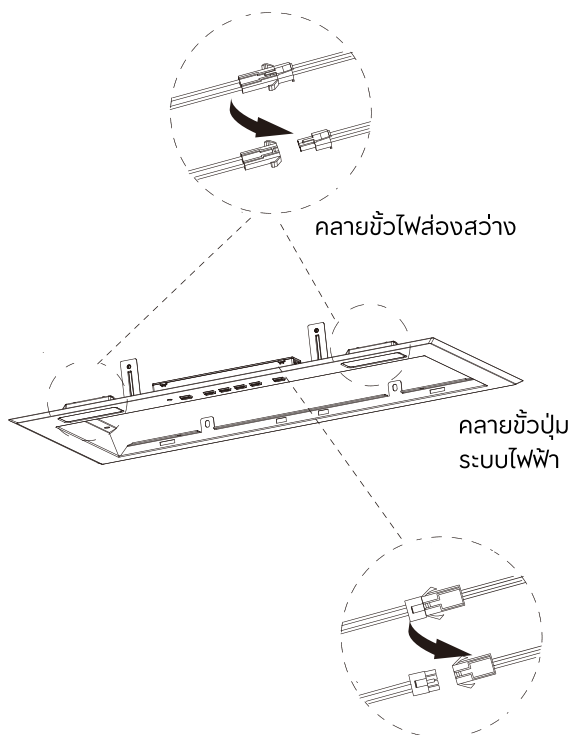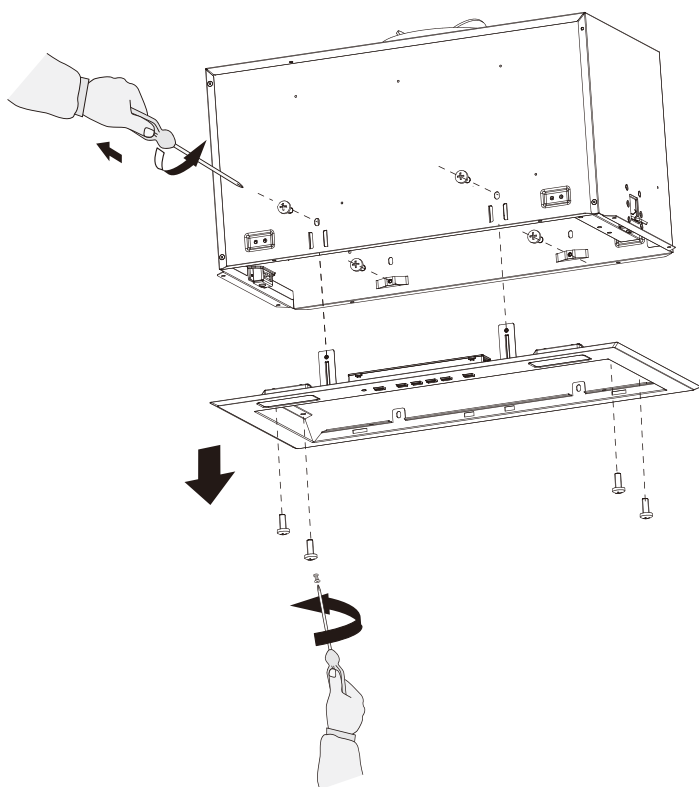


การติดตั้ง


3. ถัดเครื่องดูดควันเข้ากับตู้จากด้านล่างชั้นด้านบนจนกระทั่งได้ยินเสียง 'คลิก' ยึดตัวยึดโดยการหมุนสกรูตามเข็มนาฬิกา

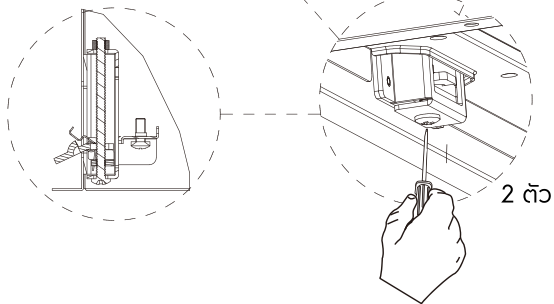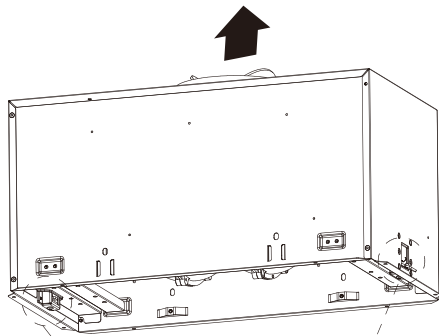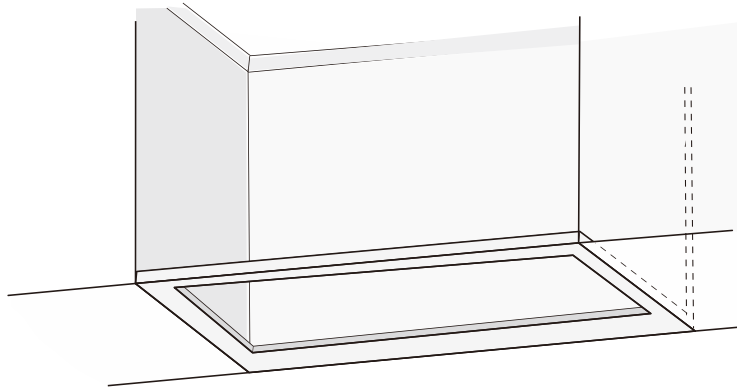

4. ยึดเครื่องดูดควันโดยใช้สกรูที่ให้มา

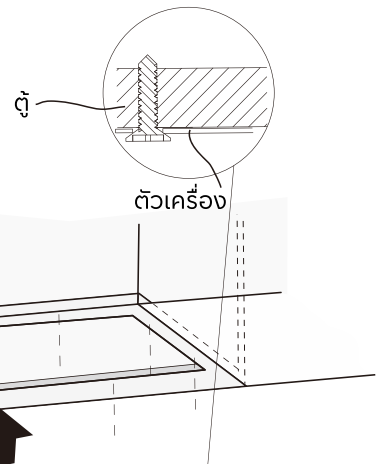


5. ยึดแผงหน้ากากเข้ากับตัวเครื่องโดยใช้สกรูและเชื่อมต่อขั้วในขั้นตอนที่ 2

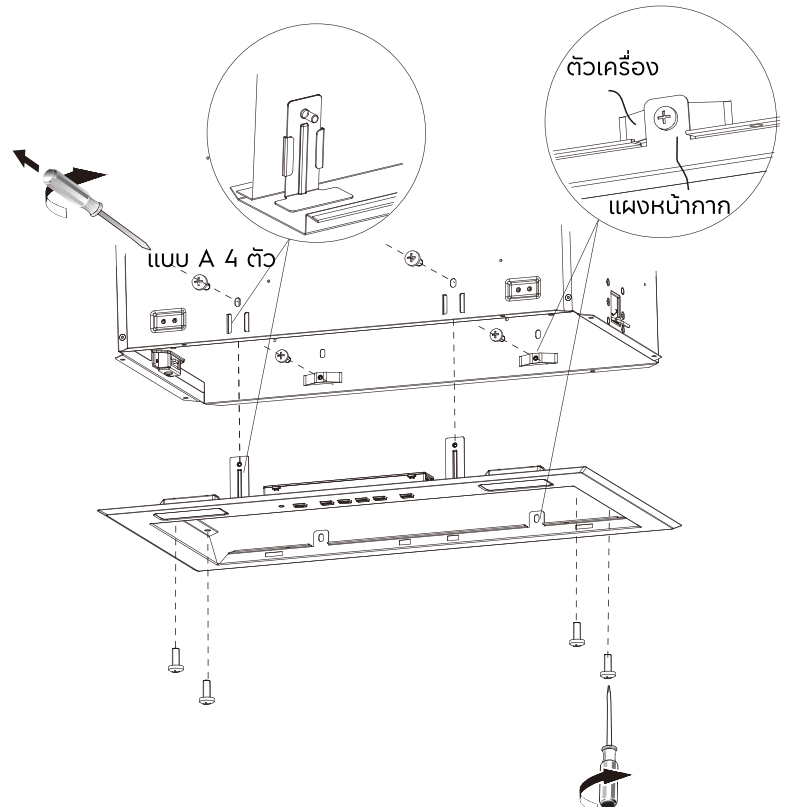

หมายเหตุ: ลูกค้าสามารถปรับสกรูทั้ง 4 ตัวได้ (แบบ A) เพื่อลดช่องว่างระหว่างตัวเครื่องดูดควันกับตู้

การยึดใบพัดและท่อปล่องควัน

ยึดใบพัดในอุปกรณ์เสริมและท่อปล่องควันชนิดแข็งแรงแบบไม่ติดไฟ ขนาดเส้นผ่านศูนย์กลาง 150 มม. เข้ากับท่อระบายไอเสียโดยใช้สายรัด สายไฟหรือเทปยึดท่อ

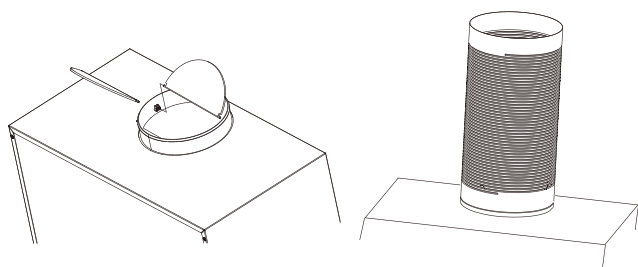


i สิ่งสำคัญ!


หากใช้ท่อดูดควันชนิดแข็งแรง ให้ติดตั้งท่อโดยดึงขดท่อให้ตึงเพื่อลดแรงดันและเสียงรบกวนภายในท่อ

อุปกรณ์ประกอบท่อ

เพื่อประสิทธิภาพที่ดีที่สุด แนะนำให้ใช้ท่อขนาดเส้นผ่านศูนย์กลาง 150 มม.

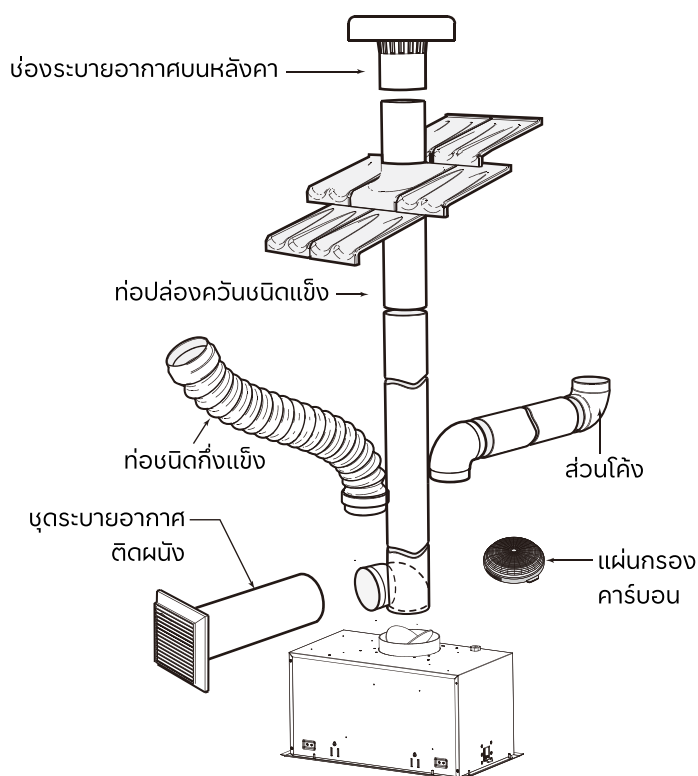


การติดตั้งระบบหมุนเวียนอากาศแบบท่อดูดควัน

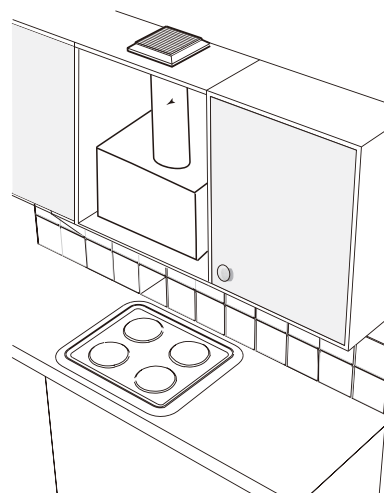


สามารถหาซื้อชุดอุปกรณ์จากร้านจำหน่ายอุปกรณ์ในพื้นที่ของท่าน สามารถหาซื้อได้ร้านจำหน่ายอะไหล่และ

แผ่นกรองคาร์บอนเป็นอุปกรณ์เสริมที่ช่วยลดกลิ่นจากการปรุงอาหาร ในอากาศที่หมุนเวียน อายุการใช้งานของแผ่นกรองคาร์บอนจะอยู่ที่ 3 เดือน ทั้งนี้ขึ้นอยู่กับความถี่ของการใช้งาน และประเภทของการปรุงอาหาร การใช้แผ่นกรองคาร์บอนจะลดการไหลเวียนของอากาศผ่านเครื่องดูดควัน กรุณาติดตั้งแผ่นกรองคาร์บอนตามภาพด้านล่าง

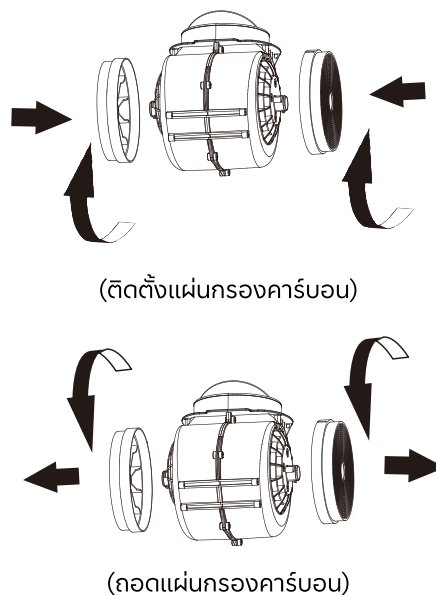

การใช้งานและการซ่อมบำรุง

การใช้งานปุ่มควบคุม
ERI512SE
ERI812SE

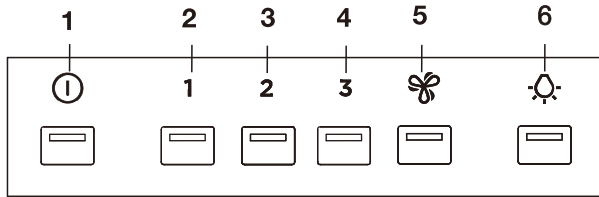

- | | |
|-------------------|------------------------------|
| 1 เปิด/ปิด | 4 ความเร็วพัดลม 3 |
| 2 ความเร็วพัดลม 1 | 5 เร่งความเร็ว (Power Boost) |
| 3 ความเร็วพัดลม 2 | 6 เปิด/ปิดไฟ |

การเปิดพัดลม

ตัวเลือก 1: กดปุ่มเปิด/ปิด

การกด ① จะเป็นการเปิดเครื่องดูดควันที่ความเร็วระดับ 2 หรือความเร็วพัดลมที่ใช้ล่าสุด (ยกเว้นตัวเลือกการเร่งความเร็ว (Power Boost)) พร้อมกับไฟติดสว่าง

ตัวเลือก 2: เลือกความเร็วพัดลมโดยตรง

ปิดพัดลม

การกด ① จะเป็นการปิดตัวเครื่องที่ความเร็วพัดลมทุกระดับ

ความเร็วพัดลม

ความเร็วพัดลม 1: ขณะอุ่นอาหาร, ประจุอาหารในหม้อที่มีฝาปิด, กอดไฟอ่อน, ต้มไฟอ่อน

ความเร็วพัดลม 2: ขณะปรุงอาหารในหม้อที่มีฝาปิด กอด ต้ม บนตำแหน่งวางภาชนะปรุงอาหารหรือเตาแก๊ส

ความเร็วพัดลม 3: ขณะต้ม กอดอาหารปริมาณมากโดยไม่มีฝาปิด ปรุงอาหารบนตำแหน่งวางภาชนะปรุงอาหารหรือเตาแก๊ส การย่าง กอดโดยใช้ไฟแรง ปรุงอาหารในภาชนะกันลื่น

เร่งความเร็ว (Power Boost): ขณะต้ม กอดอาหารปริมาณมาก โดยไม่มีฝาปิดฝาอาหารที่มีความชื้นสูง ความเร็วพัดลมที่เหมาะสมกับการปรุงอาหารที่ทำให้เกิดควันปริมาณมาก

เมื่อทำงานที่ความเร็วสูงสุด เครื่องดูดควันจะกลับไปการตั้งค่าก่อนหน้าหลังจากผ่านไป 6 นาที

การเปิด/ปิดพัดลม

กดปุ่ม ⑥ เพื่อเปิดไฟ, กด ⑥ อีกครั้งเพื่อปิดไฟ

หน่วงเวลาปิด

หากต้องการเปิดใช้งานฟังก์ชันหน่วงเวลาปิด ให้กดความเร็วพัดลมที่เลือกค้างไว้ 2 วินาที ไฟแสดงความเร็วพัดลมที่เลือกจะกะพริบ และเครื่องดูดควันจะทำงานที่ความเร็วพัดลมนั้นอีก 5 นาที ก่อนจะปิดการทำงานโดยอัตโนมัติ หากต้องการปิดใช้งานฟังก์ชันหน่วงเวลาปิด ให้กดปุ่มเลือกความเร็วพัดลมหรือกดปุ่มเปิด/ปิด ฟังก์ชันหน่วงเวลาปิดจะปิดการทำงาน

การเปิดใช้งาน/ปิดใช้งานสัญญาณแจ้งเตือนแผ่นกรองคาร์บอนหมดอายุ

แนะนำให้เปิดใช้งานสัญญาณแจ้งเตือนแผ่นกรองคาร์บอนสำหรับการติดตั้งเครื่องดูดควันระบบหมุนเวียนอากาศภายในซึ่งมีแผ่นกรองคาร์บอนติดตั้งอยู่ภายในเครื่องดูดควัน สำหรับการเปิดใช้งานสัญญาณแจ้งเตือน ให้กดปุ่ม ⑤ ค้างไว้ 5 วินาที ไฟแสดงจะกะพริบสองครั้ง สำหรับการปิดใช้งานสัญญาณแจ้งเตือน ให้กดปุ่ม ⑤ ค้างไว้ 5 วินาที ไฟแสดงจะกะพริบหนึ่งครั้ง

สัญญาณแจ้งเตือนตัวกรองน้ำมันอุดตัน

เมื่อไฟแสดง ④ เริ่มกะพริบ จะเป็นการส่งสัญญาณว่าจำเป็นต้องล้างตัวกรองน้ำมัน สัญญาณแจ้งเตือนนี้จะทำงานหลังจากที่เครื่องดูดควันทำงานเป็นเวลา 15 ชม. สำหรับการยกเลิกหรือรีเซ็ตสัญญาณแจ้งเตือนหลังทำความสะอาดตัวกรอง ให้กดปุ่ม ④ ค้างไว้ 2 วินาที (โปรดอ้างอิงจากการดูแลและทำความสะอาด)

สัญญาณแจ้งเตือนแผ่นกรองคาร์บอนหมดอายุ

เมื่อไฟแสดง ⑤ เริ่มกะพริบ จะเป็นการส่งสัญญาณว่าจำเป็นต้องเปลี่ยนแผ่นกรองคาร์บอน

สัญญาณแจ้งเตือนนี้จะทำงานหลังจากที่เครื่องดูดควันทำงานเป็นเวลา 180 ชม. สำหรับการยกเลิกหรือรีเซ็ตสัญญาณแจ้งเตือนหลังการทำความสะอาด ให้กดปุ่ม ⑤ ค้างไว้ 2 วินาที

Hob2Hood

เป็นฟังก์ชันอัตโนมัติซึ่งเชื่อมต่อกับเตาเข้ากับเครื่องดูดควันแบบพิเศษ ทั้งเตาและเครื่องดูดควันมีตัวรับสัญญาณอินฟราเรดความเร็วของพัดลมจะถูกกำหนดโดยอัตโนมัติตามการตั้งค่าโหมดการทำงานและอุณหภูมิของเครื่องครัวที่ร้อนที่สุดบนเตา นอกจากนี้ ท่านยังสามารถสั่งงานพัดลมด้วยตัวเองจากเตาโดยตรงได้


เคล็ดลับและข้อแนะนำสำหรับฟังก์ชัน Hob2Hood

เมื่อท่านใช้งานเตาที่มีฟังก์ชัน Hob2Hood:

- ปกป้องแผงควบคุมเครื่องดูดควันจากแสงแดดโดยตรง
- อย่าวางไฟฮาโลเจนบนแผงควบคุมเครื่องดูดควัน
- อย่าปิดคลุมแผงควบคุมเตา
- อย่าให้มีสิ่งกีดขวางสัญญาณระหว่างเตาและเครื่องดูดควัน (ตัวอย่างเช่น ด้วยมือหรือมือจับเครื่องครัว)

เมื่อใช้งาน Hob2Hood ผ่านเตา ไฟแสดง CD จะติดสว่าง ไฟแสดงนี้

❶ จะระบุว่าฟังก์ชัน Hob2Hood ทำงานอยู่

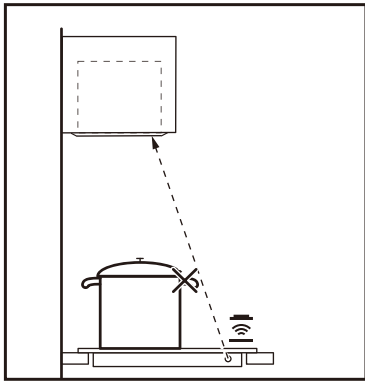

❶ สำคัญ!

อาจเกิดกรณีที่ผลิตภัณฑ์อื่นซึ่งควบคุมด้วยรีโมทปิดกั้นสัญญาณเพื่อป้องกันกรณีดังกล่าว ห้ามใช้งานรีโมทคอนโทรลของผลิตภัณฑ์และเตาร่วมกัน

เครื่องดูดควันที่มีฟังก์ชัน Hob2Hood

หากต้องการค้นหาเครื่องดูดควันทุกรุ่นที่มีการทำงานร่วมกับฟังก์ชันนี้ โปรดดูที่เว็บไซต์สำหรับลูกค้าของเรา เครื่องดูดควันที่ทำงานกับฟังก์ชันนี้ได้ต้องมีสัญลักษณ์  หรือ 

การบำรุงรักษา

❗ คำเตือน!

- ก่อนดำเนินการบำรุงรักษาหรือทำความสะอาด ต้องตัดการเชื่อมต่อเครื่องดูดควันจากแหล่งจ่ายไฟหลักก่อน ตรวจสอบให้แน่ใจว่าปิดการทำงานของเครื่องดูดควันและดึงปลั๊กออกจากเต้ารับแล้ว
- พื้นผิวภายนอกนั้นไวต่อรอยขีดข่วนและการกัดกร่อน ดังนั้น โปรดปฏิบัติตามคำแนะนำในการทำความสะอาดเพื่อให้ได้ผลลัพธ์ที่ดีที่สุดและไม่เกิดความเสียหายขึ้น
- หากไม่ทำความสะอาดตามคำแนะนำ อาจทำให้เกิดไฟไหม้ได้
- ห้ามเปลี่ยนหลอดไฟหรือดำเนินการบำรุงรักษาหลังการใช้งานในทันที เนื่องจากเครื่องดูดควัน อาจมีความร้อน โปรดรอให้เย็นลงก่อน
- ใช้ทั้งสองมือในการถอดและติดตั้งตัวกรองเพื่อป้องกันไม่ให้ตัวกรองตกลงบนเตาหรือเก้าอี้ในครัวของท่าน โดยไม่ต้องใจ
- ระวังระดับของมีคมในระหว่างติดตั้ง บำรุงรักษา และทำความสะอาด โปรดสวมถุงมือป้องกันเมื่อถอดตัวกรอง ฝาครอบไฟส่องสว่าง หรือแผงปิดด้านข้าง

การดูแลและทำความสะอาด

ทำความสะอาดพื้นผิวสเตนเลสสตีล

ทำความสะอาดพื้นผิวสเตนเลสโดยใช้ผลิตภัณฑ์ทำความสะอาดที่ไม่มีฤทธิ์กัดกร่อน ซึ่งเป็นผลิตภัณฑ์สำหรับใช้กับสเตนเลสสตีลโดยเฉพาะเพื่อผลลัพธ์ที่ดีที่สุด ให้ใช้แรงที่สม่ำเสมอและให้ทำความสะอาดไปตามแนวลายเส้นของสเตนเลส การใช้ผ้านุ่มจะช่วยลดการเกิดรอยขีดข่วนได้ หากเช็ดด้วยผ้าเปียก ให้ใช้ผ้าแห้งที่นุ่มเช็ดอีกครั้งเพื่อป้องกันไม่ให้เกิดสนิมบนพื้นผิว

การทำความสะอาดตัวกรองไขมัน

ต้องทำความสะอาดตัวกรองอย่างน้อยเดือนละครั้งโดยใช้น้ำยาทำความสะอาดที่ไม่กัดกร่อน สามารถล้างด้วยตัวเองหรือใช้เครื่องล้างจาน โดยตั้งค่าอุณหภูมิต่ำและรอบการล้างสั้นๆ ต้องวางด้านที่เป็นช่องลงด้านล่างเพื่อให้ น้ำไหลออกจากตัวกรอง ผลิตภัณฑ์ทำความสะอาดจะทำให้แผ่นกรองอลูมิเนียมหมองลง ซึ่งถือเป็นเรื่องปกติ

แผ่นกรองคาร์บอน

แผ่นกรองคาร์บอนจะใช้ในกรณีที่ต้องการใช้งานฟังก์ชันหมุนเวียนอากาศของเครื่องดูดควันเท่านั้น แผ่นกรองนี้ไม่สามารถล้างทำความสะอาดหรือนำกลับมาใช้ซ้ำได้ จึงต้องเปลี่ยนแผ่นกรองคาร์บอนใหม่ตามข้อกำหนด

การควบแน่นเป็นหยดน้ำบนพื้นผิวเครื่องดูดควัน

ในบางกรณี ลูกค้านักใช้เตาแม่เหล็กไฟฟ้าอาจพบว่าการควบแน่นบนพื้นผิวของเครื่องดูดควัน ในบางสภาวะ อาจเกิดการควบแน่นได้ เช่น:


- อุณหภูมิและความชื้นภายในห้อง
- ความสูงในการติดตั้งเครื่องดูดควันเหนือเตา
- ขนาดและประเภทของภาชนะปรุงอาหารที่ใช้
- ลักษณะการใช้งานเตาแม่เหล็กไฟฟ้า
- เส้นผ่านศูนย์กลางของปล่องควันไม่ถูกต้อง (เช่น เล็กเกินไป), ปล่องควันยาวเกินไป, ปล่องควันมีส่วนโค้งมากเกินไป

วิธีลดการควบแน่น ได้แก่

1. ใช้ความเร็วที่ถูกต้องตามประเภทการปรุงอาหาร
 - a. ความเร็ว 1: ทอด/ต้มโดยใช้ไฟอ่อน
 - b. ความเร็ว 2: ทอด/ปรุงอาหารในภาชนะก้นลึก/ต้มโดยใช้ไฟแรง
 - c. ความเร็ว 3: ย่าง, ทอดโดยใช้ไฟแรง และปรุงอาหารในภาชนะก้นลึก
2. ก่อนเริ่มปรุงอาหาร ให้เปิดเครื่องดูดควันไปที่ความเร็วต่ำสุด เพื่อควบคุมความชื้นและกำจัดกลิ่นจากการปรุงอาหาร
3. เพิ่มความเร็วของเครื่องดูดควันในกรณีที่จำเป็นเท่านั้นเมื่อมีปริมาณไอน้ำมาก (เช่น เพิ่มความเร็วพัดลมเมื่อเกิดไอน้ำมากขึ้น)
4. ใช้ฟังก์ชันเพิ่มความเร็วในกรณีที่จำเป็นเท่านั้น
5. ใช้ผ้ามือเมื่อสัมผัสอาหารเพื่อควบคุมความชื้น
6. หากไม่เก็บขอบเขตตำแหน่งวางภาชนะปรุงอาหารของเตาแม่เหล็กไฟฟ้า ให้เลือกหม้อที่เล็กที่สุด ที่สามารถปรุงอาหารได้
7. ดูแลตัวกรองของเครื่องดูดควันให้สะอาดอยู่เสมอเพื่อเพิ่มประสิทธิภาพในการกำจัดไขมันและกลิ่น

การเปลี่ยนไฟส่องสว่าง

1. ปิดสวิตช์ไฟทุกครั้งก่อนดำเนินการใดๆ กับเครื่องดูดควัน
2. ให้ช่างซ่อมที่ผ่านการฝึกอบรมและมีคุณวุฒิทำงานเปลี่ยนหลอดไฟและซ่อมบำรุงได้เท่านั้น

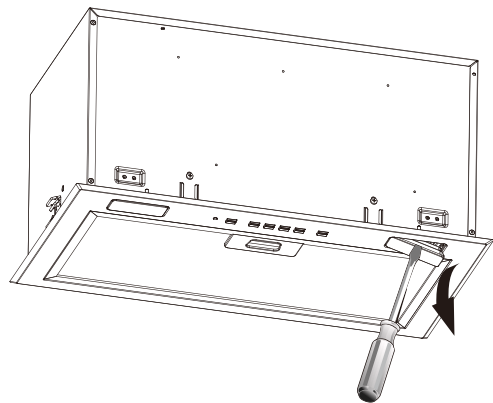


ไฟส่องสว่างที่เหมาะสมสำหรับการเปลี่ยน

ERI512SE ERI812SE:

ข้อกำหนดของไฟส่องสว่าง: ROHS/DC12V/2.5W/100LM
(CTH06-101) DSS-2.5 W-S-70x28.2 มม.

ขนาดของไฟส่องสว่าง

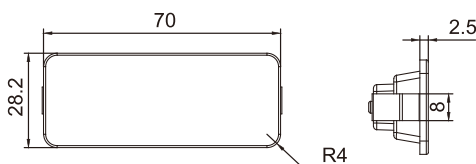

ศูนย์บริการลูกค้า

Thailand Consumer Care Tel: (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel: (+66 2) 7259100 Office Fax: (+66 2) 7259299 Email : customercarethai@electrolux.com	Singapore Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pie Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713 Email : customer-care.sin@electrolux.com
Indonesia Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, GambirJakarta Pusat 10160 Email: customercare@electrolux.co.id SMS & WA: 0812.8088.8863	Philippines Consumer Care Center Toll Free: 1-800-10-845-CARE(2273) Consumer Care Hotline:(+63 2)845-CARE(2273) Electrolux Philippines,Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West,Taguig, Philippines 1634 Trunkline:+63 2 737-4757 Website:www.electrolux.com.ph Email:wecare@electrolux.com
Vietnam Consumer Care Center Toll Free 1800-58-88-99 Tel: (+84 28) 39105465 Electrolux Vietnam Ltd. Unit 1&2, 10F Sofic Tower, #10 Mai Chi Tho Street, Thu Thiem Ward, Thu Duc City, Ho Chi Minh City, Vietnam	Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13,46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 5999 Office Fax: (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15122, Taman Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax: (+60 3) 5524 2521 Email : malaysia.customercare@electrolux.com
HONG KONG SERVICE HOTLINE: (+852) 3193 9888 DCH ELECTRICALAPPLIANCES SERVICE CENTRE 4IF, DCH BUILDING, 20 KAI CHEUNG ROAD, KOWLOON BAY, HONG KONG EMAIL: customercare@dch.com.hk WEBSITE: www.electrolux.com.hk	

